



# WeConfig 2.4

User Guide

# Table of Contents

|                                                                                    |     |
|------------------------------------------------------------------------------------|-----|
| 1. WeConfig User Guide                                                             | 5   |
| 1.1. Getting Started                                                               | 6   |
| 2. Requirements                                                                    | 8   |
| 2.1. Installation                                                                  | 8   |
| 2.2. Device Requirements                                                           | 12  |
| 3. Terminology                                                                     | 13  |
| 3.1. CIDR Notation                                                                 | 13  |
| 3.2. Project Gold File                                                             | 14  |
| 3.3. Link Local Address                                                            | 15  |
| 3.4. Projects                                                                      | 16  |
| 3.5. Support Files                                                                 | 18  |
| 3.6. Tasks                                                                         | 19  |
| 4. Interface                                                                       | 20  |
| 4.1. Title Bar                                                                     | 21  |
| 4.2. Document Panel                                                                | 22  |
| 4.3. Context Menu                                                                  | 25  |
| 4.4. Navigation                                                                    | 29  |
| 4.4.1. Device discovery                                                            | 31  |
| Network Visualization                                                              |     |
| 4.4.2. Physical Network                                                            | 36  |
| 4.4.3. Devices                                                                     | 45  |
| Configuration                                                                      |     |
| 4.4.4. Basic Setup                                                                 | 48  |
| 4.4.5. Accounts                                                                    | 49  |
| 4.4.6. Virtual Local Area Networks (VLAN)                                          | 52  |
| 4.4.7. Network Address-Name Resolution                                             | 59  |
| Configuration ▸ Layer 2 Redundancy                                                 |     |
| 4.4.8. Fast Reconfiguring Network Topology (FRNT)                                  | 60  |
| 4.4.9. High-available Seamless Redundancy / Parallel Redundancy Protocol (HSR/PRP) | 62  |
| 4.4.10. Media Redundancy Protocol (MRP)                                            | 68  |
| 4.4.11. Rapid Spanning Tree Protocol (RSTP)                                        | 70  |
| 4.4.12. Ring Coupling (RiCo)                                                       | 71  |
| 4.4.13. Firewall                                                                   | 74  |
| Configuration ▸ System                                                             |     |
| 4.4.14. Simple network Management Protocol (SNMP)                                  | 102 |
| 4.4.15. CPU                                                                        | 109 |
| 4.4.16. Date/Time                                                                  | 110 |
| 4.4.17. Logging                                                                    | 111 |
| Configuration ▸ Routing                                                            |     |
| 4.4.18. OSPF                                                                       | 120 |
| 4.4.19. RIP                                                                        | 123 |
| 4.4.20. Static routing                                                             | 124 |
| 4.4.21. Virtual Router Redundancy Protocol (VRRP)                                  | 126 |
| Configuration ▸ Ports                                                              |     |

|                                        |     |
|----------------------------------------|-----|
| 4.4.22. Ethernet                       | 131 |
| 4.4.23. Port Monitoring                | 133 |
| 4.4.24. SHDSL                          | 135 |
| 4.4.25. 802.1X                         | 137 |
| 4.4.26. Licensing                      | 138 |
| 4.4.27. Alarm                          | 140 |
| 4.4.28. WeConnect                      | 151 |
| 4.4.29. Aggregates                     | 155 |
| 4.4.30. Access Point                   | 157 |
| Per-Device Views                       |     |
| 4.4.31. Route Table                    | 159 |
| 4.4.32. Properties                     | 160 |
| 4.4.33. Attachments                    | 162 |
| 4.4.34. Configuration Files            | 163 |
| 4.4.35. Communication Summary          | 164 |
| 4.4.36. Cellular                       | 165 |
| Maintenance                            |     |
| 4.4.37. Backup                         | 168 |
| 4.4.38. Firmware Upgrade               | 170 |
| 4.4.39. Attachments                    | 177 |
| 4.4.40. Device Access Settings         | 178 |
| 4.4.41. Clone or Replace Device        | 183 |
| 4.4.42. CLI Scripts                    | 187 |
| Diagnostics                            |     |
| 4.4.43. Diagnostics                    | 189 |
| 4.4.44. Syslog                         | 191 |
| 4.4.45. Traps                          | 192 |
| Support                                |     |
| 4.4.46. General Log                    | 193 |
| 4.4.47. Issues                         | 194 |
| 4.4.48. Reports                        | 195 |
| 4.4.49. Security                       | 197 |
| 4.4.49.1. Management Hardening         | 197 |
| 4.4.49.2. Port Protection              | 200 |
| 4.4.49.3. Routing Hardening            | 202 |
| Tools                                  |     |
| 4.4.50. Traceroute                     | 204 |
| 4.4.51. Subnet Calculator              | 205 |
| 4.4.52. SHDSL Reach Calculator         | 206 |
| 4.4.53. SHA256 Hash Calculator         | 207 |
| 4.4.54. Ping                           | 208 |
| 4.4.55. Maximum MTU Discovery          | 210 |
| 4.4.56. Project Template               | 211 |
| 4.4.56.1. Import Devices from CSV File | 211 |
| 4.4.56.2. Export from Current Project  | 213 |
| 4.4.56.3. Build Network from Template  | 215 |

|                               |     |
|-------------------------------|-----|
| 4.4.57. Refresh               | 220 |
| 4.5. File Menu                | 221 |
| 4.5.1. About                  | 222 |
| 4.5.2. Application Settings   | 223 |
| 4.5.3. Portable Installations | 229 |
| 4.6. Components               | 230 |
| 4.6.1. CIDR Address box       | 230 |
| 4.6.2. IPv4 Address box       | 231 |
| 4.6.3. Log box                | 232 |
| 4.7. Notifications            | 233 |
| 5. Algorithms                 | 234 |
| 5.1. Recursive Discovery      | 234 |
| 5.2. Network Order            | 238 |

# 1. WeConfig User Guide

## About

WeConfig is a powerful and user-friendly network configuration tool designed to simplify the management and deployment of industrial networks. Developed by Westermo, WeConfig provides a comprehensive suite of features that enable users to efficiently configure, monitor, and maintain their network infrastructure.

### Key Features

- **Network Discovery:** Quickly identify and visualize all devices within your network.
- **Centralized Management:** Manage all network devices from a single interface, reducing the complexity of network administration.
- **Configuration Templates:** Apply consistent configurations across multiple devices with ease.
- **Diagnostic Monitoring:** Monitor network performance to identify and remediate network issues.
- **Firmware Management:** Easily update firmware on multiple devices simultaneously.

WeConfig is designed to support a wide range of Westermo devices, ensuring seamless integration and optimal performance. Whether you are managing a small network or a large-scale industrial system, WeConfig provides the tools you need to keep your network running smoothly and efficiently.

## Legal Information

The contents of this document are provided “as is”. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy and reliability or contents of this document. Westermo reserves the right to revise this document or withdraw it at any time without prior notice.

Under no circumstances shall Westermo be responsible for any loss of data or income or any special, incidental, and consequential or indirect damages howsoever caused. More information about Westermo can be found at <https://www.westermo.com><sup>1</sup>

---

<sup>1</sup><https://www.westermo.com>

## 1.1. Getting Started

In order to get started using WeConfig, you will need to install the application. This is done by downloading the installer ([Autoupdating<sup>1</sup>](#) / [MSI<sup>2</sup>](#)) and running it.

Once the program is up and running, make sure that the machine running WeConfig is connected to the devices you want to configure. This can be done directly via cable or over a VPN connection, but WeConfig is best utilized over direct connections to the devices, in order to have a better understanding of the network topology at play.

Now, you can start using WeConfig. The following sections will guide you through the interface and its components, as well as how to use them. As a recommended start, it is suggested you visit the [Topology](#) and [Devices](#) panels, as they are the main views of WeConfig and will give you a good overview of the network you are working with.

Secondly, consult the [device discovery](#) section, as it will help you discover the devices in your network and add them to WeConfig's knowledge of the network, as well as allow you to align your own IP Address to match what the devices may need for communication.

How to: Set basic properties on a factory-defaulted WeOS 5 device.

### Prerequisites

- This guide assumes you have administrator rights on your Windows PC
- The PC has an Ethernet NIC configured to acquire its IP address via DHCP
- You have the latest version of WeConfig installed
- The WeOS 5 device is factory-defaulted and has not been configured yet
- The WeOS 5 device is connected to the PC via an Ethernet cable

### Step 1

Open WeConfig and make sure the device is connected to the PC via an Ethernet cable. The device should be powered on and in factory-default state.

### Step 2

Navigate to the [device discovery](#) task and select the NIC that the device is connected to and press "Start Scan", wait for the operation to finish. This should discover a device with a [Link-local](#) IP address and identify it as a WeOS 5 device.

#### Info

Before leaving this task, consider editing the NIC and adding an IP address that exists within the address-space of the IP address you will be changing the devices IP address to, such as 192.168.123.121. This will allow you to communicate with the device after the IP address change.

This is not a requirement, but it is a good practice to ensure that you can communicate with the device after the IP address change.

<sup>1</sup><https://weconfigservices.westermo.com/api/setup>

<sup>2</sup><https://weconfigservices.westermo.com/api/msi>

### Step 3

Navigate to the Topology panel and click to select the device. There should be a visible link between the device and the PC in this view.

### Step 4

Navigate to the Basic Setup task. Therein you will find the device selected, fill in a new IP Address, such as 192 . 168 . 123 . 1, and a new netmask, such as 255 . 255 . 255 . 0. Optionally you may also fill out a hostname, such as myWeOSDevice, a location, such as myTestBench, and a new gateway, such as 192 . 168 . 1 . 254. Press apply and wait for the operation to finish. This will change the IP address of the device to the new IP address and netmask, as well as set the hostname, location and gateway if they were filled out.

### Step 5

Right click the device in the Topology panel and click "Refresh Selected". This will trigger a rescan of the device. If you have set a matching IP on your machine's NIC, you should still be able to communicate with the device. If you have not, WeConfig should fail to communicate with the device, and indicate such in the Device List panel. If this is the case, you will need to set a matching IP address on your machine's NIC in order to communicate with the device again.

## 2. Requirements

### 2.1. Installation

#### Prerequisites

##### Hardware & Software requirements

| Type             | Minimum                                                       | Recommended                                                                                            |
|------------------|---------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|
| Processor        | 64-bit (x86-64) compatible                                    | > 2.0 GHz, > 4 Cores                                                                                   |
| Memory           | 2 GB RAM                                                      | 16 GB RAM                                                                                              |
| Graphics         | DirectX 9                                                     | DirectX 12                                                                                             |
| Display          | 1920x1080 screen resolution                                   | 2560x1440 screen resolution                                                                            |
| Operating System | Windows 10 version 1607 or .ApplImage compatible Linux distro | Windows 11 version 24H2 or later or Ubuntu 24.04 or higher or other .ApplImage compatible Linux distro |

#### Network Packet Capture

- One of:
  - WinPcap: Version 4.1.3 or later.
  - Npcap: Version 1.6 or later.



#### Note

If you decide to use Npcap, ensure you have a valid license. Licensing details are available at [Npcap Licensing](#)<sup>1</sup>.



#### Note

WeConfig may offer to install WinPcap if it detects the need.

If so, a notification will appear in the user interface with a link to install WinPcap.



#### Info

If neither WinPcap nor Npcap is installed, WeConfig will operate in a reduced mode with limited functionality.



#### Warning

WeConfig may not detect the connection between the computer and the network if the Network Interface Card (NIC) discards LLDP frames. This issue is common with low-end USB NICs.

---

<sup>1</sup><https://npcap.com>

## Installation Packages

### Standard Windows Installation Package

- Executable Name: [WeConfigSetup.exe](#)<sup>1</sup>
- Usage: Recommended for general use.
- Installation Process:
  - Installs WeConfig in the user's directories.
  - WeConfig, once installed, will be able to automatically update to newer versions if configured to do so, see [Application Settings](#)
  - Administrative access rights are not required for this installation.

### MSI Windows Installation Package

- Executable Name: [WeConfig.Msi.\(Version\).msi](#)<sup>2</sup>
- Usage: Recommended for strict IT environments where automatic software updates are prohibited.
- Installation Process:
  - Installs WeConfig into a desired location, typically C:\Program Files\ or similar.
  - WeConfig, once installed, will not be able to automatically update itself, but will attempt to notify the user when an update becomes available.
  - Administrative access rights are required for this installation

### Linux AppImage Installation Package

- Executable Name: [WeConfig.AppImage](#)<sup>3</sup>
- Usage: Running WeConfig on Linux
- Installation Process:
  - Download the AppImage file.
  - Make the file executable using `chmod +x WeConfig.AppImage`.
  - Run the AppImage to start WeConfig.



#### Note

On Linux, the AppImage allows running WeConfig without requiring installation privileges. However, unless ran with elevated permissions (e.g., using `sudo -E`), certain operations may be restricted:

- IpConfig based scanning will not work
- WeConfig will be unable to receive SNMP Traps or Syslog messages
- Ping/Traceroute/MTU tools will not work.

### Portable Installation Package

- Executable Name: Irrelevant, generated as a full directory with all relevant files
- Usage: Recommended for airgapped systems.
- Installation Process:
  - Generated from an existing installation of WeConfig
  - Will not attempt to check for updates

---

<sup>1</sup><https://weconfigservices.westermo.com/api/setup>

<sup>2</sup><https://weconfigservices.westermo.com/api/msi>

<sup>3</sup><https://weconfigservices.westermo.com/api/appimage>

- Any shortcuts and similar handling must be set up manually.
- See [Portable Installations](#) for more information.



#### Can I have multiple versions of WeConfig installed?

Yes, you can have multiple versions of WeConfig installed on the same machine so long as they arise from different installation packages: Standard, MSI, or Portable.

Each of these packages will operate completely independently, so can be used side-by-side for different versions.

### Usage requirements

Certain functionality in WeConfig requires an elevated level of access. These requirements exist due to the functional requirements of WeConfig as a network configuration manager, which implies a certain level of desired access, as detail below.

#### Requirement 1: Manipulation of network adapter addressing

In order to function properly against local network devices that lack a DHCP server, which is often the case in offline networks, WeConfig needs to be able to change the the IP address of the network adapter which is being used to connect to these devices. Alternatively, the user running the program can, by themselves, alter their IP address on said adapter, but doing so requires a similar level of permission be granted to the user.

#### Requirement 2: Creating firewall rules

In order to receive certain information from the network, WeConfig needs certain ports to be open. WeConfig comes with the built-in ability to make these firewall adjustments at the users behest and with their confirmation, but needs authorization to actually execute these changes. Alternatively, if the required changes are deployed to the managing device ahead of time, this functionality becomes unnecessary. The rules that WeConfig may attempt to create are as follows:

| Rule name          | Protocol | Port | Profiles                  |
|--------------------|----------|------|---------------------------|
| Snmp Trap WeConfig | UDP      | 162  | Domain & Public & Private |
| IpConfig WeConfig  | UDP      | 5098 | Domain & Public & Private |
| Syslog WeConfig    | UDP      | 514  | Domain & Public & Private |
| Mdns WeConfig      | UDP      | 5353 | Domain & Public & Private |

### Online activity

Some functionality of WeConfig relies on occasional internet activity in order to retrieve additional information and data.

The following functionality requires internet connectivity to function properly:

| Functionality      | Explanation                                                               | Offline fallback                       |
|--------------------|---------------------------------------------------------------------------|----------------------------------------|
| Device definitions | Model names, icons and port maps, used to render the network topology map | Keeps any previously retrieved entries |

| Functionality     | Explanation                                                                        | Offline fallback                         |
|-------------------|------------------------------------------------------------------------------------|------------------------------------------|
| MAC OUIs          | Organizational Unique Identifier database, used to help identify unknown devices   | Keeps any previously retrieved entries   |
| Firmware Rules    | Rules specifying in what order firmwares must be installed                         | Keeps any previously retrieved entries   |
| Licenses          | Limits or enables extended functionality in WeConfig                               | Cached license will be kept until expiry |
| Firmwares         | Download specific versions of firmware for devices                                 | Previously downloaded firmware is kept   |
| Application Usage | Gathers usage and performance statistics, see <a href="#">Statistics Gathering</a> | Do not send                              |

### Statistics Gathering

WeConfig will by default send usage statistics to a centralized database over the Internet. The information sent does not contain any identifying information, nor any sensitive network information. It is used to measure performance, how the application is used, and unanticipated problems.

Information will be sent unless the user opts out. Every time WeConfig starts, WeConfig will ask the user whether they consent to this or not until a choice is made. It is possible at any time to revert any choice in the [Application Settings](#).

## 2.2. Device Requirements

WeConfig is designed for Westermo devices with WeOS version 4.28 or later, WeOS version 5.15 or later, and devices in the Ibex, MRD, and Merlin families. WeConfig will however find and try to display some information about other types of devices too. Earlier WeOS versions might have functional features, but they are however not supported.

For ideal compatibility with WeConfig, devices should ensure that the following services are configured, if available:

| Functionality | Description                                      | Reasoning                                                                                                                                                                                                                                                                                    |
|---------------|--------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| IPConfig      | A Westermo specific protocol available on WeOS 4 | Used for discovery of WeOS 4 devices, as well as configuration of factory defaulted WeOS 4 devices prior to WeOS 4.33                                                                                                                                                                        |
| HTTPS         | Standard web protocol                            | WeConfig must be provided with relevant credentials via the <a href="#">Device Access interface</a> . Used for backup, restore, firmware, and bootloader upgrade.                                                                                                                            |
| SNMP          | Simple Network Management Protocol               | WeConfig must be provided with relevant credentials via the <a href="#">Device Access interface</a> . For full trap-reception functionality, MS Windows Trap Host server needs to be disabled. WeConfig has its own built-in trap host server. Used for diagnostics and discovery, primarily |
| LLDP          | Link Local Discovery Protocol                    | Used by WeConfig to establish the network topology map, as well as a means of recursive discovery                                                                                                                                                                                            |
| SSH           | Secure Shell                                     | Used by WeConfig for nearly all forms of configuration as well as diagnostics and discovery                                                                                                                                                                                                  |

When launching interactive SSH sessions to the devices (e.g., via context menu), WeConfig will start the OS built-in SSH client command in a terminal window. If it has not been installed as part of the OS, please do so.

## 3. Terminology

### 3.1. CIDR Notation

WeConfig frequently makes use of so called CIDR notation, which is a way of writing an IP address coupled with a netmask in the format IP/BitCount, where IP is the full IP address (either IPv4 or IPv6) and BitCount is the number of bits from the start of the netmask that are 1.

Examples

| CIDR Notation    | IP Address    | Netmask         | Netmask (Bitwise)                            | Subnet      |
|------------------|---------------|-----------------|----------------------------------------------|-------------|
| 10.12.13.14/8    | 10.12.13.14   | 255.0.0.0       | 11111111<br>00000000<br>00000000<br>00000000 | 10.0.0.0    |
| 172.123.234.1/16 | 172.123.234.1 | 255.255.0.0     | 11111111<br>11111111<br>00000000<br>00000000 | 172.123.0.0 |
| 192.168.1.2/24   | 192.168.1.2   | 255.255.255.0   | 11111111<br>11111111<br>11111111<br>00000000 | 192.168.1.0 |
| 1.2.3.4/32       | 1.2.3.4       | 255.255.255.255 | 11111111<br>11111111<br>11111111<br>11111111 | 1.2.3.4     |
| 13.13.13.13/13   | 13.13.13.13   | 255.248.0.0     | 11111111<br>11111000<br>00000000<br>00000000 | 13.8.0.0    |
| 1.10.20.40/17    | 1.10.20.40    | 255.255.128.0   | 11111111<br>11111111<br>10000000<br>00000000 | 1.10.0.0    |

### 3.2. Project Gold File

Project gold file is a template file which represents an entire network with the devices and all their connections and settings. This gold file can be used to setup new networks on network topologies that are exactly the same regarding the number of devices, model and physical connections.

### 3.3. Link Local Address

A link-local address is a type of IP address that is used for communication within a single network segment or link. These addresses are not routable and are used for local network communication only. They are automatically configured on most network switches that support them and do not require manual configuration or a DHCP server.

In IPv4, link-local addresses are in the range 169.254.0.0 to 169.254.255.255.

In IPv6, link-local addresses start with the prefix fe80::/10.

### 3.4. Projects

In WeConfig, a project refers to a collection of items representing an observed network. A project can be saved to the file system, and uses the `.nprj` (Network project) extension by default when saved. The actual file itself is a ZIP-archive and can be opened/inspected using software like 7z.

#### Contents

A project file contains the following information:

- A network specification
- A data directory containing
  - Cached user notifications and their state.
  - Project-wide attachments
  - A device-attachments directory containing
    - A subdirectory per device that has attachments containing
      - Any device specific attachments
- A configuration file directory containing
  - A subdirectory per device that has backups containing
    - any backups associated with the device

#### Network specification

The network specification, called `Project.xml` within the project file, is an XML-file that details the topology of the network, along with any properties attached to the device. This XML file has some specific properties of note:

#### Project version

The first element of the XML-File looks roughly as follows

```
<Project Version="3.1" xmlns="http://westermo.com/weconfig">
```

Take note of the version attribute, which is metadata for WeConfig that states which version of the project structure is in use. WeConfig 2.4 writes version 3.1, but can read both 3.0 (used by WeConfig 1.21) and 3.1.

#### Physical Network

Under the `<PhysicalNetwork>` element, two primary sub-elements exists, `<Nodes>` and `<Connections>`. Nodes contains the set of devices present in the network, and Connections contains a connection map of how the different devices are linked together.

#### Device element

Under the `<Nodes>` element, several `<Device>` elements are usually found. This element is a serialization of WeConfigs knowledge of the device, and contains information including, but not limited to:

- Model
- Firmware version
- Management IP Address
- Mac Address
- Ports
- VLAN
- Routes

- And more...

There also usually exists a special element under <Nodes> called the <WeConfigPC> node, this corresponds to the computer running WeConfig that discovered the devices.

#### Connection element

Under the <Connections> element, a variety of connection elements exist, these tend to be one of:

- <AggregatePortConnection>: indicating a n-to-n port connection between devices where all ports involved are known.
- <WeConfigConnection>: indicating a 1-to-1 port connection between devices where at least 1 port involved is unknown.
- <RoutedConnection>: indicating a 1-to-1 connection between devices where neither port is known, typically as a result of being discovered via tracing routes.

Together, these connection elements span all known connections between devices.

#### Attachments

Attachments are generic files that have been associated either with the project itself or with a specific device. They can be of any file type and with any content. For more details, see [Attachments](#) and [Device Attachments](#).

#### Backups

A backup is a copy of a devices configuration file at a certain date and time, possibly with some attached metadata used by WeConfig. For more information, see [Backups](#)

### 3.5. Support Files

Support files are used to generate information that is useful for developers of WeConfig to help solve identified problems. They are ZIP archives containing the following information:

- The log files associated with WeConfig
- The database-synchronization status
- The exact files that make up the instance of WeConfig that generated the support file.
- The processor architecture of the computer that generated the support file
- The operating system architecture of the computer that generated the support file.
- The operating system version of the computer that generated the support file.

The support file does not contain any references to the actual topology used at the time of generation.

### 3.6. Tasks

A task in the context of WeConfig refers to a graphical user interface element that is mutually exclusive with all other tasks. In other words, only a singular task can be active at any one time. Attempting to navigate to a new task will close any prior task, although a warning may be issued if attempting to navigate away from a task that is currently running.

Tasks are identified in the user interface by two common components. Firstly, the tab hosting the task will always be named “Current Task:” followed by the name of the task at hand.

Secondly, all tasks have a button at the lower end of their interface, which executes said task. This button often contains the text “Apply” but may have other content, depending on the particular task at hand.

Typical elements of WeConfig that are handled as Tasks are operations that change the network state, may temporarily alter device behavior, or discover devices. As such, most elements under the “Configuration” section, as well as the “Device Discovery” section of the [Navigation](#) are considered tasks. Other notable tasks are [Firmware Upgrade](#), [Backup](#), [Clone Device](#) and [CLI Scripts](#)


If the task requires any form of device selection, that selection will mirror the current selection in the [Network Topology](#) and/or [Device List](#)

#### Staged Tasks

Some tasks may have several stages, as indicated by a step-by-step progress bar at the top of the user interface indicating the stages present. You can always return to a previous stage in a staged task by clicking on the associated stage step in the progress bar.

## 4. Interface

WeConfig's user interface is divided into three primary areas:

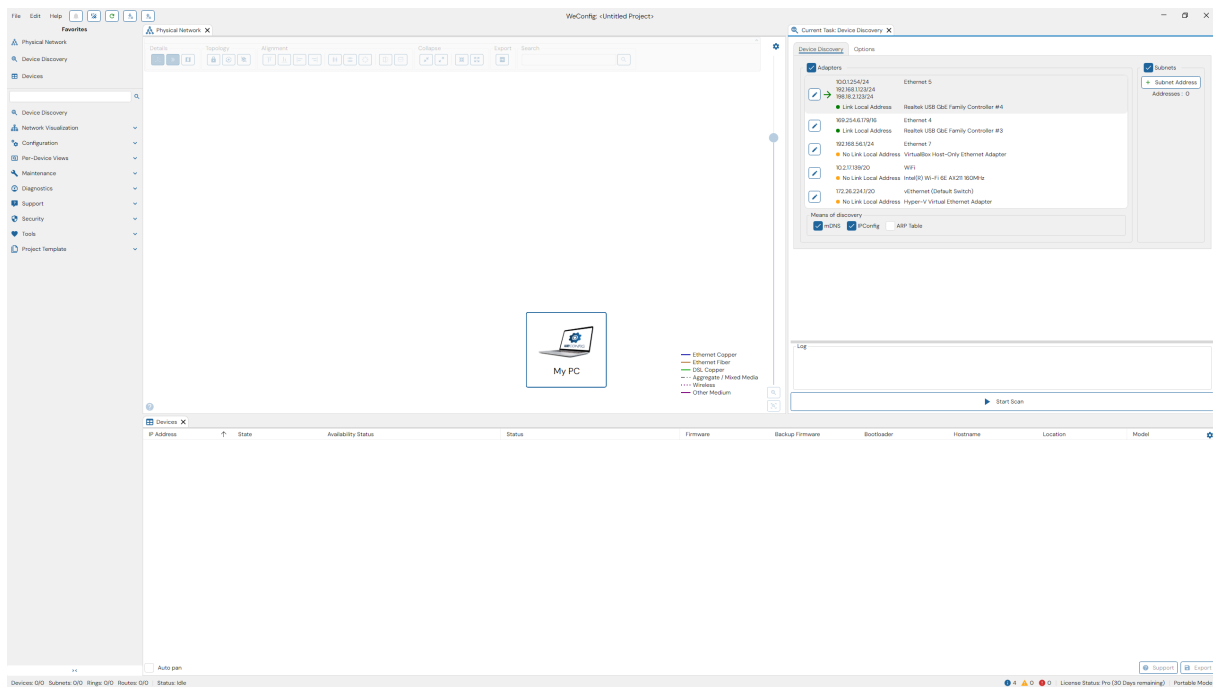

1. The Document panel
2. The Navigation menu
3. The Title bar

### Zoom In/Out

The entire user interface may be magnified, or zoomed in/out, just like web browsers.

 
To make the user interface elements bigger (zoom in), press Ctrl+Plus or Ctrl+Mouse Wheel Up.

To make the user interface elements smaller (zoom out), press Ctrl+Minus or Ctrl+Mouse Wheel Down.

To reset any zoom, press Ctrl+Zero. The status bar will also show the current magnification if it differs from normal.

## 4.1. Title Bar

At the top of WeConfig sits the titlebar, which displays the application name and provides window controls along with a few other options.



### File menu

Leftmost you will find the File menu, which provides several commands for file / project management as well as application settings.

### Quick Action Buttons

To the right of the file menu, you will find various “quick action” buttons that provide easy access to frequently used features and settings. These buttons are, as depicted above, in left-to-right order:

| Button        | Description                                                                        | Hotkey       |
|---------------|------------------------------------------------------------------------------------|--------------|
| Notifications | Opens the <a href="#">notifications panel</a>                                      | N/A          |
| Theming       | Toggles the theming options                                                        | Ctrl+Shift+T |
| Refresh       | Trigger a refresh of all devices                                                   | F5           |
| Commit All    | Commits all pending running changes to startup configuration on applicable devices | F7           |
| Revert All    | Reverts all pending running changes to startup configuration on applicable devices | F8           |

### Application/Project name

Next, you will find the application name (WeConfig) following by the name of the currently open project (or <Untitled Project> if no saved project is open).

### Window controls

Finally, to the far right you will find the window controls, which allow you to minimize, maximize, or close the application window.

## 4.2. Document Panel

The document panel is the central piece of the WeConfig user interface, and is a free-form docking space where different panels can be arranged to your desire and specification. Any panel can also be undocked entirely as a free-floating window to be placed externally, useful for running WeConfig in a multi-screen setup.

The layout is saved in-between program runs on a per-screen-setup basis. As such, WeConfig will remember where you have placed its different panels after it is closed and reopened.

 


### Tip


If you have lost track of a panel or want to go back to the default view, you can always [reset the layout](#)

### Docking

In order to dock a panel somewhere, start by left-clicking and dragging the panel header, as depicted below:



WeConfig will then display a number of dock anchors, as seen below:

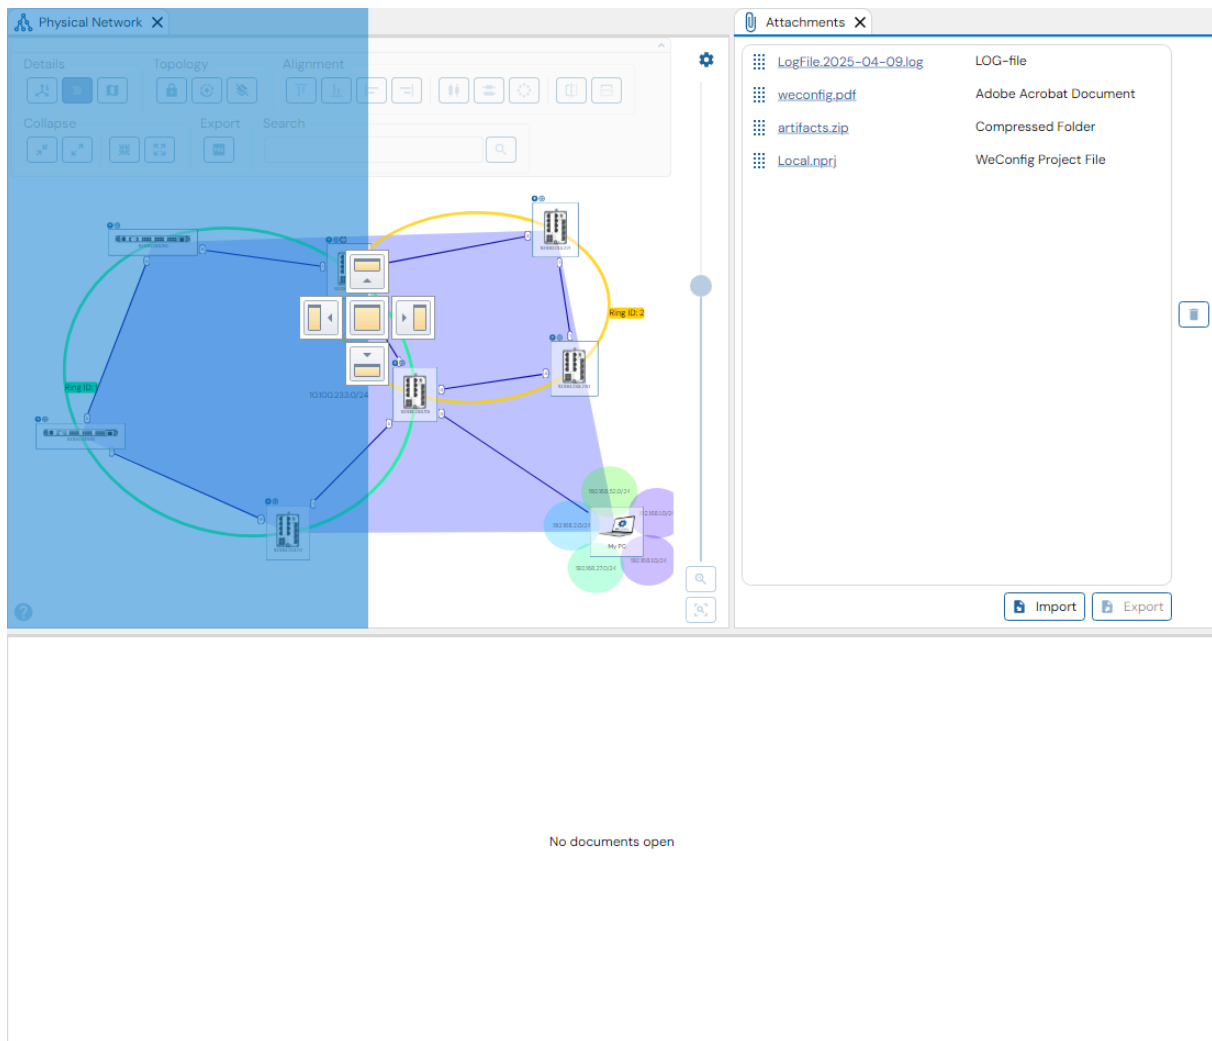

Where the one highlighted in a brighter way than the other anchors is the currently selected docking point (in this case, the inner left one in the middle of the 'Physical Network' panel), drag the mouse over another anchor to select a different one. A highlight area, seen here to the left in the 'Physical Network' panel provides a preview of where the docked window will end up. In order to complete the dock, simply release the left mouse button over one of the anchors.

### Floating panels

In order to put a panel into floating mode, start the procedure to dock it, but do not select any of the anchors, upon release, the panel will then be put into floating mode.

Any panel can also be put into float mode by the panel headers context menu, selecting the "Float" option. This context menu also allows you to re-dock a floating window.

 
### Closing panels

Panels can be closed either via the panel headers context menu, selecting the "Close" option, or by clicking on the panel header with the middle mouse button, or via the 'X' button located to the rightmost part of the panel header, as seen below



## Status bar

At the very bottom of the document panel you will find the status bar:



This bar communicates several pieces of information, from left to right:

### Selection indicator

Leftmost you will find the selection indicator, which displays the number of devices, subnets, and routes in the network, in the format Selected/Total. In the above example, 1 device is selected out of a total of 15 devices in the network.

### Status indicator

Next is the status indicator, this contains a short summary of what WeConfig is currently doing. When WeConfig is not doing anything of interest, the status will be listed as “Idle”.

### Issue indicator

Next, to the right hand side of the screen, you will find the issue indicator, this will let you know if there are any issues that WeConfig would like to suggest you take care of, their count and severity. With the above example indicating there are 5 issues warranting inspection, 4 are ranked as “informatory” and 1 as “warning”.



### Tip

Clicking the issue indicator will open up the [issue panel](#)

### License indicator

Next, conditionally, is the license indicator, which displays the current licensing status of the software.



### Tip

Interested in acquiring a licensed version of WeConfig? Contact Westermo sales.

### License indicator context menu

The license indicator also has a context menu with two options.


- Create temporary license: This context menu will allow you to create a finite amount of temporary “trial” licenses that are valid for one day, perfect for trying out the expanded features that a licensed version of WeConfig will offer.
- Activate license key: This context menu will allow you to activate a license key for the full Pro version of WeConfig.

### Portable mode indicator

Finally, to the rightmost part of the status bar, is the portable mode indicator, this is only visible if, and an indicator that, WeConfig is running in portable mode.

### 4.3. Context Menu


The context menu is one of the primary ways to interact with the network from the topology view and the device list. It can be accessed by right-clicking anywhere in the topology, or on a selection of one or more devices in the device list.

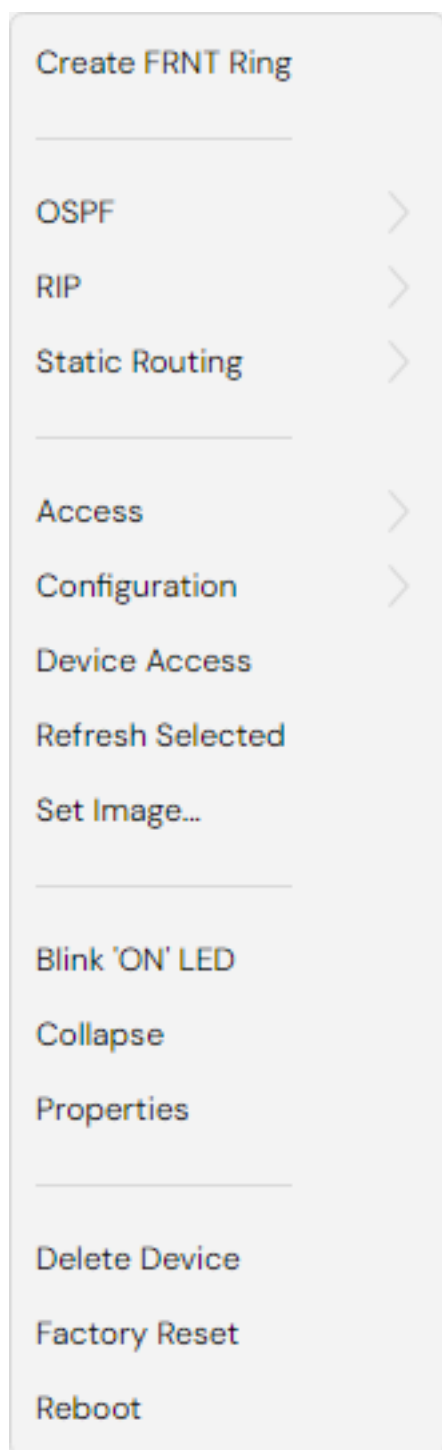

The exact contents of the context menu depends on, well, context. For example, WeConfig will only display context menu options related to OSPF when the current device selection supports any relevant OSPF-based action.

There are a lot of items that may populate this menu, some are listed here below:

## Add Device

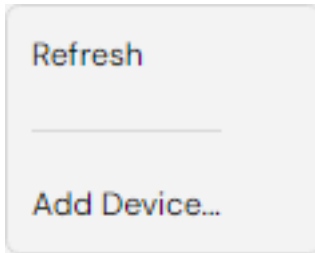

Add device allows you to add devices ad-hoc to the topology. WeConfig will ask for details pertaining to the device, which may vary for the type of device you are attempting to create, but will always include:

- Management IP address
- Hostname.
- Location, optional.

If attempting to add a type of device that WeConfig is not aware you, you may also add a manually selected image to represent it in this view.

### Note

This option is only visible if no devices are selected.

## Set Image

This context menu option allows you to set a custom image for a device that is not recognized by WeConfig, i.e not a known Westermo switch or similar.

### Note

This option is only visible when a singular, unknown device is selected.

## Blink “ON”-LED

Using this context menu option will start cause devices’ “ON”-LED to blink which make it easier to identify the device visually. The device will keep blinking as long as it is selected.

### Note

This option is only visible when a singular device that supports LED-blinking is selected.

## Access

This context menu contains three choices to access the selected device, either through HTTP, HTTPS or SSH/CLI. Click on the associated protocol to open up an external access attempt to the targeted device. If SSH/CLI is selected, the configured SSH client is used. If HTTP or HTTPS is selected, an attempt is made to access the device via the default system browser.

#### Warning

This feature is provided as best-effort attempt, particularly when using it on unknown devices that WeConfig has no awareness of regarding support for HTTP / HTTPS / SSH.

#### Info

If the device has a known configured Public-key authentication based account, WeConfig may try and authenticate the SSH access session using that account.

#### Note

This option is only visible when a singular device is selected.

### Add Connection

This context menu option is used to set the connection between two devices manually. If one or more of the devices is an unknown devices, the user must specify a port name to connect to manually by typing the name of the port in the provided field for the unknown device(s).

#### Note

This option is only visible when a single pair of devices is selected.

### Delete Devices

This context menu option removes the selected devices and all their connections from the topology.

#### Note

This option is only visible when one or more devices are selected

#### Info

This option is also hotkeyed to the 'Delete' keyboard button.

### Reboot

This context menu option reboots one or more selected device.

#### Note

This option is only visible when all selected devices support being rebooted in a manner known to WeConfig.

### Factory Reset

Factory Reset resets the selected devices to the factory configuration.



#### Note

This option is only visible when one or more of the selected devices support factory reset in a manner known to WeConfig



#### Warning

Factory resetting devices may lead to loss of connection, use with caution.

#### Disable/Enable SNMP

This context menu option enabled or disables SNMP on MRD / BRD devices.



#### Note

This option is only visible when MRD or BRD devices are selected.

#### Refresh Selected

This context menu option triggers a refresh operation on the selected devices.




#### Note

This option is only visible when one or more devices are selected

## 4.4. Navigation

On the left-hand side of WeConfigs user interface, you will find the navigation menu, depicted below:

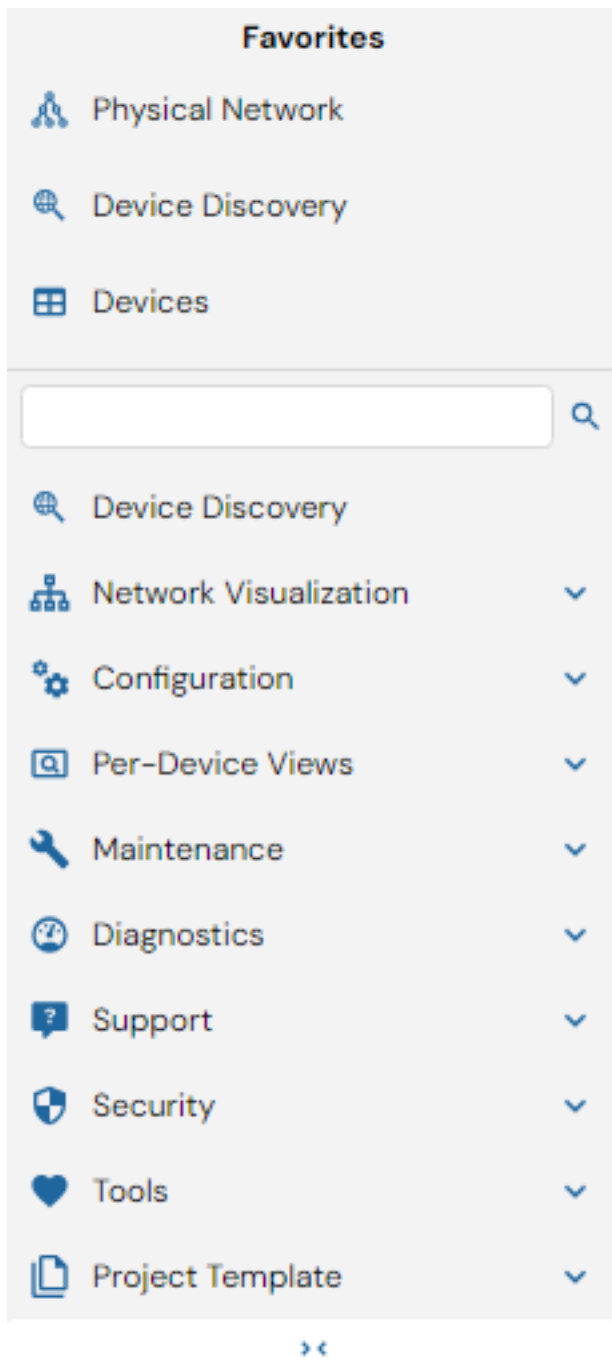

There are several components to this menu, which starting from the top to the bottom are:

### Favorites

At the very top to the navigation menu you will find the favorites list, which lists the panels that the user wishes to have easiest access to. Initially, this menu is populated with the Physical Network, Device Discovery and Devices panels, which correspond to the initially open panels on the first start of WeConfig.

Left-clicking an item in the favorites menu opens the corresponding panel in the document panel

In order to remove an item from the favorite list, right click it and select “Unpin from favorites” from the the provided context menu.

#### Navigation tree

Below the favorites section is the rest of the navigation tree, which contains all panels that you can navigate to. This tree begins with a search box, which allows you to filter the tree in search of a particular panel.

These views are arranged into categories, indicated by the presence of an expander button to the right side of the category name. Left-clicking a category expands or collapses it, revealing or hiding the panels within that category.

Left-clicking any non-category item within the tree opens the corresponding panel in the document panel.

In order to add an item from the navigation tree to the favorites list, right click it and select “Pin to favorites” from the provided context menu.

At the bottom of the navigation menu, you will find a >< button, clicking this button collapses all elements of the navigation menu except for the top level buttons, if you need more space.

#### 4.4.1. Device discovery

**WeOS 4** **WeOS 5** **Ibex** **XRD** **Merlin** **other**

The device discovery task exists to enable local and remote identification of network devices. The image below display the typical user interface for this task.

**Device Discovery** Options

☒ Adapters

| IP Address                                           | Interface                  | Device                                |
|------------------------------------------------------|----------------------------|---------------------------------------|
| 10.0.1.254/24<br>192.168.1.123/24<br>198.18.2.123/24 | Ethernet 5                 | Realtek USB GbE Family Controller #4  |
| 169.254.6.179/16                                     | Ethernet 4                 | Realtek USB GbE Family Controller #3  |
| 192.168.56.1/24                                      | Ethernet 7                 | VirtualBox Host-Only Ethernet Adapter |
| 10.2.17.139/20                                       | WiFi                       | Intel(R) Wi-Fi 6E AX211 160MHz        |
| 172.26.224.1/20                                      | vEthernet (Default Switch) | Hyper-V Virtual Ethernet Adapter      |

Means of discovery

☒ mDNS ☒ IPConfig ☐ ARP Table

☒ Subnets

198 18 1 1 / 25

+ Subnet Address

Addresses : 127

Log

Start Scan

#### Interface Elements

##### Network Interface selector

This element lists the available network interfaces on the PC, with each entry containing the following data:

- A list of CIDR-notation network addresses associated with the interface.
- An indicator for whether or not the interface has a link local address.
- The interface name, seen as, for example Ethernet 5 at the top entry in the image above.
- The device name associated with the interface, for example Realtek USB GbE Family Controller #4 in the image above.
- An edit button.

## Edit button

The edit button, attached to each individual network interface listed, allows a user to bring up an editor for that interface which appears roughly as per the image below:

**IP Address**

☐ Dynamic (DHCP) ☒ Static

192.168.1.123 / 24

198.18.2.123 / 24

169.254.75.33 / 16

10.0.1.254 / 24

+ IP Address + Link Local

**Default Gateways**  
No default gateways

+ Add Default Gateway

✓ Apply

This editor allows the user to specify either a number of static CIDR-notation addresses for the interface, or set DHCP assignment for the interface.

Additionally, the editor allows the user to configure a default gateway for the specific interface, in order to ease routing access.

### *i* Info

On Windows, using the editor functionality requires at least NET ADMIN or Administrator privileges. WeConfig will request these privileges as needed.

On Linux, when not running as `sudo` or as the root user, WeConfig will attempt to run `pkexec` to gain the necessary privileges for the editor operation

## Interface Discovery Methods

Located beneath the network interface selector, this element contains a selection of discovery methods to be applied to the selected interfaces. The options are as follows:

| Option | Description                                                                | Limitations                                                                            |
|--------|----------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| mDNS   | Multicast domain name resolution, a protocol that broadcasts a request for | mDNS calls do not jump across routes, and thus will only discover layer 2 connections. |

| Option    | Description                                                 | Limitations                                                                                          |
|-----------|-------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
|           | devices to identify themselves on the specified interface.  |                                                                                                      |
| IPConfig  | A Westermo specific protocol used to discover WeOS 4 units, | Provides a fairly limited amount of metadata, limited similarly to mDNS to only layer 2 connections. |
| ARP Table | Checks the PC's ARP-table for reachable IP addresses        | Requires a populated ARP table on the local PC                                                       |

## Subnets

This element allows the user to specify a number of subnets to be scanned during the discovery process. These subnets will be scanned with ICMP ping in addition to any addresses discovered by interface-based methods. You may add any number of subnets to this list by clicking the + button, and remove them by clicking the trash button next to each subnet. Beneath the subnet list, you will see a count of the number of addresses that will be scanned during the discovery process.

## Options

Device Discovery
Options

Options

☐ Discover Neighbours
☒ Traceroute
☐ Use DNS

SNMP

Port
161

Timeout ( ms )
4000

Version
v2

Read Community
weconf\_ro

Port
161

Timeout ( ms )
4000

Version
v2

Read Community
public

Port
161

Timeout ( ms )
4000

Version
v3

Username
monitor

Auth. Passphrase
SHA-512

Crypto Passphrase
AES-256

+ Auth.

Accounts

Username
admin

Password
.....

Usage
SSH,HTTP,HTTPS,REST

Public Key

+ Accounts

Log

Start Scan

This tab contains a number of options that affect the behavior of the discovery task:

| Option              | Description                                                                                                                                                                                                                                |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Discover Neighbours | When enabled, the discovery process will apply <u>recursive discovery</u> to all discovered devices. This allows for the discovery of devices that may not be directly reachable, and across routing boundaries.                           |
| Traceroute          | When enabled, the discovery process will perform a traceroute to all discovered devices that do not have a known topological connection to the local PC. This allows for the discovery of intermediate routing devices.                    |
| Use DNS             | When enabled, the discovery process will attempt to resolve the hostnames of discovered devices using DNS. This can provide more user-friendly names for devices, but may not always be successful depending on the network configuration. |

#### Info

All of these options add significant time to the discovery process, especially when applied to large numbers of devices.

## SNMP

Located beneath the Options group, this element allows the user to configure SNMP settings for the discovery process. These settings include:

- SNMP Port
- SNMP Timeout
- SNMP Version to be used (v2c or v3)
- SNMP Community String (for v2c) or User Credentials (for v3)

Multiple SNMP configurations can be created and selected for use during the discovery process.

## Accounts

Beneath the SNMP settings lies the Accounts section, where the user can configure account credentials for the discovery process. These credentials will be used to authenticate with devices during discovery when the “Usage” field matches the type of account being requested.

The fields available for each account credential include:

- Username: The username for the account
- Password: The password for the account
- Usage: The type of usage this account is intended for (e.g., SSH, HTTP, HTTPS, REST)
- Public Key: Whether or not public-key authentication should be used for this account.

The following usage types are available for account credentials, at least one needs to be configured, and multiple can be configured as a comma-separated list:

| Type  | Explanation                                                  |
|-------|--------------------------------------------------------------|
| SSH   | Used for authenticating with devices over the SSH protocol   |
| HTTP  | Used for authenticating with devices over the HTTP protocol  |
| HTTPS | Used for authenticating with devices over the HTTPS protocol |

| Type | Explanation                                               |
|------|-----------------------------------------------------------|
| REST | Used for authenticating with devices over REST-based APIs |

#### Warnings, Windows Only

The following actionable warnings may appear during the task, each with a remediation link that can be clicked:

| Warning             | Explanation                                                                                                                        |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------|
| IPConfig is blocked | The PC's firewall does not allow IPConfig packets to be sent or received, which will prevent device discovery using this protocol  |
| mDNS is blocked     | The PC's firewall does not allow mDNS packets to be sent or received, which will prevent device discovery from using this protocol |

#### Info

All of the remediation links require escalated privileges to resolve, WeConfig will request these as necessary. `NET ADMIN` is sufficient to add link local addresses, but `Administrator` is required for any firewall editing.

#### Log


This box contains a [log window](#) of the discovery process. The log will indicate which addresses respond to the different protocols used, the data about the devices as they are being discovered, as well as the current state of the discovery process.

## Network Visualization


### 4.4.2. Physical Network

**WeOS 4** **WeOS 5** **Ibex** **XRD** **Merlin** **other**

The physical network panel is one of the main ways of visualizing the network in WeConfig, it will render the currently know network topology, including devices, connections between them, subnets and rings. Depicted below is an example topology with a single core subnet and 2 FRNT rings.

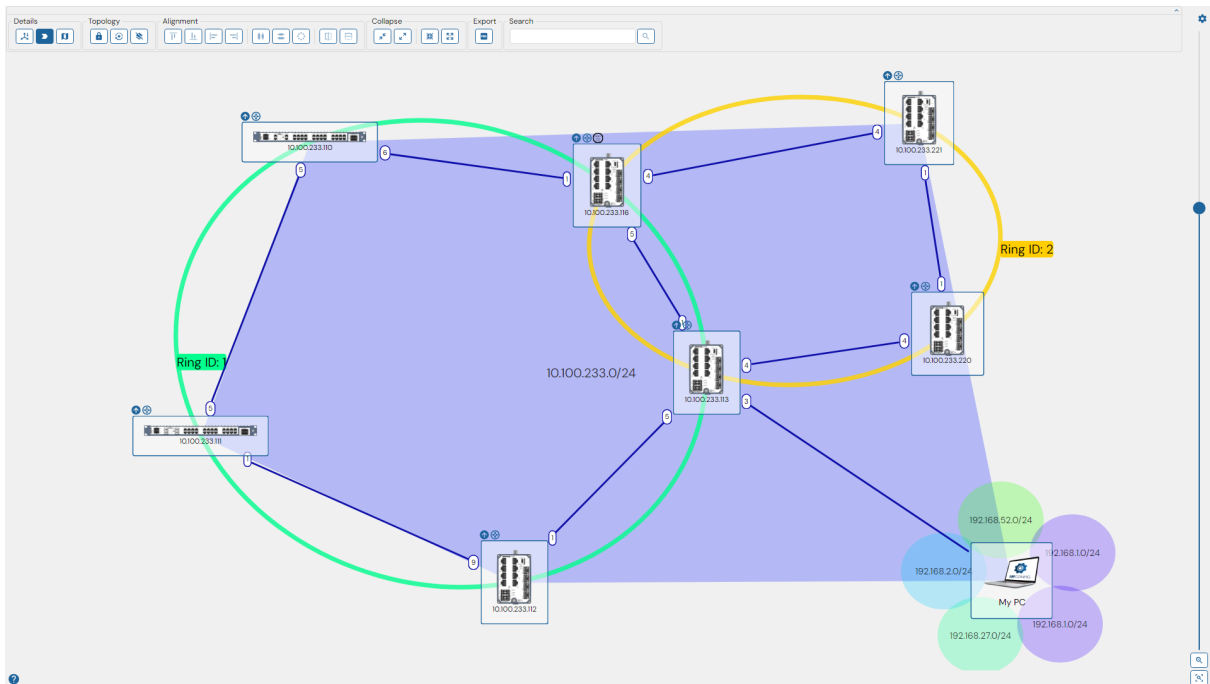

Wherein we can see the 7 different devices (plus the PC). These devices grouped together in the 10.100.233.0/24 subnet indicated by the semi-transparent blue polygon forming between them. We can also observe two rings, Ring ID: 1 depicted in green and Ring ID: 2 depicted in yellow. There are several more components to this topology. Let's zoom in on the device at IP Address 10.100.233.113:

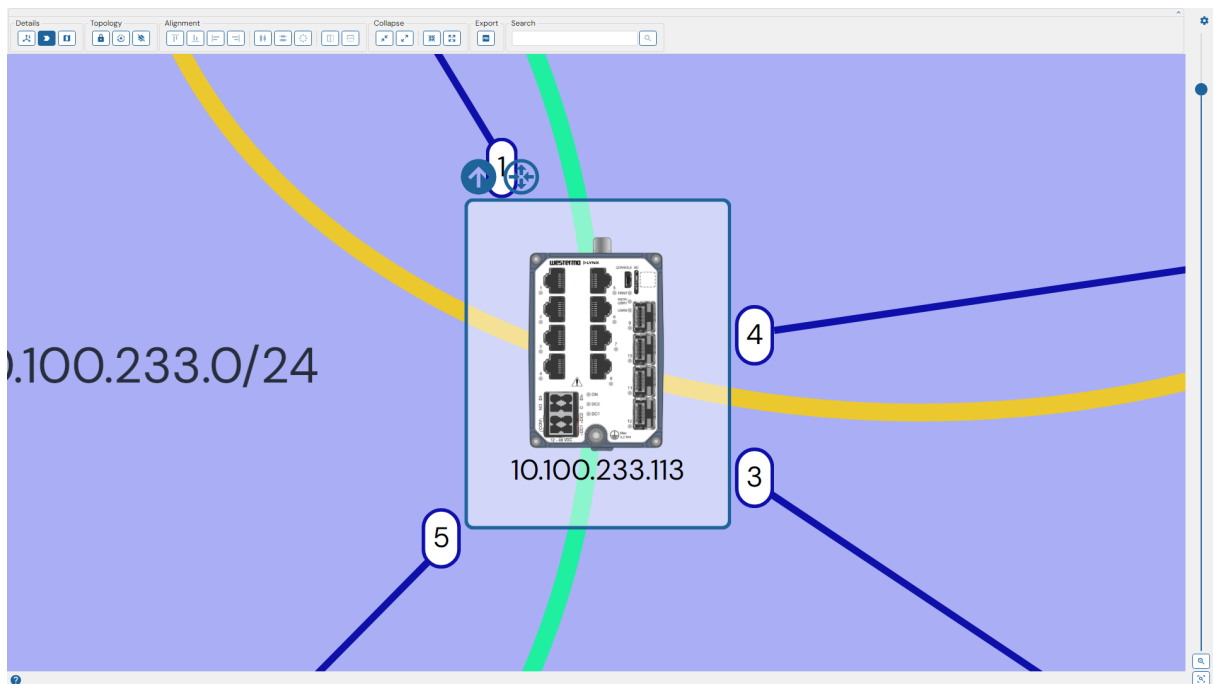

Here we can observe a set of components.

#### Device border

Within the confines of the device border, there is a picture depicting the device, with its IP address listed beneath.



#### Tip

The contents displayed within the device border can be configured in the top right of the view

#### Node Icons

Above the device border, we see a list of icons, 2 in total in this example. These carry information and may serve as quick actions to undertake on the device. See the table below for what each icon means.

| Icon description                    | Explanation                                              | Clickable  |
|-------------------------------------|----------------------------------------------------------|------------|
| A box with two dots & signal        | Device can act as a router                               | No         |
| Blue up arrow                       | There is an available firmware upgrade                   | <u>Yes</u> |
| Blue circle with an 'i'             | There is at least one <u>issue</u> linked to this device | <u>Yes</u> |
| A yellow triangle with a '!' inside | Device has connectivity issues.                          | No         |
| A red circle with a '!' inside      | Device uses firmware that is not supported               | No         |
| Circle with "FRNT Focal Point"      | Device is the focal point for a FRNT ring                | No         |
| Circle with "MRP Manager"           | Device is an MRP manager                                 | No         |



#### Tip

Hovering above each icon also gives additional information about its purpose.

#### Port labels

Only visible when toggled under the details section, these ellipses on the edge of the device border indicates the port associated with any connections going to and from this device. In the example above, we can see the the device has four connections, one through port 1, one through port 3, one through port 4 and one through port 5.

The edge color of these ellipses and their continuation in connection lines also serve to specify the physical medium across which the connection is carried, according to the following table:

| Line                  | Medium                       |
|-----------------------|------------------------------|
| Straight, blue        | Copper-based ethernet cable. |
| Straight, orange      | Fiber-based ethernet cable.  |
| Sinusodal, green      | Copper-based DSL cable.      |
| Dash-dot-dot, grey    | Mixed media / aggregate link |
| Dotted, Purple        | Wireless                     |
| Straight, White/Black | Unknown                      |




#### Info

This legend is also available in the topology view itself if “Show connection information” is toggled under the details section

#### Selection

The physical network panel is one of the primary sources of selection in WeConfig, you may select a device by left-clicking on it. Any device that is selected will be highlighted, see image below:

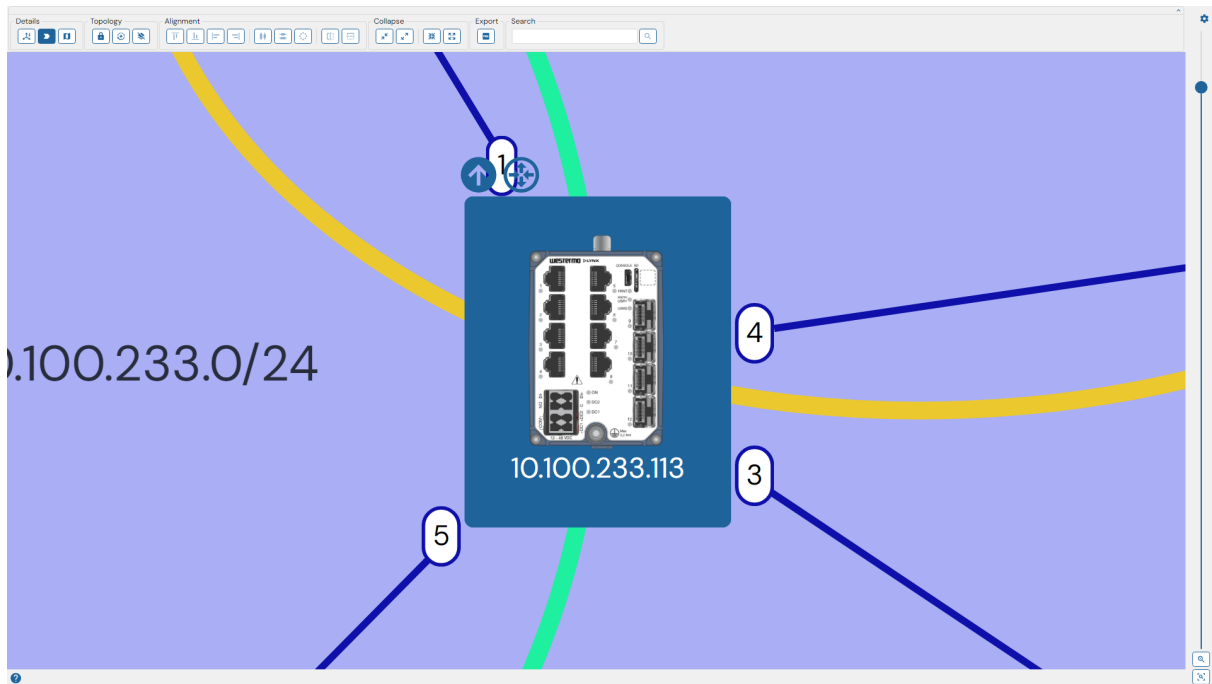

Which depicted the previously mentioned device at 10 . 100 . 233 . 113 when it is selected.

By default, selecting a device deselects any previously selected devices. In order to append to the current selection instead of overriding it, hold down **Ctr** while left clicking.

### Subnet & Ring Selection

It is possible to select based on both subnets and rings present in the topology as well, to do so, simply click the ring or subnet you wish to select. Some specifications apply for subnet and ring selection:

- Selecting a ring or subnet selects all devices that belong to said ring or subnet.
- A ring or subnet is considered selected if, and only if, all of the devices that belong to said ring or device is selected.




### Tip

Hovering a subnet or ring will highlight it slightly.

### Route visualization

Additionally, whenever a device is selected, WeConfig will attempt to visualize its outgoing routes to any known subnets inside of the topology.

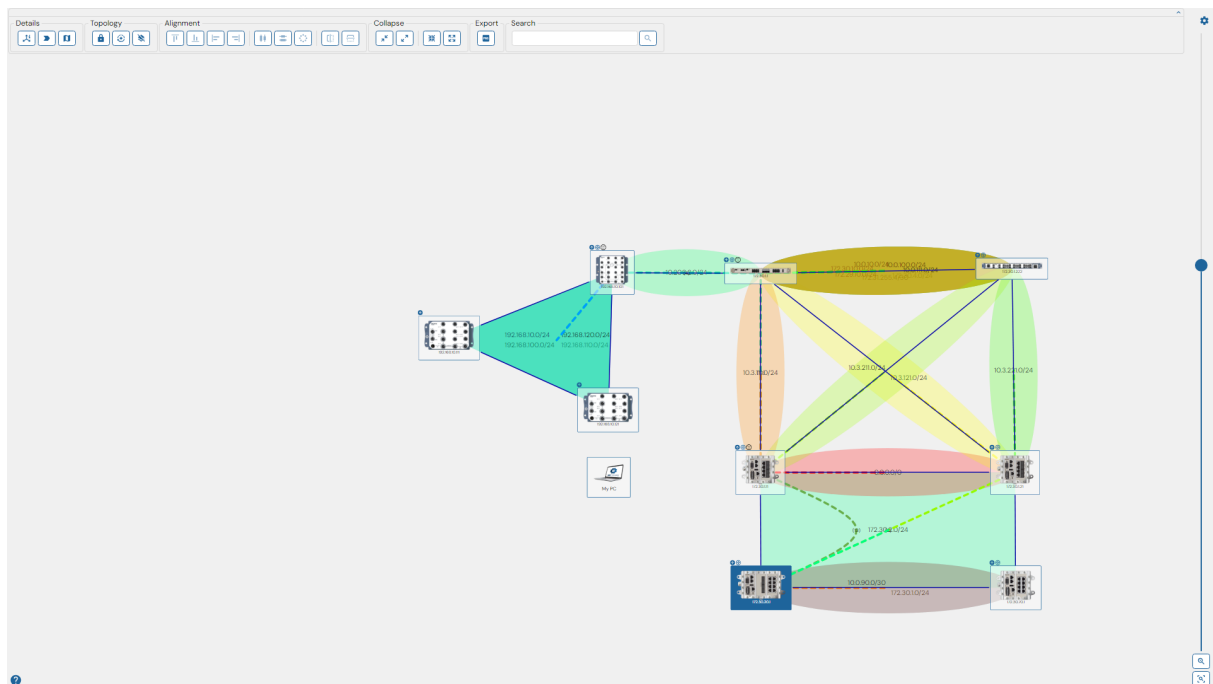

Where we can observe a set of curves going between, for example, the device 172.30.2.1, with the color indicating the origin subnet and, jumping through relevant gateways, arriving at the target subnet.

### Zoom Control

The zoom control is located to the right of the main topology view. It controls the zoom level within the physical network topology view. It consists of a slider indicating the current zoom level, as well as two buttons which indicate and alter the current zoom state, they are as follows:

| Button | Purpose                                                            |
|--------|--------------------------------------------------------------------|
| Fill   | Zoom the network topology to the minimum encompassing bounding box |
| 1:1    | Reset the zoom level to 1                                          |

### Tip

The zoom level in the topology can also be controlled via the mouse-wheel.

### Topology control section

At the very top of the physical network panel we will find a section containing a variety of options that allow us to further refine and modify the network topology and how we view it. These are divided into six section: Details, Topology, Alignment, Collapse, Export, and Search.


### Details

The first section menu controls whether or not certain additional information is rendered, it consists of three toggles, which serve the following purpose:


| Toggle                      | Purpose                                                                                                                                                                                                            |
|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Show connection information | Controls the display of the connection information legend and the bottom right corner of the panel, as well as the clickable ' <u>Connection Information</u> ' buttons that adorn the connections in the topology' |
| Show Port Labels            | Controls the display of port labels adjacent to devices                                                                                                                                                            |
| Show/Hide Minimap           | Controls the display of a network 'Minimap' at the top right corner of the panel                                                                                                                                   |

Connection information

When toggled in the details section, a button will appear on the centre of each connection in the topology, as depicted below:

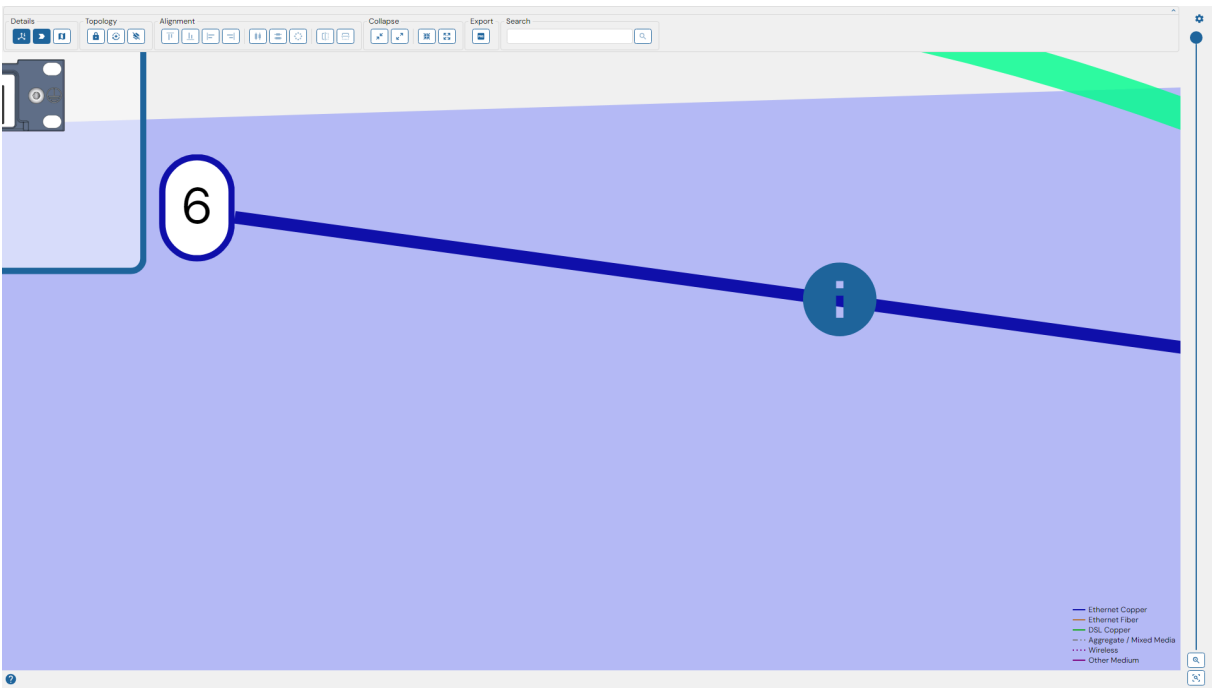

Clicking this button opens up a connection information flyout, which contains additional information about the connection in question, see one example depicted below:

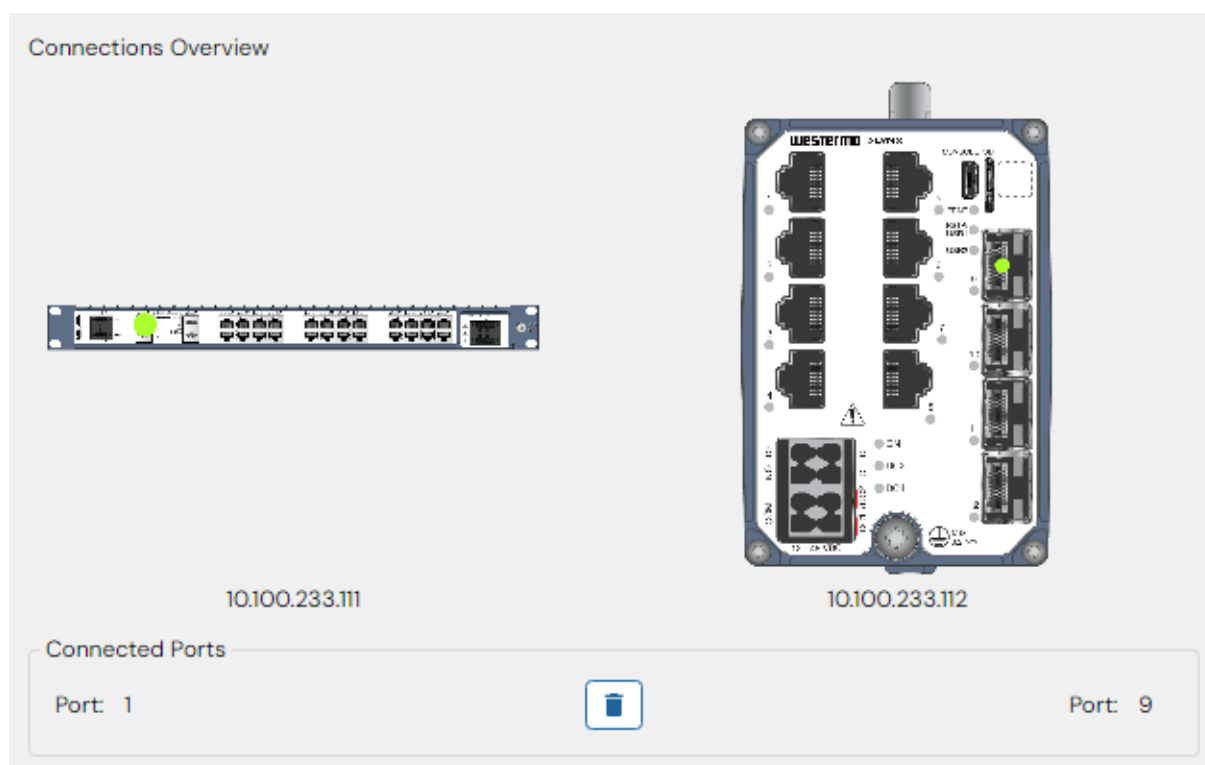

In this example, we can see that the device at 10.100.233.111 is connected to the device at 10.100.233.112 from port 1 to port 9. The device images also indicate the physical location of these respective ports on the device itself with a green dot.

If for some reason, this connection is considered incorrect, the delete button positioned between the port indicators can be used to make WeConfig forget about this connection.

### Topology

The second section menu controls the topology layout, it has three options, as depicted below:

Where the options are, from left to right:

| Option             | Explanation                                                                             |
|--------------------|-----------------------------------------------------------------------------------------|
| Lock/Unlock Layout | When toggled, prevents any changes to the topology layout.                              |
| Auto Layout        | Attempt to organize the topology according to the currently set <u>layout algorithm</u> |
| Clear Topology     | Removes all devices from the topology.                                                  |

### Alignment

The third section menu controls the alignment of devices within the topology, it has several options, as depicted below:


Where the options are, from left to right:

| Option    | Explanation                                                                                       |
|-----------|---------------------------------------------------------------------------------------------------|
| Align Top | Move the Y-coordinate of all selected devices to the Y-coordinate of the topmost selected device. |

| Option                  | Explanation                                                                                                              |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------|
| Align Bottom            | Move the Y-coordinate of all selected devices to the Y-coordinate of the bottommost selected device.                     |
| Align Left              | Move the X-coordinate of all selected devices to the X-coordinate of the leftmost selected device.                       |
| Align Right             | Move the X-coordinate of all selected devices to the X-coordinate of the rightmost selected device.                      |
| Distribute Horizontally | Distribute the X-coordinate of the selected devices evenly on a scale between the leftmost and rightmost selected device |
| Distribute vertically   | Distribute the Y-coordinate of the selected devices evenly on a scale between the topmost and bottommost device          |
| Distribute Radially     | Distribute the coordinates of the selected devices evenly in a circle around their average center                        |
| Flip Horizontally       | Invert the X-coordinates of the selected devices around their average X-coordinate                                       |
| Flip Vertically         | Invert the Y-coordinates of the selected devices around their average Y-coordinate                                       |

## Collapse

The fourth section menu contains controls for collapsing and expanding devices. With the first two buttons collapsing and expanding so called “Unknown” devices, or in other words those that WeConfig does not know how to work with, and the last two collapsing and expanding all devices. For example, the original topology depicted at the top of this document would appear like this when all devices are collapsed:

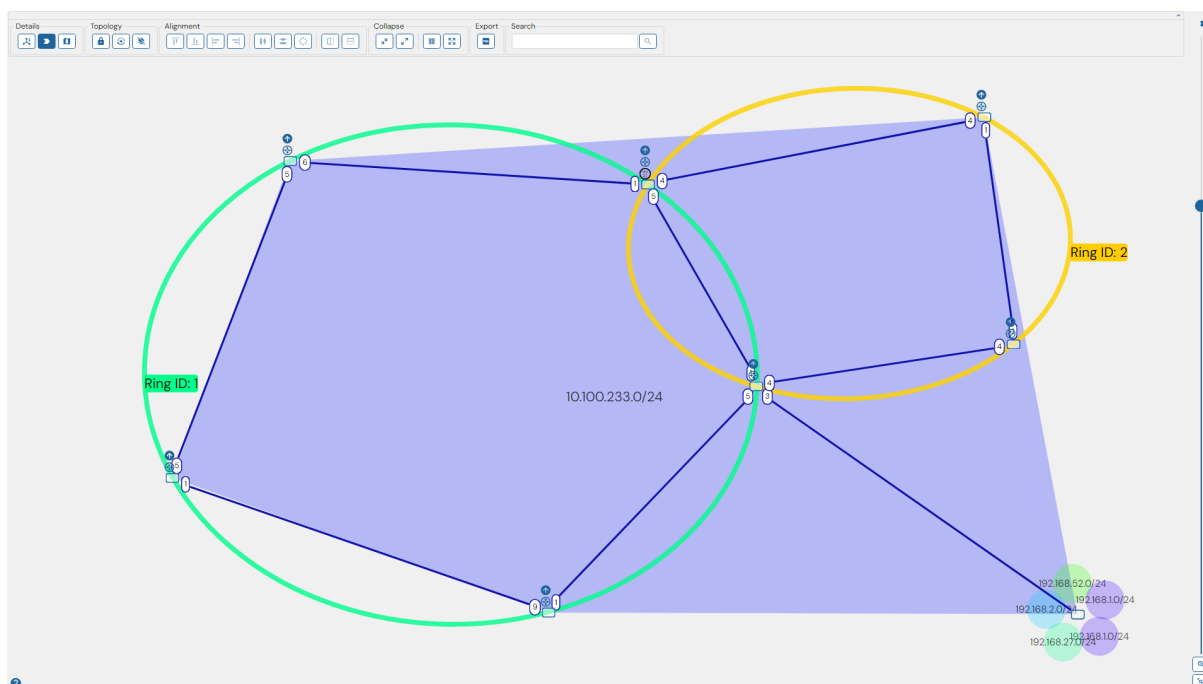



#### Tip

Devices can also be individually expanded or collapsed via the [context menu](#)

This allows for a variety of views of the network, for example, if one sets connection opacity to 0 and collapses all devices, one would have as close to a pure “layer 3” view as WeConfig offers today.

#### Export

The fifth section menu is used to export the current topology as a PNG image.

#### Search

The sixth and final section menu contains a search bar, which allows for searching for devices in the topology.

### 4.4.3. Devices



The devices panel is a secondary way of visualizing the network in WeConfig, where devices are ordered in a grid-list with some properties on display. Depicted below is an example of a populate device list including WeOS, Ibex, Xrd and Merlin Devices.

| IP Address | State | Availability Status                | Status | Firmware         | Backup Firmware | Bootloader  | Hostname               | Location         | Model                  |
|------------|-------|------------------------------------|--------|------------------|-----------------|-------------|------------------------|------------------|------------------------|
| 198.18.11  | ●     | SNMP: ✓ CLI: — IP Config: — Web: — |        | 4.23.0           |                 | 2014.013-1  | Management Router      | Main Office      | RF1-29-13G             |
| 198.18.12  | ●     | SNMP: ✓ CLI: — IP Config: ✓ Web: — |        | 4.23.0           |                 | 2014.013-1  | Plant A Router         | Plant A          | RF1-29-13G             |
| 198.18.13  | ●     | SNMP: ✓ CLI: — IP Config: ✓ Web: — |        | 4.23.0           |                 | 2014.013-1  | Plant B Router         | Plant B          | RF1-29-13G             |
| 198.18.14  | ●     | SNMP: ✓ CLI: — Web: —              |        | 5.21.0           |                 | 2017.02-01  | Machine 10             | Plant A Bench 10 | Viper-120A-14G         |
| 198.18.15  | ●     | SNMP: ✓ CLI: — Web: —              |        | 5.22.0           |                 | 2024.03.0-1 | Machine 11             | Plant A Bench 11 | Viper-120A-14G         |
| 198.18.16  | ●     | SNMP: ✓ CLI: — Web: —              |        | 5.22.0           |                 | 2024.03.0-1 | Bridgeboy 1            | Plant A Bridge 1 | Viper-120A-14G         |
| 198.18.17  | ●     | SNMP: ✓ CLI: — Web: —              |        | 5.22.0           |                 | 2024.03.0-1 | Machine 1              | Subnet 1         | Viper-120A-14G         |
| 198.18.18  | ●     | SNMP: ✓ CLI: — Web: —              |        | 5.22.0           |                 | 2024.03.0-1 | Machine 2              | Subnet 2         | Viper-120A-14G         |
| 198.18.19  | ●     | SNMP: — API: —                     |        | 1.8.9.9          |                 |             | Xrd Gateway            | Plant B          | M80-455                |
| 198.18.110 | ●     | SNMP: ✓ API: ✓                     |        | 6.11.0-1         |                 | Simulated   | Ibex Wireless Router 1 | Main Office      | RT-630-HV              |
| 198.18.111 | ●     | SNMP: ✓ API: ✓                     |        | 6.11.0-1         |                 | Simulated   | Ibex Wireless Router 2 | Plant A          | RT-320                 |
| 198.18.112 | ●     | SNMP: ✓ CLI: — Web: —              |        | 5.22.0           |                 | 2024.03.0-1 | Lynx RedBox 1          | Plant A          | Lynx-RB-FT3G-MV        |
| 198.18.113 | ●     | SNMP: ✓ CLI: — IP Config: ✓ Web: — |        | 4.33.0           |                 | 2014.013-1  | Wolverine DSL 1        | Plant A          | DDW-142                |
| 198.18.114 | ●     | SNMP: ✓                            |        | SXL-25.05.96.001 |                 | v0.00-1     | Merlin Router 1        | Plant B          | Merlin-440J-14-S2-LV-1 |
| 198.18.115 | ●     | SNMP: ✓                            |        | D8S-25.06.10.023 |                 | v0.00-1     | Merlin Router 2        | Main Office      | Merlin-470B-V-14G-S2-  |

Selection in this panel will be mirrored in the [topology](#).

There are several details of note within this panel:

#### Columns

##### Headers

Some headers can be clicked, and the default behavior for doing so is to order the grid-list by the value of the columns associated with the header, if clicking the header does not sort the list, it indicates that the column does not contain sortable values. Additionally, hovering over a header may reveal a filter button, which can be used to filter the list according to desired properties.

##### IP Address

This column presents the primary / management IP address associated with the device.

##### Netmask

This column presents the subnet mask associated with the device's primary / management IP address.

##### MAC Address

This column presents the base MAC address associated with the device.

##### State

This column is a mirror of the [icons](#) found above the devices in the [topology](#) panel

##### Availability status

This column presents a collection of status indicators:

| Indicator  | Meaning     |
|------------|-------------|
| Check mark | Good        |
| Cross      | Bad /Failed |
| -          | Unknown     |

The following entries may appear:

| Entry     | Explanation                                                                         | Applicable to |
|-----------|-------------------------------------------------------------------------------------|---------------|
| Web       | The status of the latest attempt at communicating with the device via HTTP(S)       | Any           |
| SNMP      | The status of the latest attempt at accessing the device via SNMP                   | Any           |
| Ping      | The status of the latest ICMP ping sent towards the associate management IP address | Any           |
| CLI       | The status of the latest attempt at accessing the device via SSH                    | WeOS          |
| IP Config | The status of the latest attempt at communicating with the device via IP-config     | WeOS 4        |
| API       | The status of the latest attempt at accessing the device via it's specific API      | XRD, IBEX     |

#### Status

This column presents any current status messages associated with the device, and may indicate if a specific device has encountered an error.

#### Configuration hash

This column presents the hash of the current configuration detected on the device, if any.

#### Firmware

This column presents the current primary firmware version detected on the device, if any.

#### Backup Firmware

This column presents the current backup firmware version detected on the device, if any.

#### Bootloader

This column presents the current bootloader version detected on the device, if any.

#### FRNT

This column presents the current FRNT status of the device, if any.

#### Hostname

This column presents the known configured hostname, if any, associated with the device.

#### Location

This column presents the known configured location, if any, associated with the device.

#### Model

This column presents the identified specific model, if any, associated with the device.

#### Backup

This column presents the last backup time of the device, if any.

#### Family

This column presents the family to which the device belongs, if any.

#### Auto pan

Located at the bottom left of the panel, when checked, selection originating within this panel will send a request to the topology panel, if active, to move its focus to the selected devices.

### Export

Located at the bottom right of the panel. Clicking this button will open up a dialog to export the grid-list into a .csv format file.

### Support

Located to the left of the Export button. Clicking this button will download the tech support files from the selected devices.

## Configuration

### 4.4.4. Basic Setup

WeOS 4

WeOS 5

Ibex

XRD

Merlin

Basic setup is a task that allows for configuration of the following basic device properties:

| Property        | Explanation                                                   | Required                                     |
|-----------------|---------------------------------------------------------------|----------------------------------------------|
| IP Address      | The primary IP address of the device, in <u>CIDR notation</u> | Yes                                          |
| Host name       | The host name tag of the device                               | No, will default to previous value if empty. |
| Location        | The location tag of the device                                | No, will default to previous value if empty  |
| Default gateway | The default gateway for routes                                | No                                           |

### Interface Components

#### Basic Setup

Auto Fill

IP Address

/

Increment

1

1000

Gateway

Hostname

Location

Fill

00:07:7C:23:C1:C0



IP Address

10

0

2

4

/

24

Hostname

Machine 11

Location

Plant A Bench 11

Gateway

255

255

255

255

Apply

### Fill pane

The fill pane allows the user to write properties once and then copy them to all devices. The increment box will operate on the IP Address field and increase the IP address handed to each device by the amount specified.

Any property left empty will be ignored when the “Fill” button is pressed.

### Configuration list

Beneath the fill pane the list of individual device configurations can be found. This can be edited to set device-specific properties.

#### 4.4.5. Accounts

WeOS 4

WeOS 5

Ibex

XRD

Merlin

Accounts is a task that allows for configuration of user accounts on supported devices. The exact properties that can be configured varies between firmwares, as per the table below:

| Firmware | Password | Username | Raw Hash | Public Keys    |
|----------|----------|----------|----------|----------------|
| WeOS 4   | Yes      | Yes      | Yes      | Only for Admin |
| WeOS 5   | Yes      | Yes      | Yes      | Yes            |
| Ibex     | Yes      | No       | No       | No             |
| XRD      | Yes      | No       | No       | No             |



#### Note

Configuring the account setup for an XRD also sets up the API account associated with the device.

#### Interface Components

### Account Configuration

Auto Fill

Create/Copy public key

10.0.2.4 Machine 11@Plant A Bench 11

Username

admin

Password: Weak

.....

Hash

\$1\$DefinitelyNotHunter2

Public Key

ssh-ed25519 Fake\_Data/For\_Some\_Key documenter@computer

ssh-ed25519 documenter computer

+

Apply

#### Autofill section

Collapsed by default under the label “Autofill”, this section of the interface allows for filling out a group of account that can then be copied to all selected devices.

### Create/Copy public key

Located towards the top of the interface, this button is an easy short-hand for generating a public/private RSA key-pair associated with the running machine. When clicked, it will check whether or not an RSA key pair exists on the machine, and if not, create one. The public key of the RSA pair will then be copied to the users clipboard.

### Device view

Picture above is the view for a singular device at the IP address 10.0.2.4. This is a WeOS 5 device, and as such all the components are visible. They are as follows:

#### Username

This box specifies the username to associate with the account, it may be read-only if the device firmware does not support non-default usernames.

#### Password

This box specifies the password to associate with the account.

#### Hash

This box specifies the hashed version of the password, useful for copying authentication between devices without explicit knowledge of passwords.



#### Note

Any hash specified will be ignored in favor of the Password box if it is non-empty.

### Public keys

This box specifies the public keys that can be used for authentication purposes. An account can usually have more than one public key associated with it. Filling out one line of the public key box will make another line appear beneath it, as long as there is space on the device for more public keys for the account.



#### Note

If the password box and hash box is left empty on an account that supports and is configured with public key authentication, the only way to access the account will be via public key authentication.

### Reduced view

In comparison to the above full view for a WeOS 4 device, below is pictured the view for an Ibex device, which has less supported features in this view:

## Account Configuration

Auto Fill

 Create/Copy public key

10.0.1.60 Ibex Wireless Router 1@Main Office



Username

admin

Password: **Weak**

.....



 Apply

As can be seen, only the username and password box is visible, the username cannot be edited and no more accounts can be created.

#### 4.4.6. Virtual Local Area Networks (VLAN)

WeOS 4 WeOS 5 Merlin

VLAN is a task that allows for configuration of virtual local area networks, VLANs for short, and their port associations.

## Interface components

### VLAN Configuration

Auto Fill

+ VLAN

198.18.1.16 Bridgeboy 1@Plant A Bridge 1

Ports

|       | VLAN 1 | VLAN 2 | VLAN 3 | VLAN 4 |
|-------|--------|--------|--------|--------|
| Eth 1 | U      | T      | -      | -      |
| Eth 2 | U      | -      | T      | -      |
| Eth 3 | U      | -      | -      | T      |
| Eth 4 | N      | -      | -      | -      |
| Eth 5 | U      | -      | -      | -      |
| Eth 6 | -      | -      | -      | U      |
| Eth 7 | -      | -      | N      | -      |
| Eth 8 | -      | U      | -      | -      |
| Eth 9 | U      | -      | -      | -      |

Interfaces

vlan1 / VLAN 1

Name

vlan1

IGMP

☒

Priority

0 (Lowest)

Enabled

☒

Distance

1

255

Addresses

|             | Addresses        | Static                           | DHCP                             | Link Local                       |
|-------------|------------------|----------------------------------|----------------------------------|----------------------------------|
| <div></div> | <DHCP>           | <input type="radio"/>            | <input checked="" type="radio"/> | <input type="radio"/>            |
| <div></div> | <Link Local>     | <input type="radio"/>            | <input type="radio"/>            | <input checked="" type="radio"/> |
| <div></div> | 198.18.1.16 / 24 | <input checked="" type="radio"/> | <input type="radio"/>            | <input type="radio"/>            |

+ Address

Services

☒ SSH

☒ HTTP

☒ HTTPS

☒ SNMP

Remove

vlan2 / VLAN 2

vlan3 / VLAN 3

vlan4 / VLAN 4

Add

Port Configuration Legend:

-

Not member

U

Untagged

N

Untagged Nested

T

Tagged

Apply

## Legend

At the top right of the interface is a legend, depicting a shorthand assistance for reading the port association matrix.

## Autofill

Just below the filter box exists an autofill section, which is collapsed by default. This allows for configuring a VLAN (without port association) once and copying that configuration to all selected devices.

## Device view

The rest of the interface will contain a list of devices views, with a singular device in the example depicted above. Each device view is broken down into two sections, the port association matrix and the VLAN configuration list.

## Port association matrix

The top of the device view is a collapsible port matrix, where the device ports are listed as rows and the existing VLANs are listed as columns. This allows specification of which VLANs are mapped to which port, and in which way they are mapped. The above example demonstrates the following setup:

- For VLAN 1, Ports Eth 1 through Eth 5 and Eth 9 are present but untagged. Port 4 has policy nesting enabled.
- For VLAN 2, Port Eth 1 is tagged (which does not conflict with untagged VLAN 1 traffic on the same port) and Port Eth 8 is untagged
- For VLAN 3, Port Eth 2 is tagged, and Port Eth 7 is untagged with policy nesting enabled.
- For VLAN 4, Port Eth 3 is tagged, and Port Eth 6 is untagged.

In order to change the port association, simply toggle the associated boxes

### Info

A port can only be Untagged on one VLAN

## Interfaces

Under “Interfaces” you can configure the individual VLANs. What you can configure varies slightly depending on the WeOS version.

## VLAN Configuration

Auto Fill ▼

+ VLAN

198.18.1.16 Bridgeboy 1@Plant A Bridge 1

**Ports**

VLAN 1

|       |   |
|-------|---|
| Eth 1 | U |
| Eth 2 | U |
| Eth 3 | U |
| Eth 4 | N |
| Eth 5 | - |
| Eth 6 | - |
| Eth 7 | - |
| Eth 8 | - |
| Eth 9 | T |

**Interfaces**

vlan1 / VLAN 1

Name  IGMP ☒ Priority  ▼

Enabled ☒ Distance  1  
255

**Addresses**

|                                  | Addresses                                                                                                                                                         | Static                           | DHCP                             | Link Local                       |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------|----------------------------------|----------------------------------|
| <input type="button" value="🗑"/> | <DHCP>                                                                                                                                                            | <input type="radio"/>            | <input checked="" type="radio"/> | <input type="radio"/>            |
| <input type="button" value="🗑"/> | <Link Local>                                                                                                                                                      | <input type="radio"/>            | <input type="radio"/>            | <input checked="" type="radio"/> |
| <input type="button" value="🗑"/> | <input type="text" value="198"/> <input type="text" value="18"/> <input type="text" value="1"/> <input type="text" value="16"/> / <input type="text" value="24"/> | <input checked="" type="radio"/> | <input type="radio"/>            | <input type="radio"/>            |

+ Address

**Services**

☒ SSH ☒ HTTP ☒ HTTPS ☒ SNMP

▶ Apply

Port Configuration Legend:

- Not member
- U Untagged
- N Untagged Nested
- T Tagged



## VLAN Configuration

Auto Fill

+ VLAN

Port Configuration Legend:

- Not member
- U Untagged
- N Untagged Nested
- T Tagged

198.18.1.16 Plant A Router@Plant A

### Ports

#### VLAN 1

|         |   |
|---------|---|
| Eth 1/1 | U |
| Eth 1/2 | U |
| Eth 1/3 | T |
| Eth 2/1 | - |
| Eth 2/2 | - |
| Eth 2/3 | - |
| Eth 2/4 | - |
| Eth 2/5 | - |
| Eth 2/6 | - |
| Eth 2/7 | - |
| Eth 2/8 | - |
| Eth 3/1 | - |
| Eth 3/2 | - |
| Eth 3/3 | - |
| Eth 3/4 | - |
| Eth 3/5 | - |
| Eth 3/6 | - |
| Eth 3/7 | - |
| Eth 3/8 | - |



### Interfaces

#### vlan1 / VLAN 1

Name  IGMP ☒

Enabled ☒ Distance  1 255

#### Addresses

|  | Addresses        | Static                           | DHCP                             | Primary                             |
|--|------------------|----------------------------------|----------------------------------|-------------------------------------|
|  | <DHCP>           | <input type="radio"/>            | <input checked="" type="radio"/> | <input type="checkbox"/>            |
|  | 198.18.1.16 / 24 | <input checked="" type="radio"/> | <input type="radio"/>            | <input checked="" type="checkbox"/> |

+ Address

#### Services

☒ SSH ☒ HTTP ☒ HTTPS ☒ IPConfig ☒ SNMP

Remove

Add

▶ Apply

 Info

On WeOS4, you must provide one (and only one) Primary address

#### 4.4.7. Network Address-Name Resolution

WeOS 4

WeOS 5

Network Address-Name Resolution is a task that allows for configuration of default gateway, routing and DNS servers

Interface components

The screenshot shows the 'Network Address-Name Resolution' configuration window. At the top, there is a dropdown menu labeled 'Auto Fill'. Below it, the title '10.0.2.4 Machine 11@Plant A Bench 11' is displayed. The configuration is divided into three main sections: 'Global', 'DNS Host/Domain', and 'DNS Server'. The 'Global' section includes 'Default Gateway' (checked, 2.3.4.5), 'DNS Server 1' (checked, 21.32.43.54), and 'DNS Server 2' (checked, 199.199.199.1). The 'DNS Host/Domain' section includes 'DNS Hosts' (weconfig.com and youConfig.net, both checked, with IP addresses 1.2.3.4 and 199.199.199.1 respectively), 'Search Domains' (google.com and westermo.com), and buttons to add hosts and domains. The 'DNS Server' section includes 'Enabled' (checked), 'All Interfaces' (unchecked), and 'Interfaces' (vlan1 selected). An 'Apply' button is at the bottom.

##### Autofill

This collapsed menu contains a group of options for quickly replicating configuration across all selected devices. Default gateway, routing and DNS server 1 / 2 can be set therein and then filled to all selected devices.

##### Device view

Below the autofill section a list of selected devices will appear, with their configuration options presented in three groups. The first group "Global" allows individual device configuration of the same properties as the Autofill section.

The second group "DNS Host/Domain" allows for device specific configuration of DNS Hosts and search domains to pass DNS request forwards to. Each device may have multiple of both options.

The third and final group "DNS Server" allows the user to configure the device to act as a DNS server, and to specify which interfaces that will be part of said server.

## Configuration ▸ Layer 2 Redundancy


### 4.4.8. Fast Reconfiguring Network Topology (FRNT)

WeOS 4

WeOS 5

FRNT is a task that allows for configuration of FRNT rings in the network.

#### Interface Components

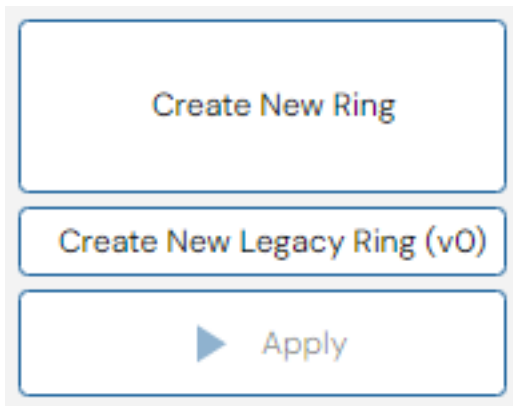

To create a new FRNT ring, click either Create New Ring or Create New Legacy Ring (v0). To edit an existing FRNT ring, select the ring in the drop down menu, and click Edit Ring.




#### Note

RiCo (Ring Coupling) is not configured here. Please see [Ring Coupling](#) for documentation

When creating new rings, or editing existing ones:

- To add devices to a ring: select devices in the topology and click Add
- To remove devices from a ring: select devices in the list of devices in the right, and click Remove
- One device must be designated the role of focal point in the drop down menu Focal Point Device
- To apply changes: click Apply
- To propose ports based on current topology: click Propose Ports
- To manually specify ports: select ports per device
- To abort operation: click the button in the top right corner with a cross - that will take you back to the initial FRNT configuration tab.

#### FRNT v0

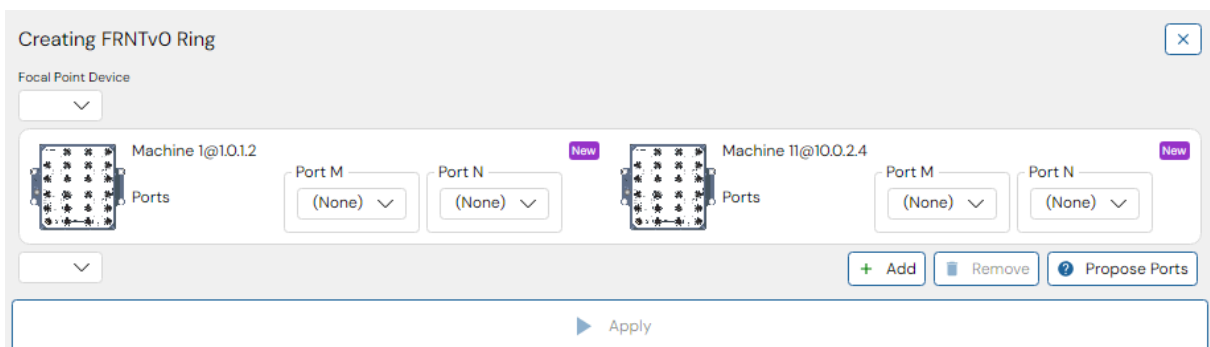

Focal point device:

- No focal point options are applicable

Member devices:

- M port
- N port

Typically, all devices must have an M and N port specified. The exception is so called “horse shoe” rings, where two end devices are allowed to have only one port configured.

## FRNT v2

Creating FRNTv2 Ring

Focal Point Device: [Dropdown] Blocking Port: [Dropdown]

Ring ID: 1 Ring Interval (ms): 500 [Guarded Recovery: ☒

| Machine    | IP       | Ports  | Hello Time |
|------------|----------|--------|------------|
| Machine 1  | 10.1.2   | (None) | 500        |
| Machine 11 | 10.0.2.4 | (None) | 500        |

[+ Add] [Remove] [Propose Ports] [Apply]

Focal point device:

- Ring ID must be specified, and it must be unique across all devices. WeConfig will emit an error if it detects that it is not unique. This field is not editable, it is only editable during creation. Once set, it cannot be changed. To change the ID, one must first delete the ring configuration across the entire device, and then create it again, but with the new ID.
- Optionally specify the blocking port. Note that this is only possible once you’ve set the focal point’s ring ports. Until then, only Auto will be the only available option.
- Optionally change the ring interval
- Optionally enable guarded recovery

Member devices:

- First port
  - Optionally override the default hello time
- Second port
  - Optionally override the default hello time

Typically, all devices must have both ports specified. The exception is for so called “horse shoe” rings, where two end devices are allowed to have only one port configured

#### 4.4.9. High-available Seamless Redundancy / Parallel Redundancy Protocol (HSR/PRP)

WeOS 5

HSR/PRP is a task that allows for configuration of HSR/PRP redundancy in the network.


High-Availability Seamless Redundancy (HSR) and Parallel Redundancy Protocol (PRP) provides seamless failover on link failure. Both build on the same idea of duplicating traffic and can be coupled with each other.

Read more about HSR/PRP in the [WeOS documentation](#)<sup>1</sup>.

##### Info

HSR/PRP is only available for RedBox

New

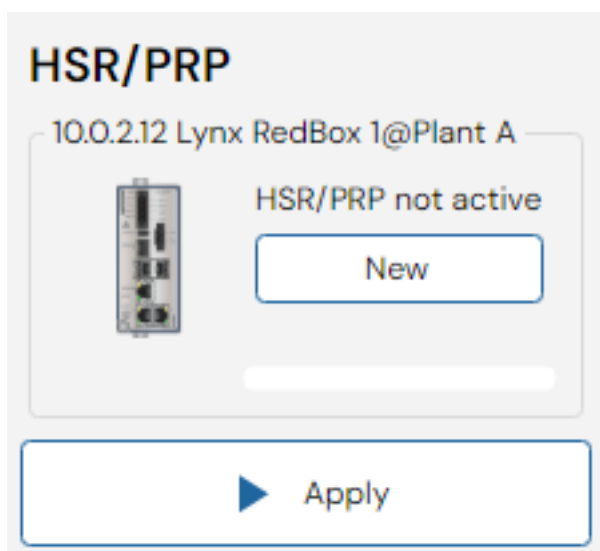


To create a new HSR/PRP ring, click the New button.

---

<sup>1</sup>[https://docs.westermo.com/weos/weos-5/General/HSR\\_PRP.html](https://docs.westermo.com/weos/weos-5/General/HSR_PRP.html)

## Context

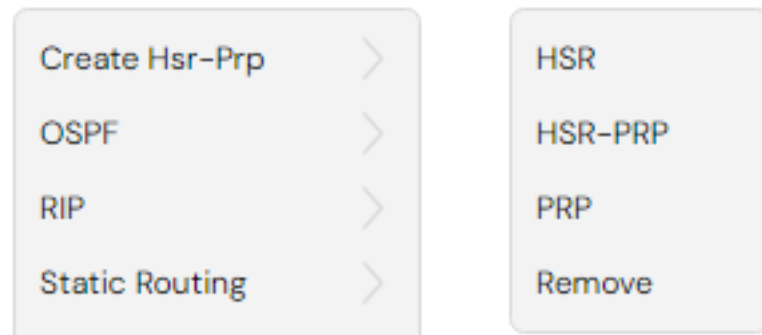

You can also setup HSR/PRP from the context menu.

This will create a default HSR/PRP instance with the following properties:

### Warning

This will override any existing HSR/PRP configuration on the device.

### HSR

| Field              | Value |
|--------------------|-------|
| Enabled            | True  |
| Type               | HSR   |
| Ring ID            | 1     |
| Mode               | H     |
| Supervision Frames | True  |

### PRP

| Field              | Value |
|--------------------|-------|
| Enabled            | True  |
| Type               | PRP   |
| Ring ID            | 1     |
| Supervision Frames | True  |

### HSR-PRP

| Field   | Value |
|---------|-------|
| Enabled | True  |





## Note

Modes:

- H: HSR-tagged mode, the unit inserts HSR tag and forwards traffic.
- N: No forwarding operational mode, just like mode H, except that the unit does not forward traffic from port to port. Intended for testing purposes only.

## PRP

### HSR/PRP

10.0.2.12 Lynx RedBox 1@Plant A



Enabled ☒

Type 

PRP ▼

Ring ID 

1

Supervision Frames ☒

Delete

▶ Apply

| Field              | Description                                                                       |
|--------------------|-----------------------------------------------------------------------------------|
| Enabled            | Enable or disable this PRP instance                                               |
| Type               | Change the type of this instance, this will also change what fields are available |
| Ring ID            | Id of this PRP instance                                                           |
| Supervision Frames | Enable/Disable supervision frames                                                 |

65/240

## HSR/PRP

### HSR/PRP

10.0.2.12 Lynx RedBox 1@Plant A



Enabled ☒

Type HSR-PRP ▼

Ring ID 123

Mode H ▼

Supervision Frames ☒

Pairing PRP Id 234

Pairing LAN Id A ▼

Delete

▶ Apply

| Field              | Description                                                                       |
|--------------------|-----------------------------------------------------------------------------------|
| Enabled            | Enable or disable this HSR/PRP instance                                           |
| Type               | Change the type of this instance, this will also change what fields are available |
| Ring ID            | Id of this HSR/PRP instance                                                       |
| Mode               | The operating mode for HSR. Can be either H or N                                  |
| Supervision Frames | Enable/Disable supervision frames                                                 |
| Pairing PRP Id     | NetId of the PRP network attached to the interlink.                               |
| Pairing LAN Id     | LanId of the PRP network attached to the interlink.                               |

### Note

#### Modes:

- H: HSR-tagged mode, the unit inserts HSR tag and forwards traffic.
- N: No forwarding operational mode, just like mode H, except that the unit does not forward traffic from port to port. Intended for testing purposes only.

 Info

RedBoxes connected to the same PRP network should have the same Pairing PRP Id (NetId)

#### 4.4.10. Media Redundancy Protocol (MRP)

WeOS 4

MRP is a task that allows for configuration of Media Redundancy Protocol<sup>1</sup> rings in the network.

##### Interface Components

### MRP Configuration

10.0.2.4 Machine 11@Plant A Bench 11



+ Add

10.0.2.1 Plant A Router@Plant A



Error

No valid license installed.

Propose Ports

Enable All

▶ Apply

For each selected device, if the device supports / is licensed for MRP configuration, you will be presented with the following options:

| Option       | Description                                                                                 |
|--------------|---------------------------------------------------------------------------------------------|
| ID           | MRP Ring ID                                                                                 |
| Enabled      | Whether or not this MRP ring is active on this device                                       |
| Manager      | Whether or not this device is the manager for this MRP ring                                 |
| Port M       | Which port on the device is considered the first element in the port-pair for this MRP ring |
| Port N       | Which port on the device is considered the first element in the port-pair for this MRP ring |
| Profile Mode | The maximum recovery time profile for this MRP ring                                         |

<sup>1</sup>[https://en.wikipedia.org/wiki/Media\\_Redundancy\\_Protocol](https://en.wikipedia.org/wiki/Media_Redundancy_Protocol)

| Option                | Description                                                                   |
|-----------------------|-------------------------------------------------------------------------------|
| VLAN ID               | Which VLAN to encapsulate the MRP rings signaling on, if any                  |
| React to link changes | Whether or not the MRP manager should react to link change frames             |
| Open Ring detection   | Whether or not the MRP manager should be more careful in detecting open rings |

#### **i** Info

For devices running WeOS 5.11 and newer, up to two ring configurations is supported. Although at most one may configure the device as an MRP client.

Additionally, you may click “Propose Ports” at the bottom of the interface to have suitable MRP ports suggested for you (if any exist).

#### 4.4.11. Rapid Spanning Tree Protocol (RSTP)

WeOS 4

WeOS 5

RSTP is a task that allows for configuration of RSTP-meshes in the network.

##### Interface Components

### RSTP Configuration

10.0.2.3 Machine 10@Plant A Bench 10

☐ Enable

Bridge Prio



| Details    |                                     |                                     |                                     |                                     |                                     |                                     |                                     |                                     |                                     |
|------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| Port       | 1                                   | 2                                   | 3                                   | 4                                   | 5                                   | 6                                   | 7                                   | 8                                   | 9                                   |
| Enable     | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| Admin Edge | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            |
| Path Cost  | <input type="text" value="Auto"/>   | <input type="text" value="Auto"/>   | <input type="text" value="Auto"/>   | <input type="text" value="Auto"/>   | <input type="text" value="Auto"/>   | <input type="text" value="Auto"/>   | <input type="text" value="Auto"/>   | <input type="text" value="Auto"/>   | <input type="text" value="Auto"/>   |

 Apply

Depicted above is the RSTP configuration interface, which is a list of selected devices, in this case one, with RSTP configuration details listed.

Edit the fields directly in the list. To enable RSTP or to set Admin Edge on port level click the “down-arrow” icon to the left of each device in the list.

##### Warning

The network might become momentarily unstable when the configuration is applied, and the connection to devices may be lost.

#### 4.4.12. Ring Coupling (RiCo)

WeOS 4

WeOS 5

RiCo is a task that allows for configuration of ring coupling for rings in the network.

##### Interface Components

Edit couplings

Ring v2 ID: 1  
redfox-4d-31-c0@198.18.2.18

Apply

The initial view of this interface presents you with a dropdown of the detected FRNT rings in the current network topology. Choose a ring and click “Edit couplings” in order to navigate to the RiCo configuration menu. The menu may appear differently depending on the type of ring selected.

##### RiCo V0 / Ring V0

### Editing ring couplings

wolverine2@198.18.2.3

☒ Enabled Hello time 200 ms

Uplinks

| Port                             | Priority | Adjustment | Echo interval | Path cost |
|----------------------------------|----------|------------|---------------|-----------|
| 1<br>Port is part of a FRNT-ring | 1        | 2          |               | Auto      |

+ Add

TheWolverine4e@198.18.2.6

☒ Enabled Hello time 200 ms

Uplinks

| Port | Priority | Adjustment | Echo interval | Path cost |
|------|----------|------------|---------------|-----------|
|------|----------|------------|---------------|-----------|

+ Add

TheWolverine@198.18.2.5

☐ Enabled

Apply

A list of member devices of the selected ring will be shown and RiCo can be enabled by checking the checkbox labeled Enabled on the desired device.

When RiCo is enabled Hello time can be set and Uplinks can be added.

To add an Uplink click the Add button.

- Select a port in the Port dropdown
- Change Priority to the desired value, default is 128
- Change Adjustment to the desired value, default is 0
- Echo Interval is only available for WeOS 4.20 or newer, default value is 200
- Path cost is set default to Auto, To set it manually check the checkbox and fill in the desired value

To remove an uplink click the trashcan button on the row that should be removed.


To abort configuration: click the button in the top right corner with a cross - that will take you back to the initial RiCo configuration tab.

#### Info

RiCo V0 is only supported up until WeOS 5.15

#### RiCo V3 / Ring v2

When choosing to edit the RiCo configuration for an FRNTv2 based ring, you will be presented with the following interface:

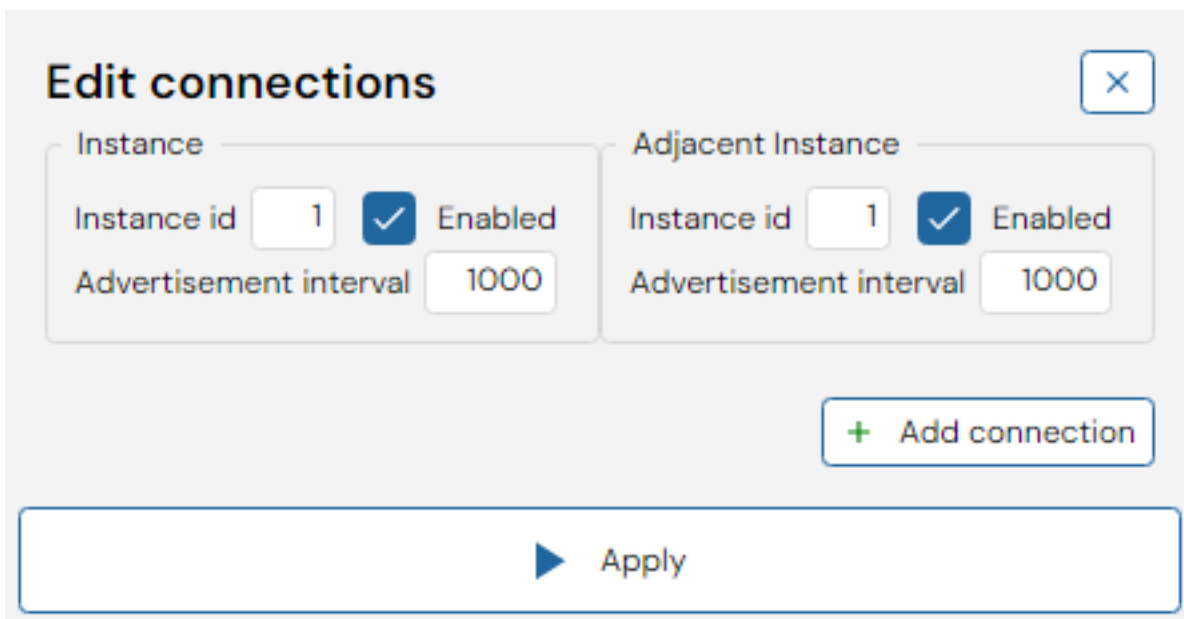

Where the left hand side corresponds to the selected ring instance, and the right hand side corresponds to any detected adjacent ring instance. Herein, you may specify:

- The instance ID
- Whether or not the RiCo instance is enabled
- The advertisement interval. Following the instance options, you may specify a number of connections, added via the Add connection button at the bottom right of the interface. In the

example depicted above, two connections have been added, each with a port, a priority, a hello interval and a preempt choice.

WeConfig will attempt to automatically detect the corresponding right hand side device whenever a left hand side device is selected, if it cannot do so, you may still specify the righthand side device manually.

### 4.4.13. Firewall

WeOS 4

WeOS 5

Firewall is a licensed task that allows for configuration of firewall rules on selected devices. The current set of devices support by this task is WeOS 4 and WeOS 5 devices.

#### Interface Components

**Firewall Configuration**

198.18.1.1 Machine 10@Plant A Bench 10

General | Logging | Input Rules | Forward Rules | Port Forwarding Rules | NAT Rules | ALG Helpers | Conntrack

Firewall Enabled ☒

Default Input Policy Drop ▾

Default Forward Policy Drop ▾

Apply

Depicted above you can observe how the interface might appears for a selection of a singular WeOS 5 device. Where the configuration options for each device is divided into several tabs with the following contents:

What features are available depends on the WeOS version, and whether or not the device is an Extended device.

| Tab              | Description                                                | WeOS 4/5 Standard | WeOS 4 Extended | WeOS 5 Extended |
|------------------|------------------------------------------------------------|-------------------|-----------------|-----------------|
| General          | Enable / Disable firewall, and default policy              | Yes               | Yes             | Yes             |
| Logging          | Enable / Disable logging, and configure rate limit on logs | Yes               | Yes             | Yes             |
| Input Rules      | Rules for incoming packets directed to the device          | Yes               | Yes             | Yes             |
| Forward Rules    | Rules for incoming packets not directed to the device      | No                | Yes             | Yes             |
| DPI Filter Rules | Rules for incoming                                         | No                | Yes             | No              |

| Tab                   | Description                                                       | WeOS 4/5<br>Standard | WeOS 4<br>Extended | WeOS 5<br>Extended |
|-----------------------|-------------------------------------------------------------------|----------------------|--------------------|--------------------|
|                       | packets with a larger scope                                       |                      |                    |                    |
| Port Forwarding Rules | Expose internal devices via specific ports                        | No                   | Yes                | Yes                |
| NAT Rules             | Rules for Network Address Translation                             | No                   | Yes                | Yes                |
| Modifier Rules        | Rules for modifying the IP header in routed traffic               | No                   | Yes                | No                 |
| ALG Helpers           | Shorthand Rules for specific protocols                            | No                   | Yes                | Yes                |
| Conntrack             | Maintains information about all incoming and outgoing connections | No                   | Yes                | Yes                |

## General

### Firewall Configuration

198.18.1.1 Machine 10@Plant A Bench 10

General
Logging
Input Rules
Forward Rules
Port Forwarding Rules
NAT Rules
ALG Helpers
Conntrack



Firewall Enabled ☒

Default Input Policy Drop ▾

Default Forward Policy Drop ▾

Warning
Interface 'vlan2' is blocked by the firewall.  
[Open ANY to ANY rule and go to conntrack to analyze traffic](#)

▶ Apply

The general tab allows for enabling or disabling the firewall on the device, and setting the default policy for the firewall. The default policy can be set to either ACCEPT or DROP. The default policy is the action that the firewall will take if no rules are matched.

For WeOS 5 devices, the firewall can be disabled and rules can still be set, but they will not be enforced until the firewall is enabled.

#### Info

Default Forward Policy is only available on Extended devices.


#### Admonitions

As depicted in the image above, the firewall configuration task may display certain admonitions to the user, depending on the current configuration of the device. These admonitions are hints or warnings that inform the user about potential issues with the current configuration, either in terms of functionality or security posture.

Some examples of admonitions that may appear are:

- Default policy issues: If the default policy is set to ACCEPT, an admonition may appear warning the user about the potential security risks of this configuration.
- Unlimited logging: If logging is enabled with no rate limit, an admonition may appear warning the user about the potential for denial-of-service attacks.
- VLAN X is blocked: If there are VLANs that are completely blocked by the current firewall rules, an admonition may appear listing those VLANs.
- Service Y is unreachable on VLAN X: If there are services on the device that are unreachable due to the current firewall rules, an admonition may appear listing those services.

#### WeOS 4

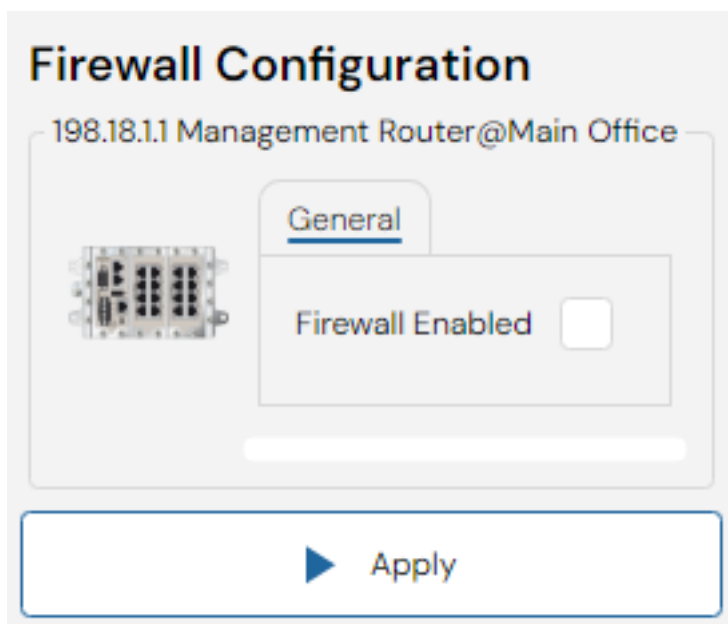

For WeOS 4 devices, the firewall must be enabled to be able to set any rules.

### Firewall Configuration

198.18.1.1 Management Router@Main Office

- General
- Logging
- Input Rules
- Forward Rules
- DPI Filter Rules
- Port Forwarding Rules
- NAT Rules
- Modifier Rules
- ALG Helpers
- Conntrack

Firewall Enabled ☒

Stateful Inspection Enabled ☒

Default Input Policy Drop ▾

Default Forward Policy Drop ▾



**Warning**  
Interface 'vlan1' is blocked by the firewall.  
[Open ANY to ANY rule and go to conntrack to analyze traffic](#)



**Warning**  
Interface 'vlan2' is blocked by the firewall.  
[Open ANY to ANY rule and go to conntrack to analyze traffic](#)



**Warning**  
Interface 'vlan3' is blocked by the firewall.  
[Open ANY to ANY rule and go to conntrack to analyze traffic](#)

▶ Apply

WeOS 4 devices also have the option to set Stateful Inspection, which is an ability to drop packets of invalid state.

## Logging

### Firewall Configuration

198.18.1.1 Machine 10@Plant A Bench 10

- General
- Logging
- Input Rules
- Forward Rules
- Port Forwarding Rules
- NAT Rules
- ALG Helpers
- Conntrack

Logging Enabled ☒

Limit 123 10000 / Day ▾

▶ Apply

The logging tab allows for enabling or disabling logging of packets that are matched by the firewall rules. The rate limit for logging can also be set, which is the maximum number of logs that can be generated per given time unit.

WeOS 5 devices defaults to unlimited logging, while WeOS 4 devices defaults to 5 logs per second.

### Info

The limit should be in the range 1-10000, and the time unit can be set to either second, minute, hour, day, or unlimited.

 **Warning**

Configuring logging with no rate limit may lower the security posture of the device by opening up for denial-of-service attacks.

## Input Rules

The input rules tab allows for setting rules for incoming packets directed to the device. The rules can be set to either ACCEPT or DROP packets that match the rule.

WeOS 5 defaults with no Input Rules, while WeOS 4 defaults with rules that allow ICMP access to the device.

 **Info**

The input rules are checked after the routing decision and applies to packets that are directed to the local device and processes running on the device itself.

 **Tip**

Drag the rows to reorder the rules.

## Add Input Rule - WeOS 5

To add a rule to a WeOS 5 device, click the Add button. This will open a modal where the following fields can be set:

Action Accept ▾

Protocol TCP ▾

At least one of

Incoming Interface ▾

Source Address

Source Port(s) 65535 - 65535

Destination Address

Destination Port(s) 65535 - 65535

Comment

Inline Counter ☐

Bind Counter

Logging ☐

 Apply

| Field               | Description                                                                                                                                 | Required | Notes                                                            |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------|----------|------------------------------------------------------------------|
| Action              | Accept or drop traffic matching the specified rule                                                                                          | Yes      | -                                                                |
| Protocol            | The protocol type of the IP payload. Typically TCP or UDP but the filtering can also be made to match other protocols such as ICMP and ESP. | Yes      | Will affect what fields are available                            |
| Incoming Interface  | The interface where the packet comes in                                                                                                     | Yes*     | See info section below                                           |
| Source Address      | The source IP address of the packet                                                                                                         | Yes*     | See info section below                                           |
| Source Port(s)      | The source port(s) of the packet                                                                                                            | Yes*     | Only available if Protocol is TCP or UDP. See info section below |
| Destination Address | The destination IP address of the packet                                                                                                    | Yes*     | See info section below                                           |

| Field               | Description                                                                                                                      | Required | Notes                                                                                                 |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------|----------|-------------------------------------------------------------------------------------------------------|
| Destination Port(s) | The destination port(s) of the packet                                                                                            | Yes*     | Only available if Protocol is TCP or UDP. See info section below                                      |
| Comment             | A comment of the rule                                                                                                            | No       | -                                                                                                     |
| Inline Counter      | The rule uses a counter that only shows in the raw output. This counter is reset any time the firewall configuration is changed. | No       | -                                                                                                     |
| Bind Counter        | The Counter the rule is assigned to                                                                                              | No       | Can only be set if Inline Counter is not checked. If the Counter does not exist, one will be created. |
| Logging             | Log traffic matching this rule                                                                                                   | No       | Logging must be enabled in the Logging tab                                                            |

#### Info

Yes\* =

If Protocol is TCP or UDP:

- At least one of Incoming Interface, Source Address, Destination Address, Source Port(s), or Destination Port(s) must be set.

If Protocol is not TCP or UDP:

- At least one of Incoming Interface, Source Address, or Destination Address must be set.

#### Add Input Rule - WeOS 4

To add a rule to a WeOS 4 device, click the Add button. This will open a modal where the following fields can be set:

Active ☒

Action Accept ▾

Protocol TCP ▾

Incoming Interface ▾

Source Address

Source Port(s)  -

Destination Port(s)  -

Logging ☐

 Apply

| Field               | Description                                                                                                                                 | Required | Notes                                      |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------|----------|--------------------------------------------|
| Active              | Is this rule active?                                                                                                                        | Yes      | -                                          |
| Action              | Accept or drop traffic matching the specified rule                                                                                          | Yes      | -                                          |
| Protocol            | The protocol type of the IP payload. Typically TCP or UDP but the filtering can also be made to match other protocols such as ICMP and ESP. | Yes      | Will affect what fields are available      |
| Incoming Interface  | The interface where the packet comes in                                                                                                     | No       | -                                          |
| Source Address      | The source IP address of the packet                                                                                                         | No       | -                                          |
| Source Port(s)      | The source port(s) of the packet                                                                                                            | No       | Only available if Protocol is TCP or UDP   |
| Destination Port(s) | The destination port(s) of the packet                                                                                                       | No       | Only available if Protocol is TCP or UDP   |
| Logging             | Log traffic matching this rule                                                                                                              | No       | Logging must be enabled in the Logging tab |

## Merge Input Rules

**Firewall Configuration**  
198.18.1.1 Machine 10@Plant A Bench 10

General Logging **Input Rules** Forward Rules Port Forwarding Rules NAT Rules ALG Helpers Conntrack

Input rules are checked after the routing decision and applies to packets that are directed to the local device and processes running on the device itself.

|   | Action | Incoming Interface | Source Address | Source Port(s) | Destination Address | Destination Port(s) | Protocol | Comment                 | Comment | Logging |
|---|--------|--------------------|----------------|----------------|---------------------|---------------------|----------|-------------------------|---------|---------|
| 1 | Accept |                    |                |                |                     | 22                  | ICMP     | Ping                    |         | No      |
| 2 | Accept |                    | 10.0.2.0/24    |                |                     |                     | TCP      | SSH, management network |         | No      |
| 3 | Accept | vlan2              |                |                |                     |                     | TCP      |                         |         | No      |
| 4 | Accept | vlan2              |                |                |                     |                     | UDP      |                         |         | Yes     |
| 5 | Accept |                    | 10.0.6.0/24    |                |                     | 8080                | TCP      | Web access, site A      |         | No      |
| 6 | Accept |                    | 10.0.7.0/24    |                |                     | 8080                | TCP      | Web access, site B      |         | No      |

Tip: Drag the rows to reorder them

[+ Add](#) [Edit](#) [Remove](#) [Try Merge All](#)

[Apply](#)

Input rules can be merged. If two or more rules could be expressed as a single rule with a broader subnet range, then a button to merge those rules will appear to the right on the relevant rows. When hovering over that button, the rules that will be merged are highlighted.

You can also click the “Try Merge All” button to merge all rules at once.

### Forward Rules

The forward rules tab allows for setting rules for incoming packets not directed to the device. The rules can be set to either ACCEPT or DROP packets that match the rule.

The default is no Forward Rules.

#### Info

Only available on Extended devices.

#### Info

The forward rules are checked after the routing decision and applies to packets that are not directed to the local device.

#### Tip

Drag the rows to reorder the rules.

### Add Forward Rule - WeOS 5

To add a rule to a WeOS 5 device, click the Add button. This will open a modal where the following fields can be set:

Action Accept ▾

Protocol TCP ▾

At least one of

Incoming Interface ▾

Outgoing Interface ▾

Source Address

Source Port(s) 65535 - 65535

Destination Address

Destination Port(s) 65535 - 65535

Comment

Inline Counter ☐

Bind Counter

Logging ☐

 Apply

| Field              | Description                                                                                                                                 | Required | Notes                                 |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------|----------|---------------------------------------|
| Action             | Accept or drop traffic matching the specified rule                                                                                          | Yes      | -                                     |
| Protocol           | The protocol type of the IP payload. Typically TCP or UDP but the filtering can also be made to match other protocols such as ICMP and ESP. | Yes      | Will affect what fields are available |
| Incoming Interface | The interface where the packet comes in                                                                                                     | Yes*     | See info section below                |
| Outgoing Interface | The interface where the packet is sent out                                                                                                  | Yes*     | See info section below                |
| Source Address     | The source IP address of the packet                                                                                                         | Yes*     | See info section below                |

| Field               | Description                                                                                                                      | Required | Notes                                                                                                 |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------|----------|-------------------------------------------------------------------------------------------------------|
| Source Port(s)      | The source port(s) of the packet                                                                                                 | Yes*     | Only available if Protocol is TCP or UDP. See info section below                                      |
| Destination Address | The destination IP address of the packet                                                                                         | Yes*     | See info section below                                                                                |
| Destination Port(s) | The destination port(s) of the packet                                                                                            | Yes*     | Only available if Protocol is TCP or UDP. See info section below                                      |
| Comment             | A comment of the rule                                                                                                            | No       | -                                                                                                     |
| Inline Counter      | The rule uses a counter that only shows in the raw output. This counter is reset any time the firewall configuration is changed. | No       | -                                                                                                     |
| Bind Counter        | The Counter the rule is assigned to                                                                                              | No       | Can only be set if Inline Counter is not checked. If the Counter does not exist, one will be created. |
| Logging             | Log traffic matching this rule                                                                                                   | No       | Logging must be enabled in the Logging tab                                                            |

### Info

Yes\* =

If Protocol is TCP or UDP:

- At least one of Incoming Interface, Outgoing Interface, Source Address, Destination Address, Source Port(s), or Destination Port(s) must be set.

If Protocol is not TCP or UDP:

- At least one of Incoming Interface, Outgoing Interface, Source Address, or Destination Address must be set.

### Add Forward Rule - WeOS 4

To add a rule to a WeOS 4 device, click the Add button. This will open a modal where the following fields can be set:

Active ☒

Action Accept ▾

Protocol TCP ▾

Incoming Interface ▾

Source Address

Source Port(s)  -

At least one of

Outgoing Interface ▾

Destination Address

Destination Port(s)  -

Logging ☐

✓ Apply

| Field               | Description                                                                                                                                 | Required | Notes                                    |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------|----------|------------------------------------------|
| Active              | Is this rule active?                                                                                                                        | Yes      | -                                        |
| Action              | Accept or drop traffic matching the specified rule                                                                                          | Yes      | -                                        |
| Protocol            | The protocol type of the IP payload. Typically TCP or UDP but the filtering can also be made to match other protocols such as ICMP and ESP. | Yes      | Will affect what fields are available    |
| Incoming Interface  | The interface where the packet comes in                                                                                                     | No       | -                                        |
| Source Address      | The source IP address of the packet                                                                                                         | No       | -                                        |
| Source Port(s)      | The source port(s) of the packet                                                                                                            | No       | Only available if Protocol is TCP or UDP |
| Outgoing Interface  | The interface where the packet is sent out                                                                                                  | Yes*     | See info section below                   |
| Destination Address | The destination IP address of the packet                                                                                                    | Yes*     | See info section below                   |

| Field               | Description                           | Required | Notes                                      |
|---------------------|---------------------------------------|----------|--------------------------------------------|
| Destination Port(s) | The destination port(s) of the packet | No       | Only available if Protocol is TCP or UDP   |
| Logging             | Log traffic matching this rule        | No       | Logging must be enabled in the Logging tab |

### Info

Yes\* = At least one of Outgoing Interface or Destination Address must be set.

## Merge Forward Rules

**Firewall Configuration**  
198.18.11 Machine 10@Plant A Bench 10

General Logging Input Rules **Forward Rules** Port Forwarding Rules NAT Rules ALG Helpers Conntrack

Forward rules are checked after the routing decision and applies to packets that are not directed to the local device.

|   | Action | Incoming Interface | Outgoing Interface | Source Address | Source Port(s) | Destination Address | Destination Port(s) | Protocol | Comment                     | Comment | Logging |                                                                                     |
|---|--------|--------------------|--------------------|----------------|----------------|---------------------|---------------------|----------|-----------------------------|---------|---------|-------------------------------------------------------------------------------------|
| 1 | Accept | vlan3              |                    |                |                | 10.0.3.0/24         |                     | Unknown  | VLAN 3 Forwarding           |         | No      |                                                                                     |
| 2 | Accept | vlan5              |                    |                |                | 10.0.8.0/24         |                     | Unknown  | VLAN 5 Forwarding, subnet A |         | No      |  |
| 3 | Accept | vlan5              |                    |                |                | 10.0.9.0/24         |                     | Unknown  | VLAN 5 Forwarding, subnet B |         | No      |  |
| 4 | Accept | vlan4              | vlan40             | 4.4.0.0/16     | 23 - 123       | 10.0.4.0/24         | 22 - 234            | TCP      | VLAN 4 Forwarding           |         | Yes     |                                                                                     |

Tip: Drag the rows to reorder them

 Add  Edit  Remove  Try Merge All

 Apply

Forward rules can be merged. If two or more rules could be expressed as a single rule with a broader subnet range, then a button to merge those rules will appear to the right on the relevant rows. When hovering over that button, the rules that will be merged are highlighted.

You can also click the “Try Merge All” button to merge all rules at once.

## DPI Filter Rules

Deep Packet Inspection (DPI) rules work similar to regular Packet Filter (Input/Forward) rules, but look further into the payload when deciding what packets to allow or drop.

The default is no DPI Filter Rules.

### Info

Only available for Extended WeOS 4 devices.

### Tip

Drag the rows to reorder the rules.

## Add DPI Filter Rule

To add a rule to a WeOS 4 device, click the Add button. This will open a modal where the following fields can be set:

Active ☒

Action Accept

Protocol TCP

Incoming Interface

Source Address

Source Port(s)  -

Destination Port(s) \*  -

Logging ☐

At least one of

Outgoing Interface

Destination Address

Modbus

Function  -

Unit  -

Register  -

 Apply

| Field              | Description                                        | Required | Notes                  |
|--------------------|----------------------------------------------------|----------|------------------------|
| Active             | Is this rule active?                               | Yes      | -                      |
| Action             | Accept or drop traffic matching the specified rule | Yes      | Only Accept is allowed |
| Protocol           | The protocol type of the IP payload                | Yes      | Only TCP is allowed    |
| Incoming Interface | The interface where the packet comes in            | No       | -                      |
| Source Address     | The source IP address of the packet                | No       | -                      |
| Source Port(s)     | The source port(s) of the packet                   | No       | -                      |

| Field               | Description                                                                                                                                      | Required | Notes                                      |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|----------|--------------------------------------------|
| Destination Port(s) | The destination port(s) of the packet                                                                                                            | No       | Default is 502                             |
| Logging             | Log traffic matching this rule                                                                                                                   | No       | Logging must be enabled in the Logging tab |
| Outgoing Interface  | The interface where the packet is sent out                                                                                                       | Yes*     | See info section below                     |
| Destination Address | The destination IP address of the packet                                                                                                         | Yes*     | See info section below                     |
| Modbus Function     | DPI can filter on Modbus function codes. A range of codes can be specified.                                                                      | No       | -                                          |
| Modbus Unit         | DPI can filter on Modbus unit ID. More than one Modbus device may sit behind the same IP address, use this parameter to specify a single device. | No       | -                                          |
| Modbus Register     | DPI can filter on Modbus register addresses. Note that the meaning of this filter varies depending on the function code.                         | No       | -                                          |

#### Info

Yes\* = At least one of Outgoing Interface or Destination Address must be set.

### Port Forwarding Rules

The port forwarding rules tab allows for exposing internal devices via specific ports. The rules can be set to either ACCEPT or DROP packets that match the rule.

The default is no Port Forwarding Rules.

#### Info

Only available on Extended devices.

#### Tip

Drag the rows to reorder the rules.

### Add Port Forwarding Rule - WeOS 5

To add a rule to a WeOS 5 device, click the Add button. This will open a modal where the following fields can be set:

Incoming Interface   
 Destination Address   
 Destination Port(s) \*  -   
 To Address \*  .  .  .   
 To Port   
 Protocol    
 Comment   
 Logging ☐

| Field               | Description                                                   | Required | Notes                                      |
|---------------------|---------------------------------------------------------------|----------|--------------------------------------------|
| Incoming Interface  | The interface where the packet comes in                       | No       | -                                          |
| Destination Address | The destination IP address of the packet                      | No       | -                                          |
| Destination Port(s) | The destination port(s) of the packet                         | Yes      | -                                          |
| To Address          | The destination address where the packets are to be forwarded | Yes      | -                                          |
| To Port             | The destination port where the packets are to be forwarded    | Yes      | -                                          |
| Protocol            | The protocol type of the IP payload                           | Yes      | TCP or UDP                                 |
| Comment             | A comment of the rule                                         | No       | -                                          |
| Logging             | Log traffic matching this rule                                | No       | Logging must be enabled in the Logging tab |

#### Add Port Forwarding Rule - WeOS 4

To add a rule to a WeOS 4 device, click the Add button. This will open a modal where the following fields can be set:

Incoming Interface \*

Destination Address

Destination Port(s) \*  -

To Address \*  .  .  .

To Port

Protocol

Logging ☐

 **Apply**

| Field               | Description                                                   | Required | Notes                                      |
|---------------------|---------------------------------------------------------------|----------|--------------------------------------------|
| Incoming Interface  | The interface where the packet comes in                       | Yes      | -                                          |
| Destination Address | The destination IP address of the packet                      | No       | -                                          |
| Destination Port(s) | The destination port(s) of the packet                         | Yes      | -                                          |
| To Address          | The destination address where the packets are to be forwarded | Yes      | -                                          |
| To Port             | The destination port where the packets are to be forwarded    | Yes      | -                                          |
| Protocol            | The protocol type of the IP payload                           | Yes      | TCP, UDP, or Any                           |
| Logging             | Log traffic matching this rule                                | No       | Logging must be enabled in the Logging tab |

### NAT Rules

Network Address Translation (NAT) can be used to hide private subnets behind a single public IP address.

The default is no NAT Rules.

#### Info

Only available on Extended devices.



#### Tip

Drag the rows to reorder the rules.

#### Add NAT Rule - WeOS 5

To add a rule to a WeOS 5 device, click the Add button. This will open a modal where the following fields can be set:

| Field              | Description                                | Required | Notes                                      |
|--------------------|--------------------------------------------|----------|--------------------------------------------|
| Type               | The type of NAT rule                       | Yes      | Only NAPT is supported on WeOS 5           |
| Outgoing Interface | The interface where the packet is sent out | Yes      | -                                          |
| Source Address     | The source IP address of the packet        | No       | -                                          |
| Comment            | A comment of the rule                      | No       | -                                          |
| Logging            | Log traffic matching this rule             | No       | Logging must be enabled in the Logging tab |

#### Add NAT Rule - WeOS 4

To add a rule to a WeOS 4 device, click the Add button. This will open a modal where the following fields can be set:

NAPT:

Active ☒

Type NAPT ▾

Incoming Interface ▾

Source Address

Outgoing Interface \* vlan1 ▾

Automatic Filter Rule ☐

Logging ☐

 Apply

| Field                 | Description                                                                                                                                                                                                         | Required | Notes                                               |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|-----------------------------------------------------|
| Active                | Is this rule active?                                                                                                                                                                                                | Yes      | -                                                   |
| Type                  | The type of NAT rule                                                                                                                                                                                                | Yes      | NAPT or 1:1, will change what fields are available. |
| Incoming Interface    | The interface where the packet comes in                                                                                                                                                                             | No       | -                                                   |
| Source Address        | The source IP address of the packet                                                                                                                                                                                 | No       | -                                                   |
| Outgoing Interface    | The interface where the packet is sent out                                                                                                                                                                          | Yes      | -                                                   |
| Automatic Filter Rule | If set, an automatic (invisible) packet filter rule will be created in the forward filtering chain allowing packets matching this NAT rule. Do not set this option if you want to manage forwarding rules yourself. | No       | -                                                   |
| Logging               | Log traffic matching this rule                                                                                                                                                                                      | No       | Logging must be enabled in the Logging tab          |

1-to-1:

Active ☒

Type 1-to-1 ▾

Incoming Interface \* ▾

VRID 123 ▾

Destination Address \* 203 . 0 . 113 . 0 / 24

New Address \* 198 . 51 . 100 . 0 / 24

Automatic Filter Rule ☒

Proxy ARP ☒

Logging ☐

 Apply

| Field                 | Description                                                                                                                                            | Required | Notes                                                                                      |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|----------|--------------------------------------------------------------------------------------------|
| Active                | Is this rule active?                                                                                                                                   | Yes      | -                                                                                          |
| Type                  | The type of NAT rule                                                                                                                                   | Yes      | NAPT or 1:1, will change what fields are available.                                        |
| Incoming Interface    | The interface where the packet comes in                                                                                                                | Yes      | -                                                                                          |
| VRID                  | Virtual Router ID                                                                                                                                      | No       | Make sure the VRID exists in the device, or it will not 'stick' when applying the NAT Rule |
| Destination Address   | Packets arriving on the inbound interface and has the IP destination within this subnet will be NATed                                                  | Yes      | -                                                                                          |
| New Address           | The new destination IP network for the NAT                                                                                                             | Yes      | The subnet size of Destination Address and New Address must be the same                    |
| Automatic Filter Rule | If set, an automatic (invisible) packet filter rule will be created in the forward filtering chain allowing packets matching this NAT rule. Do not set | No       | -                                                                                          |

| Field     | Description                                                                                                                                                                                                                                                                                                                                                                                                                 | Required | Notes                                      |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|--------------------------------------------|
|           | this option if you want to manage forwarding rules yourself.                                                                                                                                                                                                                                                                                                                                                                |          |                                            |
| Proxy ARP | WeOS 1-to-1 NAT includes a proxy ARP mechanism, which makes the WeOS unit answer on ARP requests for the external network (Destination Address). The router will only answer on ARP requests originating from the network connected to the Incoming Interface. This makes it possible to use 1-to-1 NAT to pick up traffic to a specific subnet from within a larger network without the need of explicit routing settings. | No       | -                                          |
| Logging   | Log traffic matching this rule                                                                                                                                                                                                                                                                                                                                                                                              | No       | Logging must be enabled in the Logging tab |

#### Modifier Rules

Changes the DSCP bits in the IP header for routed traffic.

The default is no Modifier Rules.

#### Info

Only available for Extended WeOS 4 devices.

#### Tip

Drag the rows to reorder the rules.

#### Add Modifier Rule

To add a rule to a WeOS 4 device, click the Add button. This will open a modal where the following fields can be set:

Active ☒

Incoming Interface

Outgoing Interface

Protocol

Source Address

Source Port(s)  -

Destination Address

Destination Port(s)  -

DSCP

Set Value

Adjust Priority ☒

 Apply

| Field                | Description                                                                                                                                 | Required | Notes             |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------|----------|-------------------|
| Active               | Is this rule active?                                                                                                                        | Yes      | -                 |
| Incoming Interface   | The interface where the packet comes in                                                                                                     | No       | -                 |
| Outgoing Interface   | The interface where the packet is sent out                                                                                                  | No       | -                 |
| Protocol             | The protocol type of the IP payload. Typically TCP or UDP but the filtering can also be made to match other protocols such as ICMP and ESP. | Yes      | -                 |
| Source Address       | The source IP address of the packet                                                                                                         | No       | -                 |
| Source Port(s)       | The source port(s) of the packet                                                                                                            | No       | -                 |
| Destination Address  | The destination IP address of the packet                                                                                                    | No       | -                 |
| Destination Port(s)  | The destination port(s) of the packet                                                                                                       | No       | -                 |
| DSCP Set Value       | The DSCP value to be set for packets matching this rule                                                                                     | Yes      | Valid values 0-63 |
| DSCP Adjust Priority | Indicates if the modified DSCP value should be used for switch internal                                                                     | No       | -                 |

| Field | Description                                                 | Required | Notes |
|-------|-------------------------------------------------------------|----------|-------|
|       | prioritising and applied to VLAN-priority on tagged packets |          |       |

## ALG Helpers

Application Layer Gateway (ALG) helpers are shorthand rules for specific protocols.

The default is no ALG Helpers.

### Info

Only available on Extended devices.

### Firewall Configuration

198.18.1.1 Machine 10@Plant A Bench 10

General
Logging
Input Rules
Forward Rules
Port Forwarding Rules
NAT Rules
ALG Helpers
Conntrack



Application Level Gateway (ALG) helpers

FTP
☐
Port
21
65535

TFTP
☐
Port
69
65535


**Warning**  
Interface 'vlan2' is blocked by the firewall,  
[Open ANY to ANY rule and go to conntrack to analyze traffic](#)

▶ Apply

FTP and TFTP are the only ALG Helpers available for WeOS 5 devices.

### Note

The ability to specify FTP/TFTP ports is available starting with WeOS 5.26 and upwards.

## WeOS 4

**Firewall Configuration**  
198.18.1.1 Management Router@Main Office

General Logging Input Rules Forward Rules DPI Filter Rules Port Forwarding Rules NAT Rules Modifier Rules ALG Helpers Conntrack

Application Level Gateway (ALG) helpers

FTP ☐

H.323 ☐

IRC ☐

PPTP ☐

SIP ☐

TFTP ☐

**Warning**  
Interface 'vlan1' is blocked by the firewall,  
[Open ANY to ANY rule and go to conntrack to analyze traffic](#)

**Warning**  
Interface 'vlan2' is blocked by the firewall,  
[Open ANY to ANY rule and go to conntrack to analyze traffic](#)

**Warning**  
Interface 'vlan3' is blocked by the firewall,  
[Open ANY to ANY rule and go to conntrack to analyze traffic](#)

► Apply

The following ALG Helpers are available for WeOS 4 devices:

- FTP
- H.323
- IRC
- PPTP
- SIP
- TFTP

## Conntrack

Conntrack maintains information about all incoming and outgoing connections.

**Firewall Configuration**  
198.18.1.1 Machine 10@Plant A Bench 10

General Logging Input Rules Forward Rules Port Forwarding Rules NAT Rules ALG Helpers Conntrack

**Forward**

|         | Timestamp | Protocol | Source Address | Source Port | Source Vlan | Destination Address | Destination Port | Destination Vlan |
|---------|-----------|----------|----------------|-------------|-------------|---------------------|------------------|------------------|
| Forward | 12:12:12  | TCP      | 169.254.1.1    |             |             | 8.8.8.8             | HTTPS            |                  |
| Forward | 12:12:13  | UDP      | 169.254.1.2    |             |             | 255.255.255.255     | 404              |                  |
| Forward | 12:12:14  | IGMP     | 169.254.1.3    |             |             | 127.0.0.1           |                  |                  |
| Forward | 12:12:23  | Raw      | 127.0.0.1      |             |             | 0.0.0.0             | 9                |                  |

**Input**

|       | Timestamp | Protocol | Source Address | Source Port | Source Vlan | Destination Address | Destination Port | Destination Vlan |
|-------|-----------|----------|----------------|-------------|-------------|---------------------|------------------|------------------|
| Input | 12:13:23  | TCP      | 10.0.2.2       |             |             | 10.0.2.3            | SSH              |                  |
| Input | 13:12:23  | UDP      | 10.0.2.1       |             |             | 10.0.2.3            | SNMP             |                  |

Clear Refresh Auto Refresh Auto Refresh Limit 1 minutes Stop Add All

► Apply

## Info

For WeOS 5 devices, the firewall must be enabled to be able to access the conntrack.  
Enable the firewall in the General tab and press Apply.

## Tip

Click on the column headers to sort the table by that column.

| Field               | Description                                                                                                                                                  |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Timestamp           | Timestamp of when the conntrack entry was read. This is NOT a timestamp of when the connection was made. Some entries stay in the conntrack for a long time. |
| Protocol            | The IP protocol of the conntrack entry                                                                                                                       |
| Source Address      | The source IP address, original direction                                                                                                                    |
| Source Port         | The source port, original direction                                                                                                                          |
| Source Vlan         | The source vlan, original direction                                                                                                                          |
| Destination Address | The destination IP address, original direction                                                                                                               |
| Destination Port    | The destination port, original direction                                                                                                                     |
| Destination Vlan    | The destination vlan, original direction                                                                                                                     |

## Info

Vlan is only shown if WeConfig is able to derive it from the corresponding IP address (otherwise this field will be empty)

## Create rule from conntrack entry

Firewall Configuration

198.18.1.1 Machine 10@Plant A Bench 10

General

Logging

Input Rules

Forward Rules

Port Forwarding Rules

NAT Rules

ALG Helpers

Conntrack

Forward

Timestamp

Protocol

Source Address

Source Port

Source Vlan

Destination Address

Destination Port

Destination Vlan

Forward

14:15:16

TCP

198.18.1.99

60071

vlan2

198.18.1.14

HTTP

vlan3

Input

Timestamp

Protocol

Source Address

Source Port

Source Vlan

Destination Address

Destination Port

Destination Vlan

Clear

Refresh

Auto Refresh

Auto Refresh Limit

1

minutes

Stop

Add All

Warning

Interface 'vlan2' is blocked by the firewall.

Open ANY to ANY rule and go to conntrack to analyze traffic

Apply

Some conntrack entries has a green arrow next to them. Click that arrow to create a new rule based on the conntrack entry.

**Firewall Configuration**  
198.18.1.1 Machine 10@Plant A Bench 10

General Logging Input Rules **Forward Rules** Port Forwarding Rules NAT Rules ALG Helpers Conntrack

Forward rules are checked after the routing decision and applies to packets that are not directed to the local device.

|   | Action | Incoming Interface | Outgoing Interface | Source Address | Source Port(s) | Destination Address | Destination Port(s) | Protocol | Comment                  | Comment | Logging |
|---|--------|--------------------|--------------------|----------------|----------------|---------------------|---------------------|----------|--------------------------|---------|---------|
| 1 | Accept | vlan2              | vlan3              | 198.18.1.99/32 | 60071          | 198.18.1.14/32      | 80                  | TCP      | Generated from Conntrack |         | No      |

Tip: Drag the rows to reorder them

+ Add Edit Remove > Try Merge All

**Info**

Services 'HTTPS, SSH, SNMP, SNMP TRAP, IP Config' are blocked on interface 'vlan2' by the firewall.

[Add corresponding input rules to the top of the table](#)

Apply

The generated rule will be added to the Input Rules or Forward Rules tab, depending on the direction of the conntrack entry. The contents of this rule will be copied from the conntrack entry, with the fields included being determined by the checked boxes in the table header. If a box is checked, the corresponding field will be included in the generated rule.

It is then up to you to edit the rule to your liking. The Add All button can be used to add all generated rules at once.

#### Note

The generated rule is not applied until you press to Apply the firewall configuration.

#### Reply

Conntrack entries also have “Reply” fields. These are commonly just the same as the original fields, but with the direction reversed.

Example:

Original Source: 198.18.1.99:60071  
Original Destination: 198.18.1.14:80

Reply Source: 198.18.1.14:80  
Reply Destination: 198.18.1.99:60071

When the Reply is just a mirror of the original, it is not shown in the Conntrack table, to reduce clutter.

But when there are entries with different original and reply addresses/ports, the Reply fields are shown.

**Firewall Configuration**  
198.18.1.1 Machine 10@Plant A Bench 10

General Logging Input Rules Forward Rules Port Forwarding Rules NAT Rules ALG Helpers **Conntrack**

**Forward**

|         | Timestamp | Protocol | Source Address | Source Port | Source Vlan | Destination Address | Destination Port | Destination Vlan | Reply Source Address | Reply Source Port | Reply Source Vlan | Reply Destination Address | Reply Destination Port | Reply Destination Vlan |
|---------|-----------|----------|----------------|-------------|-------------|---------------------|------------------|------------------|----------------------|-------------------|-------------------|---------------------------|------------------------|------------------------|
| Forward | 14:55:16  | TCP      | 198.18.1.99    | 60071       | vlan2       | 198.18.1.14         | 80               | vlan3            | Identical            | Identical         | Identical         | Identical                 | Identical              | Identical              |
| Forward | 14:55:17  | TCP      | 198.18.1.99    | 60071       | vlan2       | 198.18.1.14         | 80               | vlan3            | 203.0.113.14         | 8080              | vlan30            | Identical                 | Identical              | Identical              |

**Input**

|  | Timestamp | Protocol | Source Address | Source Port | Source Vlan | Destination Address | Destination Port | Destination Vlan | Reply Source Address | Reply Source Port | Reply Source Vlan | Reply Destination Address | Reply Destination Port | Reply Destination Vlan |
|--|-----------|----------|----------------|-------------|-------------|---------------------|------------------|------------------|----------------------|-------------------|-------------------|---------------------------|------------------------|------------------------|
|  |           |          |                |             |             |                     |                  |                  |                      |                   |                   |                           |                        |                        |

Clear Refresh Auto Refresh Auto Refresh Limit: 1 minutes Stop Add All

**Warning**

Interface 'vlan2' is blocked by the firewall.

Open ANY to ANY rule and go to conntrack to analyze traffic

Apply

| Field                | Description                            |
|----------------------|----------------------------------------|
| Reply Source Address | The source IP address, reply direction |

| Field                     | Description                                 |
|---------------------------|---------------------------------------------|
| Reply Source Port         | The source port, reply direction            |
| Reply Source Vlan         | The source vlan, reply direction            |
| Reply Destination Address | The destination IP address, reply direction |
| Reply Destination Port    | The destination port, reply direction       |
| Reply Destination Vlan    | The destination vlan, reply direction       |


If the Reply field is a mirror of the original, it is shown as “Identical”, this way you can quickly see which entries are mirrored and which are not.

### Info

Vlan is only shown if WeConfig is able to derive it from the corresponding IP address (otherwise this field will be empty)

## Refreshing the Conntrack

Below the Conntrack table, there are some buttons used to refresh the conntrack table.

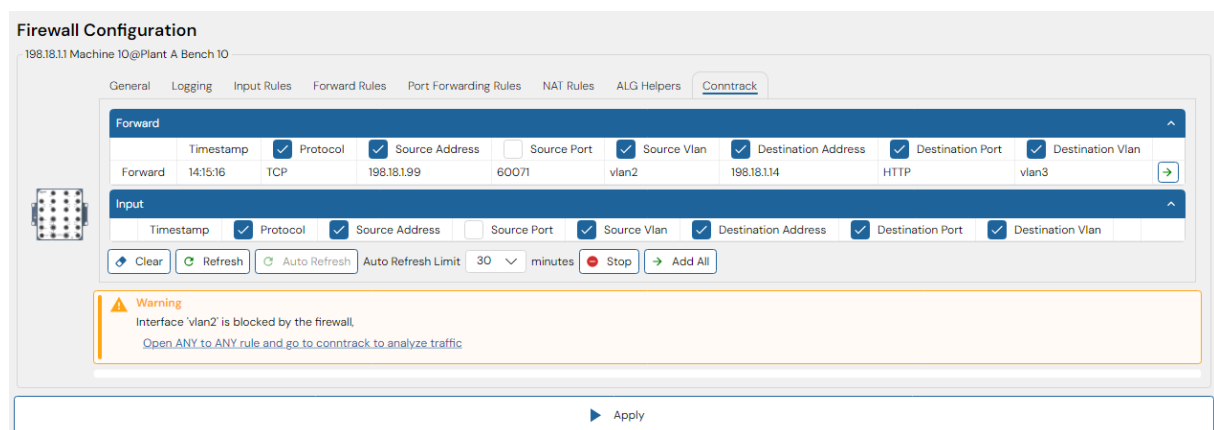

Firewall Configuration  
198.18.1.1 Machine 10@Plant A Bench 10

General Logging Input Rules Forward Rules Port Forwarding Rules NAT Rules ALG Helpers **Conntrack**

**Forward**

| Timestamp        | Protocol | Source Address | Source Port | Source Vlan | Destination Address | Destination Port | Destination Vlan |
|------------------|----------|----------------|-------------|-------------|---------------------|------------------|------------------|
| Forward 14:15:16 | TCP      | 198.18.1.99    | 60071       | vlan2       | 198.18.1.14         | HTTP             | vlan3            |

**Input**

| Timestamp | Protocol | Source Address | Source Port | Source Vlan | Destination Address | Destination Port | Destination Vlan |
|-----------|----------|----------------|-------------|-------------|---------------------|------------------|------------------|
|           |          |                |             |             |                     |                  |                  |

Clear Refresh Auto Refresh Auto Refresh Limit 30 minutes Stop Add All

**Warning**  
Interface 'vlan2' is blocked by the firewall.  
[Open ANY to ANY rule and go to conntrack to analyze traffic](#)

Apply

## Clear

The Clear button clears the conntrack table in WeConfig.

### Info

Only clears the table in WeConfig, not on the device.

## Refresh

The Refresh button refreshes the conntrack table in WeConfig. It will read the current conntrack table from the device and update the table in WeConfig.

## Auto Refresh

The Auto Refresh button will automatically refresh the conntrack table in WeConfig every second until the given time limit is reached. This is useful for collecting the conntrack table over a period of time.

 Warning

If you deselect the device, or leave the Firewall tab, the Auto Refresh will stop.

Stop

The Stop button will manually stop the Auto Refresh.

Configuration ▸ System

#### 4.4.14. Simple network Management Protocol (SNMP)

**WeOS 4** **WeOS 5** Ibex **XRD** Merlin

SNMP configuration is a staged task that allows for configuring the SNMP accessibility on selected devices.

##### Interface Components

The task is divided into three stages: Devices, Configuration and Overview.

Devices

Devices

Configuration

Overview

198.18.2.10 Plant B Router@Plant B



Read Community

Write Community

Trap Community

public

public

trap

Trap Hosts

| Address       | Type | Version  | Resend | User |
|---------------|------|----------|--------|------|
| 192.168.2.200 | Trap | Version2 |        |      |

Users

| Username | Type | Auth. | Crypto |
|----------|------|-------|--------|
|          |      |       |        |

198.18.2.9 Plant A Router@Plant A



Read Community

Write Community

Trap Community

public

public

trap

Trap Hosts

| Address       | Type | Version  | Resend | User |
|---------------|------|----------|--------|------|
| 192.168.2.200 | Trap | Version2 |        |      |

Users

| Username | Type | Auth. | Crypto |
|----------|------|-------|--------|
|          |      |       |        |

198.18.2.8 Merlin Router 2@Main Office



Read Community

Write Community

Trap Community

Trap Hosts

| Address | Type | Version | Resend | User |
|---------|------|---------|--------|------|
|         |      |         |        |      |

Users

| Username | Type | Auth. | Crypto |
|----------|------|-------|--------|
|          |      |       |        |

198.18.2.7 Merlin Router 1@Plant B



Read Community

Write Community

Trap Community

Trap Hosts

| Address | Type | Version | Resend | User |
|---------|------|---------|--------|------|
|         |      |         |        |      |

Users

| Username | Type | Auth. | Crypto |
|----------|------|-------|--------|
|          |      |       |        |

198.18.2.6 Management Router@Main Office

Trap Hosts

| Address | Type | Version | Resend | User |
|---------|------|---------|--------|------|
|         |      |         |        |      |

Users

| Username | Type | Auth. | Crypto |
|----------|------|-------|--------|
|          |      |       |        |

→ Next

▶ Apply

The first stage is called devices, and it will display the current selection of devices, as well as details regarding their current SNMP configuration. As can be seen above, this is presented as a list of devices, where their read, write and trap communities are listed, followed by a list of trap hosts and users.

To progress to the next stage, click “Confirm”.

## Configuration

The screenshot shows the 'Configuration' stage of the SNMP setup process. At the top, there is a progress bar with three stages: 'Devices' (marked with a green checkmark), 'Configuration' (the current stage), and 'Overview'. Below the progress bar, the configuration options are as follows:

- Read Community:** public
- Write Community:** (empty field)
- Trap Community:** trap

Below these are the 'Trap Hosts' and 'Users' sections.

**Trap Hosts:**

| Address     | Type     | Version | Resend | User |
|-------------|----------|---------|--------|------|
| 198.18.2.11 | Version2 |         |        |      |
| 1.2.3.4     | Version3 | Trap    |        | roro |
|             | Version2 |         |        |      |

**Users:**

| Username | Type      | Auth. | Crypto |
|----------|-----------|-------|--------|
| roro     | ReadOnly  | Sha1  | Aes12E |
| riwi     | ReadWrite | None  | None   |

At the bottom, there are two buttons: 'Next' and 'Apply'.

The second stage is called configuration, and is where the desired configuration for the devices selected in the prior stage is specified. Depicted above is a configuration with the SNMPv2 settings specified as:

- a read community called “public”
- no write community,
- a trap community called “trap”

### Note

To disable the relevant SNMPv2 community, leave the field blank.

Additionally, two trap hosts have been configured:

- One version 2 trap host being sent to 198.18.2.11
- One version 3 trap host being sent to 1.2.3.4 with the user `roro` specified.

Finally, there exist two SNMPv3 users:

- A read-only user called `roro` that does have both authentication and encryption configured.
- A read-write user called `riwi` that does not need any authentication.

 **Warning**

This is in no way a recommended configuration, and is only used as an example.

 **Note**

If at least one compatible SNMPv3 user is configured on a device, WeConfig automatically selects one of the new users and updates the Device Access for the project to make use of a specific user.

To progress to the next stage, click “Confirm”.

### Overview

The final stage is called “Overview” and contains a specification of the updates that will be made to the selected devices listed. Any values that are accepted can be seen in green.

However, not all configurations may be compatible with all devices; if any incompatibilities are found, they are listed on each relevant device, as depicted below:

Devices

Configuration

Overview

198.18.2.10 Plant B Router@Plant B



Read Community

public

Write Community

public

Trap Community

trap

Trap Hosts

| Address     | Type | Version  | Resend | User |
|-------------|------|----------|--------|------|
| 198.18.2.11 | Trap | Version2 |        |      |
| 0.0.0.0     | Trap | Version2 |        |      |
| 1.2.3.4     | Trap | Version3 |        | roro |

This device does not support version 3 trap hosts

Users

| Username | R/W       | Auth. | Crypto |
|----------|-----------|-------|--------|
| roro     | ReadOnly  | Sha1  | Aes128 |
| riwi     | ReadWrite | None  | None   |

198.18.2.9 Plant A Router@Plant A



Read Community

public

Write Community

public

Trap Community

trap

Trap Hosts

| Address     | Type | Version  | Resend | User |
|-------------|------|----------|--------|------|
| 198.18.2.11 | Trap | Version2 |        |      |
| 0.0.0.0     | Trap | Version2 |        |      |
| 1.2.3.4     | Trap | Version3 |        | roro |

This device does not support version 3 trap hosts

Users

| Username | R/W       | Auth. | Crypto |
|----------|-----------|-------|--------|
| roro     | ReadOnly  | Sha1  | Aes128 |
| riwi     | ReadWrite | None  | None   |

198.18.2.8 Merlin Router 2@Main Office

Read Community

public

Write Community

Trap Community

Apply

107/240

Where we can see that the device in question does not support version 3 of the SNMP trap host configuration.

With this in mind, the apply button is still available, and WeConfig will simply not configure anything unsupported on relevant devices.

If the resulting configuration is considered unacceptable, simply head back to the prior stage and change it.

#### 4.4.15. CPU

WeOS 4

CPU is a task that allows you to configure CPU bandwidth throttling.

Interface components

### CPU Bandwidth Limit

10.0.2.1 Plant A Router@Plant A



Settings

Auto ▾

10.0.2.3 Machine 10@Plant A Bench 10



Settings

Manual ▾ 12 <sup>1</sup>/<sub>100</sub> Mbps ▾

10.0.2.4 Machine 11@Plant A Bench 11



Settings

Disable ▾

▶ Apply

For each added device, you may choose the following parameters in the combo box:

- Disable - CPU bandwidth will not be throttled
- Auto - WeOS will automatically throttle the CPU bandwidth as it sees fit
- Manual - enter a fixed value (expressed with a unit selected in the combo box to the right)

#### 4.4.16. Date/Time

WeOS 4 WeOS 5

Date/Time is a task that allows you to configure current host time, time zone as well as NTP server addresses and poll intervals.

Interface components

The screenshot shows the 'Date/Time' configuration panel. At the top, there is a dropdown menu set to 'Auto Fill'. Below this, the device identifier '10.0.2.4 Machine 11@Plant A Bench 11' is displayed. The panel features two tabs: 'Time Settings' and 'NTP Servers', with the latter being the active tab. On the left side of the NTP Servers tab, there is a small icon of a server rack. The main area of the NTP Servers tab contains a table with two columns: 'Server' and 'Poll Interval'. The table lists two servers: '1.2.3.4' and '2.3.4.5', both with a poll interval of '600'. To the right of each poll interval, there are two smaller values, '30' and '720', and a trash icon. Below the table, there is a '+ Server' button. At the bottom of the panel, there is a large 'Apply' button with a play icon.

| Server  | Poll Interval |
|---------|---------------|
| 1.2.3.4 | 600           |
| 2.3.4.5 | 600           |

As depicted above, this panel contains a list of selected devices where each device has two tabs, one for time settings and one for NTP servers. In the first tab, Time Settings, the host time can be set to match current time, and the time zone can be selected. In the second tab, NTP Servers, you can specify a number of NTP servers, together with their weights or intervals.

#### 4.4.17. Logging

WeOS 4

WeOS 5

Ibex

Logging configuration is a staged task that allows for configuring syslog behavior on selected devices.

Interface components

The logging task is divided into three stages, Version selection, Devices and Configuration.

Version

Version      Devices      Configuration

[WeOS 5.22.0 +]  
Devices: 5

[WeOS 5.15.0 - WeOS 5.21.1] / [WeOS 4.29+]  
Devices: 2

[WeOS 4.14 - WeOS 4.28.0]  
Devices: 3

IBEX  
Devices: 2

▶ Apply

The first stage is called Version, and presents you with a choice for which variant of syslog configuration, amongst the ones available in the current network, to set up. The reason for this view is that different device ranges and firmware versions support vastly different lines of configuration.

Click on the relevant version you want to configure to progress to the next stage.

## Devices

Version

Devices

Configuration







[WeOS 5.22.0 +]

 Select All

|                                                                                     |               |             |                 |
|-------------------------------------------------------------------------------------|---------------|-------------|-----------------|
|    | Machine 11    | 198.18.1.5  | Viper-120A-T4G  |
|    | Bridgeboy 1   | 198.18.1.6  | Viper-120A-T4G  |
|   | Machine 1     | 198.18.1.7  | Viper-120A-T4G  |
|  | Machine 2     | 198.18.1.8  | Viper-120A-T4G  |
|  | Lynx RedBox 1 | 198.18.1.12 | Lynx-RB-FT3G-MV |

 Next

 Apply

The second stage is called Devices, and presents a list of devices compatible with the selected version of syslog configuration. Any devices already selected in the topology will be preselected in this list, but the selection may be changed before proceeding.

Click on the button labeled “Confirm” to proceed.

## Configuration

The final stage is called Configuration, and provides you with an interface to set up the relevant syslog configuration on the selected devices. How this view appears may drastically vary depending on the Version selection.

[WeOS 5.15.0 - WeOS 5.21.1] / [WeOS 4.29+]

Version

Devices

Configuration

✓

✓

✓

[WeOS 5.15.0 - WeOS 5.21.1] / [WeOS 4.29+]

10.0.2.3

Sink

1

Selector

Facility

news

Modifier

Exclude

emerg

alert

crit

err

warning

notice

info

debug

Facility

daemon

Modifier

Include

emerg

alert

crit

+ Add Selector

Target type

file internal

Target

198.18.2.11

Message format

rfc5424

2

Selector

Facility

\*

Modifier

Include

emerg

alert

crit

+ Add Selector

Target type

udp address

Target

198.18.2.11

Message format

rfc3164

+ Add Sink

Template

+ Copy

template:

(none)

into sink:

(none)

1

security

2

debug

Apply

When configuring logging for WeOS 5.15 and up to 5.21.1, the interface may appear as above. Therein a list of sinks serve as the primary means of configuration, which can be added to via the “Add Sink” button near the bottom left of the interface. Additionally, beneath the list of sinks is a collapsed-by-default template list, which allows you to quickly setup some common sink parameters on targeted sinks.

The configuration options for this version of logging is as follows:

| Option         | Description                                                                                                                 |
|----------------|-----------------------------------------------------------------------------------------------------------------------------|
| Target Type    | Where the log messages are sent, see <a href="#">Target types</a> .                                                         |
| Target         | Additional parameter depending on <a href="#">Target type</a> .                                                             |
| Message format | The syslog format, either <a href="#">rfc3164</a> <sup>1</sup> , <a href="#">rfc5425</a> <sup>2</sup> or <code>bsd</code> . |
| Selector       | Which produced syslog messages are sent to this sink, see <a href="#">Selectors</a>                                         |

### Target Types

Four target types are available for WeOS 5.15 to 5.21.1:

| Type          | Description                              | Target parameter                                                                 |
|---------------|------------------------------------------|----------------------------------------------------------------------------------|
| udp address   | A specific IP address is the target      | Valid IPv4 Address, e.g 192 . 168 . 0 . 1                                        |
| udp dhcp      | The target is determined via DHCP        | N/A                                                                              |
| file internal | The target is an internal on-device file | A valid file path, relative to the systems log file folder, e.g my/logs/mysyslog |
| file external | The target is an external media device   | A valid file path, relative to the target media                                  |

#### Warning

No two sinks can share the same target.

#### Warning

When specifying file internal/external as the target, any parent directories must already exist on the device.

### Selectors

A selector in the context of syslog configuration for WeOS 5.15 to WeOS 5.21.1 is a compination of three parameters. A facility, a modifier and a severity matcher. They can be observed in the image above under the “Selector” group for each sink.

### Facilities

A facility specifies the area of origin for the message, and the selector will match only messages belonging to the specified facility.

<sup>1</sup><https://datatracker.ietf.org/doc/html/rfc3164>

<sup>2</sup><https://datatracker.ietf.org/doc/html/rfc5424>

WeOS 5.15 to WeOS 5.21.1 provides the following facilities:

| Facility | Description                          | Facility | Description                     |
|----------|--------------------------------------|----------|---------------------------------|
| kern     | Kernel log messages                  | ntp      | <u>Time-protocol events</u>     |
| user     | User-level messages                  | security | Log audit, for audit trail      |
| mail     | Unused                               | console  | Log alert                       |
| daemon   | System daemons                       | local0   | Alarm sub-system                |
| auth     | Security and Authentication messages | local1   | Unused                          |
| syslog   | Unused                               | local2   | PPP                             |
| lpr      | Unused                               | local3   | Unused                          |
| news     | Unused                               | local4   | OpenVPN, IPsec                  |
| uucp     | Unused                               | local5   | Reserved, OEM customer specific |
| cron     | Unused                               | local6   | Unused                          |
| authpriv | Unused                               | local7   | Unused                          |
| ftp      | Unused                               | *        | Any facilities                  |

#### Modifier

A modifier is a simple boolean, which specifies the selector as either an inclusion filter or an exclusion filter. If specified as `Include` any syslog message that matches this selector will sent to the target sink. If specified as `Exclude` any syslog messages that matches this selector will not be sent to the target sink.

#### Severities

Lastly, a selector consists of a severity selector, which may be used to narrow the range of messages to only those of a certain severity by dragging the slider from the right or respectively.

The available severities are as follows:

| Severity | Description                                                  |
|----------|--------------------------------------------------------------|
| emerg    | Emergency, System Level service only                         |
| alert    | System level service only                                    |
| crit     | Critical, System level service only                          |
| err      | Severe error, a daemon/service may restart                   |
| warning  | Significant problems, such a failure to reach Radius servers |
| notice   | General log messages, such as successful authentication      |
| info     | Informational, less important messages                       |
| debug    | Developer/low-level debug messages                           |

[WeOS 5.22.0 +]

From WeOS 5.22.0 and forwards, logging configuration has been expanded with several new options, with a subset depicted beneath:

Version: [WeOS 5.22.0+] | Devices: 5 Devices | Configuration: [checked]

**Filter1**

Name: Filter1 | Levels: debug info notice warning err crit alert emerg | Invert: [unchecked]

Facilities: auth console cron\_sol ftp local0 local2 local4 local6 lpr news security user authpriv cron daemon kern local1 local3 local5 local7 mail ntp syslog uucp

Hostname: [ ] | Message format: [ ] | Source: [ ] | Network: [ ] | Limit: 0 65535 | Type: None

**Filter2**

Name: Filter2 | Levels: debug info notice warning err crit alert emerg | Invert: [checked]

Facilities: auth console cron\_sol ftp local0 local2 local4 local6 lpr news security user authpriv cron daemon kern local1 local3 local5 local7 mail ntp syslog uucp

Hostname: [ ] | Message format: [ ] | Source: [ ] | Network: [ ] | Limit: 0 65535 | Type: None

**Sink**

**Sink1**

Name: Sink1 | Source: one two three | Destination: dest0 dest1 dest2 dest3 | Filters: & Filter1 | Filter2

**Sink2**

Name: Sink2 | Source: one two three | Destination: dest0 dest1 dest2 dest3 | Filters: & Filter1

**External media** [checked]

Name: test media | Size: 2300M | Count: 123

[Apply]

Here, the interface is divided into five collapsable sections, Sinks, External Media, Sources, Destinations and Filters. In a slight deviation, let us start from the bottom:

### Filters

Down at the last section you will find the filter specification, which is a list of zero-or-more filters specified for the syslog configuration. These function similarly to selectors in WeOS 5.15 to WeOS 5.21.1, but with the ability to specify a name for usage in sinks.

### Destinations

In the second section from the bottom, you will find destination configuration, which sets up zero or more targets for sink composition. These share some similarity with target types in WeOS 5.15 to WeOS 5.21.1, as they dictate where generated syslog messages are delivered.

However, they contain different options, first and foremost a name. Secondly, there are now three main target types: Console, File and Remote.

#### Console destination

The simplest of the destinations to configure, as it requires no further details, when a sink uses this destination, messages from the sinks sources will be logged to the console.

#### File destination

This destination type is used to send syslog messages to a local on-device file or connected media, such as a USB or SD-card. The media name may be specified either as an external media configured on the device, or as `internal` which will consider the file name relative to the `/log/` folder.



#### Note

When using `internal` media, any log messages stored there will be lost upon reboot.

Additionally, you may specify a log rotation policy by setting the maximum size of each log file, the number of log files to retain, and the number of compressed log files to retain for these kinds of destinations.

#### Remote destinations

This destination type is used to send syslog messages to some external location, by specifying a host, port, protocol and format. Host may be specified either via host name, for DNS lookup, DHCP, a static IPv4, or a static IPv6 address. The protocol may be either UDP, TCP or TLS, where choosing TLS will allow you to specify certificates to use for trust. The formats configurable are the same as in [WeOS 5.15 to WeOS 5.21.1](#).



#### Warning

When using UDP or TCP to send syslog messages, they will be sent in clear text and can be read by any interceptor.

#### Sources

Second from the top you will find the sources section, where the producers of syslog messages can be configured. These can either be local, on-device sources, and may include userspace or kernel messages if so, or they may be remote sources, in which case their port, protocol and format parameters must match the relevant destinations configured on other devices.

#### Sinks

Sinks reside at the very bottom of the interface, a sink is a named configuration that combines zero-or-more sources with zero-or-more destinations and zero-or-more filters. Any selected sources and destinations will be marked in green. And the sink depicted above as `Sink1` can be read as “receive syslog messages from the one and two sources, but not the three source, and if they match the filter specified by `Filter1` or `Filter2`, send them to the `dest1` and `dest2` destinations”. Of special note is perhaps the filters box, where applicable filters are combined together using either `&`, for and, or `|`, for or.

#### Note

Leaving the filter box empty is the equivalent to “any”

#### External media

To the right of Sinks you will find a small section dedicated to external media configuration, where you may configured how the log file is handled on the external media, filesize and count may be configured here.

#### Ibex

| Version                             | Devices   | Configuration |
|-------------------------------------|-----------|---------------|
| IBEX                                | 10.0.1.60 |               |
| Enabled                             | Protocol  | IP            |
| <input type="checkbox"/>            | udp       | 192.168.1.1   |
| Enabled                             | Protocol  | IP            |
| <input checked="" type="checkbox"/> | udp       | 192.168.2.1   |
| Enabled                             | Protocol  | IP            |
| <input type="checkbox"/>            | udp       | 192.168.3.1   |
| <div>+ Add</div>                    |           |               |
| <div>▶ Apply</div>                  |           |               |

When configuring logging for Ibex, the interface may appear as above. Therein a simple list of sinks serve as the primary means of configuration, which can be added to via the “Add” button near the bottom of the interface.

## 4.4.18. OSPF

WeOS 4

WeOS 5

OSPF is a licensed task that allows for configuration of the OSPF protocol on selected devices. The current set of devices support by this task is WeOS 4 and WeOS 5 devices.

## Context Menu Options

The presence of this panel adds a couple of options to the Context Menu under the top menu item “OSPF”, as specified below:

## Activate default configuration

When, in the topology view, one-or-more devices that all support OSPF configuration are selected, this context menu item will appear. Clicking it will cause WeConfig to configure OSPF on all selected devices with the default configuration and all available networks exposed.

## Redistribute

When, in the topology view, one-or-more devices that all support OSPF configuration are selected, this context menu will appear. It contains a number of redistribution options, clicking a specific option will cause WeConfig to configure the selected devices with the default form of redistribution for the specified route kind. The following redistribution options are available:

| Option    | Description                                             |
|-----------|---------------------------------------------------------|
| Connected | Redistributes directly connected routes through OSPF    |
| Default   | Redistributes default routes through OSPF               |
| RIP       | Redistributes <u>RIP</u> -generated routes through OSPF |
| Static    | Redistributes <u>static routes</u> through OSPF         |

## Remove

When, in the topology view, one-or-more number of devices that support OSPF configuration is selected, this context menu item will appear. Clicking it will strip the selected devices of any OSPF configuration.

## Create OSPF Area

When, in the topology view, one-or-more subnets are selected that each contain at least one device supporting OSPF configuration, this context menu will appear. The menu will contain the five different varieties of OSPF area:

| Type           | Description                                                                                        |
|----------------|----------------------------------------------------------------------------------------------------|
| Regular        | A standard OSPF area that accepts inter-area and external routes with no restrictions.             |
| Stubby         | An OSPF area that blocks external routes, replacing them with a default route.                     |
| Totally Stubby | An OSPF area that blocks both external and inter-area routes, replacing them with a default route. |

| Type                  | Description                                                                                                                                                                   |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Not so Stubby         | An OSPF area that, like a Stubby area, blocks external routes from outside the area, but still allows external routes to be imported locally through an ASBR within the area. |
| Not so totally stubby | An OSPF area that combines the restrictions of a Totally Stubby area with the local external route import capability of a Not so Stubby area.                                 |

Selecting one of these area types will cause WeConfig to configure an OSPF area on the supported devices in the selected subnets.

Interface Components:

**OSPF**

Area ▼

Redistribute ▼

Timer ▼

10.0.2.4 Machine 11@Plant A Bench 11

☒ Enabled ☐ Passive

Id Auto Distance 1 0 255

Networks

Network 10 0 2 0 / 24 Area  +

Interface setting

vlan2

Type Auto ▼ ☒ Passive Priority 1 0 255 Cost 10 0 65535 Hello interval 10 0 65535 Dead interval 40 0 65535

▶ Apply

Depicted above is the panel interface for editing detailed OSPF settings. It is divided into four sections: Area, Redistribute, Timer and Device Settings

#### Area

This section allows for configuration of detected OSPF areas, it is recommended to first create the areas using the [Create OSPF Area](#) context menu option and then edit the details of the area here as needed.

## Redistribute

This section allows for detailed configuration of the protocol redistribution configured to the devices. Allowing you to set metrics and types for the respective redistributions, instead of the default ones set by the [context menu option](#).

## Timer

This section allows for detailed configuration of the timing configuration of OSPF, specifically for overriding the default configuration of the Link-state Advertisement, or LSA for short, as well as the Shortest Path First, or SPF for short, parameters.

## Device Settings

This section contains a list of selected devices and their currently configured OSPF settings. There are seven categories of configuration that is contained within this section, and they are as follows:

- Enabled: Whether or not OSPF is enabled for this device.
- Passive: If all interfaces are considered Passive by default or not.
- Id: OSPF device id, Auto by default, or a valid IPv4 address otherwise.
- Distance: The administrative distance for OSPF-sourced routes.
- Networks: A list of [CIDR Addresses](#) and their associated OSPF area.
- Nearest Neighbors: A list of IPv4 specified known neighbors.
- Interface setting: A list of per-interface OSPF settings, where each interface can be configured with the following parameters:
  - Type: The OSPF network type, may be either Auto, Broadcast, Non-broadcast or Point-To-Point.
  - Passive: Override passive-interface settings for this specific interface
  - Cost: Specify the OSPF cost for the interface
  - Hello interval: Number of seconds inbetween hello packets
  - Dead interval: Number of seconds before considering neighbors down.

### Info

If the OSPF network type is set to Non-broadcast, neighbors must also be defined in order to have a useful OSPF configuration.

### Warning

If you override the hello interval or dead interval on any given OSPF interface, ensure any neighbouring router configured with OSPF mirrors the same hello interval and dead interval configuration.

#### 4.4.19. RIP

WeOS 4

WeOS 5

RIP is a licensed set of context menu options that allows for configuration of the RIP protocol on selected devices. The current set of devices support by this task is WeOS 4 and WeOS 5 devices.

##### Context Menu Options

RIP adds a couple of options to the Context Menu under the top menu item “RIP”, as specified below:

##### Activate default configuration

When, in the topology view, one-or-more devices that all support RIP configuration are selected, this context menu item will appear. Clicking it will cause WeConfig to configure RIP on all selected devices with the default configuration and all available networks exposed.

##### Redistribute

When, in the topology view, one-or-more devices that all support RIP configuration are selected, this context menu will appear. It contains a number of redistribution options, clicking a specific option will cause WeConfig to configure the selected devices with the default form of redistribution for the specified route kind. The following redistribution options are available:

| Option    | Description                                             |
|-----------|---------------------------------------------------------|
| Connected | Redistributes directly connected routes through RIP     |
| Default   | Redistributes default routes through RIP                |
| OSPF      | Redistributes <u>OSPF</u> -generated routes through RIP |
| Static    | Redistributes <u>static routes</u> through OSPF         |

##### Remove

When, in the topology view, one-or-more number of devices that support RIP configuration is selected, this context menu item will appear. Clicking it will strip the selected devices of any RIP configuration.

## 4.4.20. Static routing

WeOS 4

WeOS 5

Static routing is a licensed task that allows for configuration of static routes on selected devices. The current set of devices support by this task is WeOS 4 and WeOS 5 devices.

### Interface components

**Static Routing**

10.0.3.1 Plant B Router@Plant B

| Subnets         | Gateway     | Interface | Distance |
|-----------------|-------------|-----------|----------|
| [redacted] / 0  | 198.18.1.55 | *         | 0        |
| [redacted] / 0  | 198.18.1.1  | *         | 0        |
| 198.18.0.0 / 24 | 198.18.1.99 | *         | 0        |

+ Route

Apply

The user interface for this panel is a fairly straight-forward list of devices, each containing a list of configured routes. These routes may be added, deleted or modified. A route in this panel consists of the following parameters:

| Parameter | Description                                                                                                                                                                                    |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Subnets   | The subnet address space targeted by the route in <u>CIDR Notation</u>                                                                                                                         |
| Gateway   | The gateway address for the next hop along the route, an IPv4 address                                                                                                                          |
| Interface | The network interface to send traffic matching the route on, * is used to mean any, meaning the gateway is the only targeting parameter, otherwise an interface such as v1an1 may be specified |
| Distance  | The distance weight of the route, a value between 0-255                                                                                                                                        |

### Context Menu Options

Additionally, the presence of this panel adds a couple of options to the Context Menu under the top menu item "Static Routing", as specified below:

#### Route To...

When, in the topology view, a subnet A is selected that has at least 1 adjacent subnet and contains at least one device supporting static route configuration, this context menu will appear. The menu will contain a list of valid adjacent subnets, and clicking one of these specified subnets B in the context menu will cause WeConfig to set up static routes going from subnet A to subnet B.

### Remove

When, in the topology view, one-or-more number of devices that support static route configuration is selected, this context menu item will appear. Clicking it will strip the selected devices of any configured static routes.

### Create Routes

When, in the topology view, two or more subnets are selected that each contain at least one device supporting static route configuration, this context menu will appear. Clicking this context menu will attempt to set up all the static routes that traverse from the and to each pair of subnets in the selected set of subnets.

#### 4.4.21. Virtual Router Redundancy Protocol (VRRP)

WeOS 4

WeOS 5

Virtual Router Redundancy Protocol (VRRP) is a licensed task that allows for configuration of VRRP on selected devices. VRRP is a standard protocol that is used to provide automatic assignment of available routers to its participating hosts. The current set of devices support by this task is WeOS 4 and WeOS 5 devices.

Read more about VRRP in the [WeOS documentation](#)<sup>1</sup>.

##### Interface components

**VRRP**

10.0.2.3 Machine 10@Plant A Bench 10

VRRP startup delay (seconds)

No VRRP instances

10.0.2.4 Machine 11@Plant A Bench 11

VRRP startup delay (seconds)

No VRRP instances

##### Add or Edit VRRP Instance

These are the common parameters for both WeOS4 and WeOS5:

| Parameter | Description                                                              | Allowed Values |
|-----------|--------------------------------------------------------------------------|----------------|
| Enabled   | Should this VRRP instance be enabled?                                    |                |
| Interface | The interface on which to listen for VRRP information and act as gateway |                |

<sup>1</sup><https://docs.westermo.com/weos/weos-5/IP/VRRP.html>

| Parameter              | Description                                                                                                                                                                                                                                                                                                         | Allowed Values                                     |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------|
| Virtual Router ID      | A unique ID common to those routers that will provide redundancy.                                                                                                                                                                                                                                                   | 1-255                                              |
| Virtual Address        | A virtual address that the routers will use when providing the gateway support. The address should be in the same IP subnet as the regular IP address assigned to the interface                                                                                                                                     |                                                    |
| Version                | VRRP version to use (v2 or v3). Changing this will change what options are available.                                                                                                                                                                                                                               |                                                    |
| Advertisement Interval | The interval in seconds how often a VRRP advertisement message will be sent out.                                                                                                                                                                                                                                    | v2: 1-255; v3 (WeOS4): 0.1-40; v3 (WeOS5): 0.01-40 |
| Priority               | A number used for election of current gateway. A higher number means a higher chance to become elected. If two routers has the same priority in an election, the router with the highest IP address will win. The value 255 should be used if (and only if) the router is also the owner of the virtual IP address. | 1-255                                              |
| Preemption             | Preempt existing router of lower priority, with optional delay.                                                                                                                                                                                                                                                     | 0-1000                                             |
| Dynamic Priority       | The alarm trigger selected will, if triggered, add the priority adjustment value to the router priority. Can not be used if the VRRP instance is part of a VRRP Group.                                                                                                                                              |                                                    |

## WeOS4

|                                     |                                     |
|-------------------------------------|-------------------------------------|
| Enabled                             | <input checked="" type="checkbox"/> |
| Interface                           | vlan2 ▾                             |
| Virtual Router ID                   | 1                                   |
| Virtual Address                     | 10 . 0 . 2 . 10                     |
| Version                             | 2 ▾                                 |
| Advertisement Interval (s)          | 1                                   |
| Priority                            | 100                                 |
| Preemption                          | <input checked="" type="checkbox"/> |
| Delay (s)                           | 10                                  |
| Dynamic Priority                    | <input checked="" type="checkbox"/> |
| Track Trigger                       | 1 (LinkAlarm) ▾                     |
| Priority Adjustment                 | 10                                  |
| Authentication                      | <input checked="" type="checkbox"/> |
| Secret                              | 1234                                |
| Multicast Routing Control           | <input checked="" type="checkbox"/> |
| Multicast Routing Virtual Interface | <input checked="" type="checkbox"/> |

 Apply

These parameters are only available for WeOS4 devices:

| Parameter                 | Description                                                                                                                               | Allowed Values                                    |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------|
| Authentication            | Simple clear-text authentication is supported for VRRP version 2.                                                                         | 4-7 characters. ASCII characters 33-126, except # |
| Multicast Routing Control | Disable multicast routing when in BACKUP state. Only one VRRP instance per interface may be configured for controlling multicast routing. |                                                   |

| Parameter                           | Description                                                          | Allowed Values |
|-------------------------------------|----------------------------------------------------------------------|----------------|
| Multicast Routing Virtual Interface | Disable multicast routing for virtual VRRP interface in BACKUP state |                |

## WeOS5

|                                                 |                                                                                                                               |
|-------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| Enabled                                         | <input checked="" type="checkbox"/>                                                                                           |
| Name                                            | <input type="text" value="1"/>                                                                                                |
| Interface                                       | <input type="text" value="vlan2"/>                                                                                            |
| Virtual Router ID                               | <input type="text" value="1"/>                                                                                                |
| Virtual Address                                 | <input type="text" value="10"/> <input type="text" value="0"/> <input type="text" value="2"/> <input type="text" value="10"/> |
| Version                                         | <input type="text" value="3"/>                                                                                                |
| Advertisement Interval (s)                      | <input type="text" value="1"/>                                                                                                |
| Priority                                        | <input type="text" value="100"/>                                                                                              |
| Preemption                                      | <input checked="" type="checkbox"/>                                                                                           |
| Delay (s)                                       | <input type="text" value="10"/>                                                                                               |
| Dynamic Priority                                | <input checked="" type="checkbox"/>                                                                                           |
| Track Trigger                                   | <input type="text" value="1 (LinkAlarm)"/>                                                                                    |
| Priority Adjustment                             | <input type="text" value="10"/>                                                                                               |
| Use Virtual MAC                                 | <input checked="" type="checkbox"/>                                                                                           |
| <input checked="" type="button" value="Apply"/> |                                                                                                                               |

WeOS5 supports the option to add a VRRP Startup Delay. This is useful in order to wait for slow interfaces or other services. The setting applies to all VRRP instances.

These parameters are only available for WeOS5 devices:

| Parameter       | Description                                                                | Allowed Values                                     |
|-----------------|----------------------------------------------------------------------------|----------------------------------------------------|
| Name            | Unique Name of the VRRP instance.                                          | Alpha-numerical (no spaces, no special characters) |
| Use Virtual MAC | Create and/or use a virtual interface for VRRP. Uses the VRRP MAC address. |                                                    |

### Grouping

VRRP instances can be grouped together to allow for synchronized failover. Select two instances (by Ctrl-clicking) and then click the Group button to create a new group.)

To ungroup, select one or more members of a group and then click the Ungroup button.

### Context Menu Option

It is also possible to quickly setup VRRP from the Context Menu by selecting two routers and then selecting Create Virtual Router

## Configuration ▸ Ports

### 4.4.22. Ethernet

WeOS 4

WeOS 5

Ethernet is a task that allows for configuration of Ethernet ports enabled/disabled status, speed/duplex as well as Egress and Ingress limitations.

#### Interface components

|   | Enabled                             | Speed/Duplex | Egress | Ingress | Current Egress | Max | Current Ingress | Max |
|---|-------------------------------------|--------------|--------|---------|----------------|-----|-----------------|-----|
| 1 | <input checked="" type="checkbox"/> | auto         |        |         |                |     |                 |     |
| 2 | <input checked="" type="checkbox"/> | auto         |        |         |                |     |                 |     |
| 3 | <input type="checkbox"/>            | auto         |        |         |                |     |                 |     |
| 4 | <input checked="" type="checkbox"/> | auto         |        |         |                |     |                 |     |
| 5 | <input checked="" type="checkbox"/> | auto         |        |         |                |     |                 |     |
| 6 | <input checked="" type="checkbox"/> | auto         |        |         |                |     |                 |     |
| 7 | <input checked="" type="checkbox"/> | auto         |        |         |                |     |                 |     |
| 8 | <input checked="" type="checkbox"/> | auto         |        |         |                |     |                 |     |
| 9 | <input checked="" type="checkbox"/> | auto         |        |         |                |     |                 |     |

The user interface of this panel consist of a list of selected devices, where each device contains a list of ports. Additionally, above the port list of each device is a slider that will allow you to determine how often the data in the Current/Max Egress and Current/Max Ingress columnns is collected. The list of ports contains multiple columns, as follows:

#### Enabled

The first column indicates / allows you to configure whether the port is enabled or not.

#### *i* Info

The button at the bottom of the interface with the content “Disable Unused” will disable all ports that are not currently electrically up.

#### *i* Info

The button at the bottom of the interface with the content “Enable All” will enable all ports on all selected devices.

## Speed/Duplex

On supported devices, this column will contain a combobox that allows you to select the desired speed/duplex.



### Note

For WeOS 5 devices several speed/duplex can be selected. To select Auto negotiation, just select this option in the same combo box.

## Egress

This column allows you to specify an Egress limit from a prepared list of supported limits offered by the device.

## Ingress

This column allows you to specify an Ingress limit from a prepared list of supported limits offered by the device. Additionally, selecting a limit here will show four additional checkboxes as seen in the image above. These are detailed in the table below:

| Checkbox | Description                      |
|----------|----------------------------------|
| All      | All Traffic                      |
| BC       | MAC Broadcast FF:FF:FF:FF:FF:FF  |
| MC       | MAC Multicast (2n+1):*:*:*:*:*:* |
| U-Uni    | MAC unicast (2n):*:*:*:*:*:*     |

## Current/Max Egress & Ingress

Finally, the last four columns in the list are dedicated to a live observation of the data flowing through the ports. This data is collected at a rate determined by the slider above the port list, and operates by retrieving the number of bytes flowing through each port from each device, and calculating the average over the polling time. It also keeps track of the maximum observation recorded. This data acquisition will run for as long as the panel is open, and will cease if the slider is dragged down to 0.

#### 4.4.23. Port Monitoring


WeOS 4

WeOS 5

Port Monitoring is a task that allows for configuration of Port monitoring or mirroring; the act of observing traffic on a specified source port, or multiple source ports, and duplicating the traffic to another provided destination port.

Interface components

WeOS 5

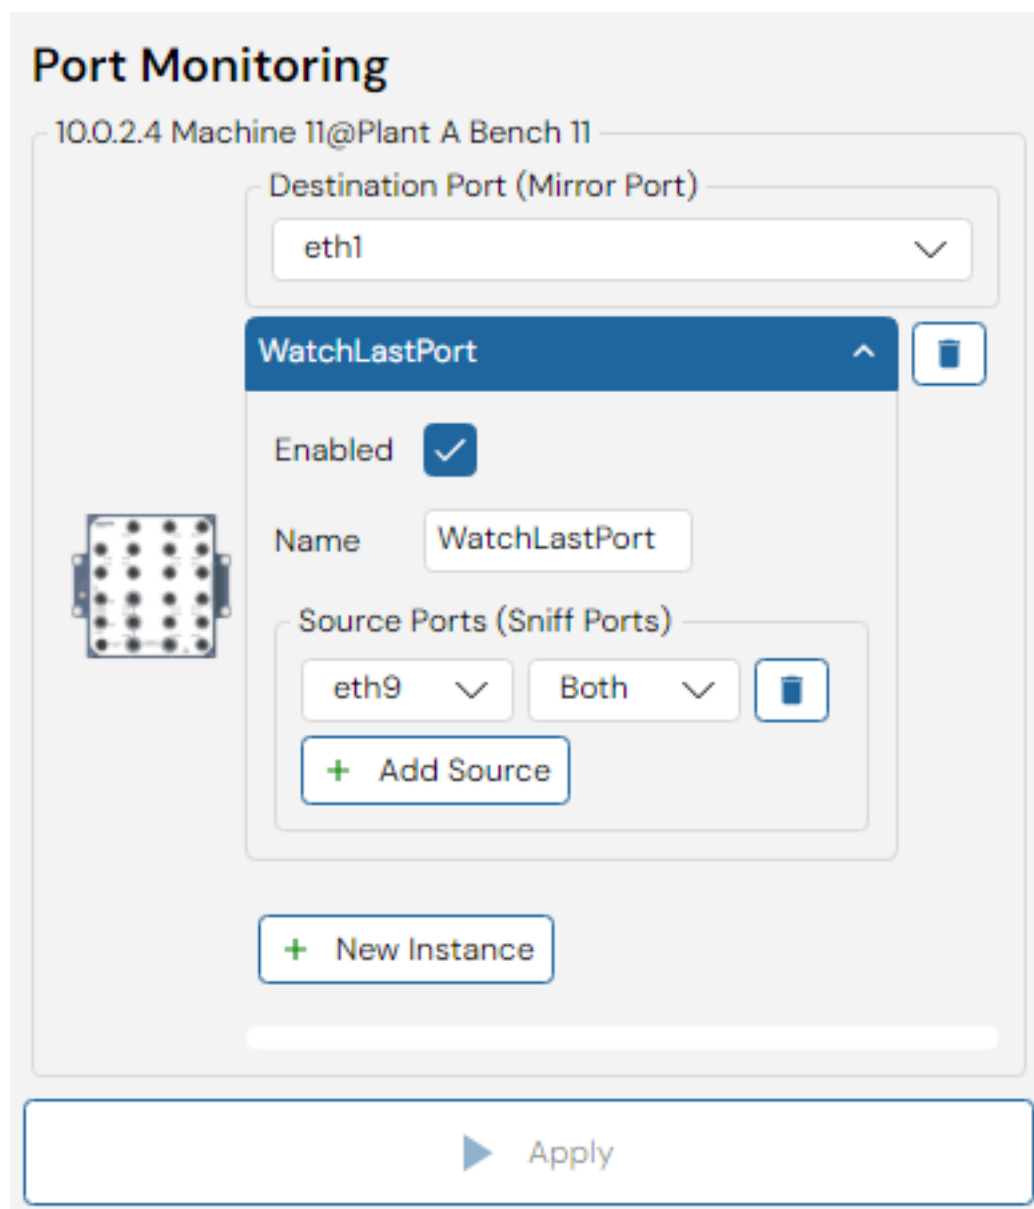

The screenshot shows the 'Port Monitoring' configuration window for '10.0.2.4 Machine 11@Plant A Bench 11'. It features a network switch icon on the left. The main configuration area includes a 'Destination Port (Mirror Port)' dropdown set to 'eth1'. Below this is a list of instances, with the first instance named 'WatchLastPort' expanded. This instance has 'Enabled' checked, a name field containing 'WatchLastPort', and a 'Source Ports (Sniff Ports)' section with two dropdowns: 'eth9' and 'Both'. There are buttons to 'Add Source' and 'New Instance'. At the bottom is a large 'Apply' button.

### Port Monitoring

10.0.2.4 Machine 11@Plant A Bench 11

Destination Port (Mirror Port)

eth1

**WatchLastPort**

Enabled ☒

Name WatchLastPort

Source Ports (Sniff Ports)

eth9 Both

+ Add Source

+ New Instance

Apply

On WeOS 5, you can select one destination port (The Mirror Port; the port to which the traffic will be duplicated) and one or more instances. Each instance can be enabled or disabled, can be given a name, and can have one or more source ports (The Sniff Ports; the ports whose traffic will be duplicated to the Mirror Port) associated with it.

## Port Monitoring

10.0.2.13 Wolverine DSL 1@Plant A



Enabled ☒

Destination Port (Mirror Port)

DSL 1

Source Ports (Sniff Ports)

1/2  Both

Add Source

Apply

On WeOS 4, you only have one instance, which can be enabled or disabled. You can also select one destination port (The Mirror Port; the port to which the traffic will be duplicated) and one or more source ports (The Sniff Ports; the ports whose traffic will be duplicated to the Mirror Port) associated with it.

#### 4.4.24. SHDSL

WeOS 4

WeOS 5

SHDSL is a [task](#) that allows for configuration of SHDSL port details pertaining to certain devices. If a selected devices does not have SHDSL ports, or does not support SHDSL port configuration, it will not appear in this panel.

Interface components

## SHDSL Port Configuration

10.0.2.13 Wolverine DSL 1@Plant A



### Device Settings

☐ Enable bonding (PAF)  
*PAF may only be enabled if both ports have the same role (CO/CPE)*

### DSL 1

☒ Enabled

Role

G.HS Threshold

CO ▾

Disabled ▾

Link Rate

Noise Margin

Auto ▾

Normal ▾

☐ EMF ☐ Low jitter

### DSL 2

☒ Enabled

Role

G.HS Threshold

CPE ▾

Disabled ▾

☐ EMF ☐ Low jitter

☒ Enable All

☐ Disable Unused

▶ Apply

For each port, select Role (CO/CPE). When applicable, select G.HS threshold, link rate, EMF (emergency freeze), noise margin and low jitter. It will also be possible to select Pass. When applicable, it will be possible to select PAF (SHDSL bonding).

To ensure that a device is not configured so it is unreachable, WeConfig will detect if port pairs have incompatible configurations. This will only work if all connected SHDSL devices are added to the configuration panel.

#### 4.4.25. 802.1X

WeOS 4

WeOS 5

802.1X is a task that allows for configuration of port authentication against RADIUS servers.

Interface components

**802.1X**

Auto Fill

10.0.2.1 Plant A Router@Plant A

**RADIUS Settings**

↑ Make Template

| Type   | Description | Address | Port | Password |
|--------|-------------|---------|------|----------|
| Server |             |         | 1812 |          |

Apply

For each device and VLAN that should be protected by 802.1X, click the desired Enabled checkbox. If any port on any device and VLAN should be excluded from 802.1X authentication, then click the desired port's checkbox in the Excluded ports area.

If this configuration is from scratch, consider using the RADIUS Settings Template feature, which allows for the configure of RADIUS settings in one place, and then propagate those settings to all devices added to the list with the Fill button.

To propagate the RADIUS settings from one device onto all devices, select the “master device’s” RADIUS settings and click the Make template button. Now the template area has the same settings as the “master device”. Then, click Fill to propagate to all devices. To add a RADIUS server, select Server in the Type combo box. Add a description, address (IP or DNS name), and service password. Click the button with a plus sign on it, and the entry will be added to the table above the input fields.


To add a RADIUS server group, first create one or more server entries. Then select Server group in the Type combo box and add a description. To link server entries to this group, type in the descriptions of the entries in the Server members text box, separated by a comma. Click the + button and the entry will be added to the table above the input fields. To select an entry in the RADIUS server/groups table as the entry to use for 802.1X authentication, click the checkbox on the correct row.

## 4.4.26. Licensing

### WeOS 4

Licensing is a task that allows for importing or removing MRP licenses from WeOS devices.

#### Interface Components

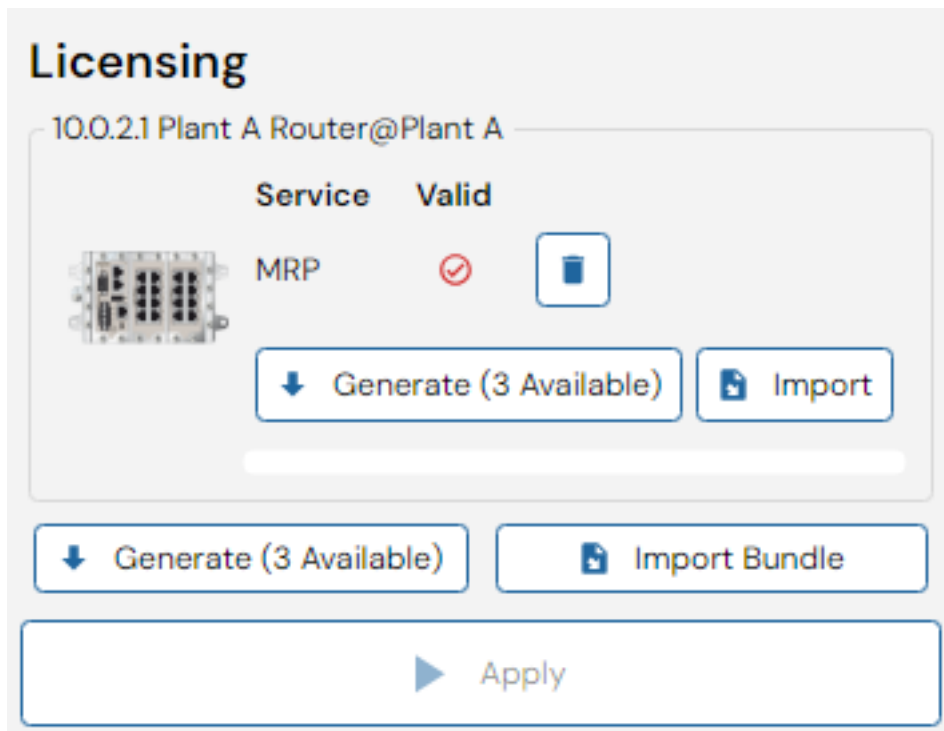

Licenses can be managed for the selected devices, either separately by clicking the “Import” button or as a bundle by clicking “Import bundle”. A bundle contains licenses for multiple devices.

Additionally, licenses can be created through the self-service licensing feature by clicking the “Generate” button.

#### Note

Only WeOS 4.23 or above is supported.

#### MRP Self-Service Licensing

WeConfig can obtain MRP (Media Redundancy Protocol) licenses for devices directly through the Westermo web service, removing the need to manually download and import license files.

When initiating an MRP license request, WeConfig identifies the device by its serial number and article number, then contacts the Westermo licensing server to retrieve a valid license. A quota system controls how many licenses can be issued under a given license, with the remaining quota being displayed in the interface.

### Info

An active internet connection is required for generating MRP licenses, as WeConfig communicates with the Westermo web service to obtain licenses.

However, once a license has been generated, it is stored locally on the machine running WeConfig, as well as in the project file. This allows for offline installation of the license on devices, as WeConfig can apply the locally cached license file to the device without needing to contact the web service again.

### Error Conditions

The following errors may occur during the licensing process:

| Error                     | Description                                                                                                           |
|---------------------------|-----------------------------------------------------------------------------------------------------------------------|
| Serial number not found   | WeConfig could not identify the serial number of the selected device.                                                 |
| Article number not found  | WeConfig could not identify the article number of the selected device.                                                |
| No local license          | No cached MRP license was found on the device to derive a license from.                                               |
| Insufficient quota        | The quota for licenses under the current license has been exhausted.                                                  |
| No valid license returned | The web service did not return a valid license for what was presumed to be a valid request. Contact Westermo support. |

## 4.4.27. Alarm

WeOS 4

WeOS 5

Alarm is a task that allows for configuration of alarms on selected devices. The current set of devices support by this task is WeOS 4 and WeOS 5 devices.

### Interface components

**Alarm**

Auto Fill

10.0.2.4 Machine 11@Plant A Bench 11

Summary Trap Enabled ☐

**New Action 1**

| Id | SNMP-Trap                           | Log                      | LED                      | Port                     | Interface                |
|----|-------------------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| 1  | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

New Action +

**New Trigger 1: Link Alarm**

Enabled ☒

Active: Warning ☐ Inactive: Notice ☐

Severity: Warning ☐ Notice ☐

Condition: Down ☐

Ports:

|                          |      |                          |      |                          |      |                          |      |                          |      |
|--------------------------|------|--------------------------|------|--------------------------|------|--------------------------|------|--------------------------|------|
| <input type="checkbox"/> | eth1 | <input type="checkbox"/> | eth2 | <input type="checkbox"/> | eth3 | <input type="checkbox"/> | eth4 | <input type="checkbox"/> | eth5 |
| <input type="checkbox"/> | eth6 | <input type="checkbox"/> | eth7 | <input type="checkbox"/> | eth8 | <input type="checkbox"/> | eth9 |                          |      |

Port Presets:

- ← Enable on All Tagged Ports
- ← Enable on All Ports Currently having Link Status Up (Except PC)
- ← Disable on All Ports

Action: 1 ☐

Link Alarm ☐ +

Apply

Each device can configure multiple actions and triggers, as well as enable or disable summary trap.

### Actions

When an alarm event occurs, the operator can be informed in a number of ways. This is defined by a specific alarm action that is associated with any given alarm trigger. The alarm action in turn specify one or more alarm targets that will be used to notify the operator.

The available targets vary depending on the WeOS version

### Alarm

Auto Fill ▼

10.0.2.1 Plant A Router@Plant A

Summary Trap Enabled ☐

Action 1 ▲ 🗑️

| Id | SNMP-Trap                           | Log                                 | LED                                 | Status-Relay                        | Port                                | Reboot                              |
|----|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| 1  | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |

⚠️ **Warning**  
Use the reboot target with care.



Ports

| Port                                | ETH 1/1                             | ETH 1/2                  | ETH 1/3                  | ETH 2/1                  |
|-------------------------------------|-------------------------------------|--------------------------|--------------------------|--------------------------|
| <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

Port Presets

← Enable on All Tagged Ports

Enable on All Ports Currently  
 having Link Status Up  
 (Except PC)

← Disable on All Ports

New Action +

Link Alarm ▼ +

▶ Apply

| Target       | Description                            |
|--------------|----------------------------------------|
| SNMP-Trap    | Generate an SNMP trap                  |
| Log          | Log status change to syslog            |
| LED          | Set ON/Status LED                      |
| Status-Relay | Control the status relay (digital out) |
| Port         | Control the admin status of a port.    |
| Reboot       | Reboot the unit. USE WITH CAUTION!     |

141/240

### Alarm

Auto Fill ▼

10.0.2.3 Machine 10@Plant A Bench 10

Summary Trap Enabled ☐



Ports

**Action 1** ▲ 🗑️

| Id | SNMP-Trap                           | Log                                 | LED                                 | Status-Relay                        | Port                                | Interface                           |
|----|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| 1  | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |

Ports

|                                          |                                          |                               |                               |                               |
|------------------------------------------|------------------------------------------|-------------------------------|-------------------------------|-------------------------------|
| <input checked="" type="checkbox"/> eth1 | <input checked="" type="checkbox"/> eth2 | <input type="checkbox"/> eth3 | <input type="checkbox"/> eth4 | <input type="checkbox"/> eth5 |
| <input type="checkbox"/> eth6            | <input type="checkbox"/> eth7            | <input type="checkbox"/> eth8 | <input type="checkbox"/> eth9 |                               |

Interfaces ☒ vlan2

Port Presets

- ← Enable on All Tagged Ports
- ← Enable on All Ports Currently having Link Status Up (Except PC)
- ← Disable on All Ports

New Action +

Link Alarm ▼ +

▶ Apply

| Target       | Description                               |
|--------------|-------------------------------------------|
| SNMP-Trap    | Generate an SNMP trap                     |
| Log          | Log status change to syslog               |
| LED          | Set ON/Status LED                         |
| Status-Relay | Control the status relay (digital out)    |
| Port         | Control the admin status of a port.       |
| Interface    | Control the admin status of an interface. |

#### Port selection

There are some presets available to make it easier to select the correct ports. The presets are as follows:

#### i Info

Only presets that are applicable to the current device and configuration will be shown.

| Preset                     | Description                                             |
|----------------------------|---------------------------------------------------------|
| Enable on All Tagged Ports | Selects all ports that are tagged in at least one VLAN. |

| Preset                                                          | Description                                                                                           |
|-----------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
| Enable on All Untagged Ports                                    | Selects all ports that are untagged in at least one VLAN.                                             |
| Enable on All FRNT Ports                                        | Selects all ports that are configured to be part of at least one FRNT ring.                           |
| Enable on All MRP Ports                                         | Selects all ports that are configured to be part of at least one MRP ring.                            |
| Enable on All RSTP Ports (Non Admin Edge)                       | Selects all ports that are configured for RSTP meshing, except those configured as an admin edge.     |
| Enable on All Ports Currently having Link Status Up (Except PC) | Selects all ports that are currently up, except if that port connects directly to the configuring PC. |
| Enable on All RiCo uplink ports                                 | Selects all ports that are configured to be RiCo uplink ports.                                        |
| Enable on All Dual-Homing uplink ports                          | Selects all ports that are configured to be Dual-Homing ports.                                        |
| Disable on all Ports                                            | Deselects all ports                                                                                   |

## Triggers

**Alarm**

Auto Fill

10.1.2 Machine 1@Subnet 1

Summary Trap Enabled ☐

Action 1

New Action +

**Trigger 1: Link Alarm**

Enabled ☒

Active Inactive

Severity Warning Notice

Condition Down

Ports

eth1 eth2 eth3 eth4 eth5

eth6 eth7 eth8 eth9

Port Presets

Enable on All Tagged Ports

Enable on All Ports Currently having Link Status Up (Except PC)

Disable on All Ports

Action 1

**Info**

This trigger is used by VRRP VRRP 2

Link Alarm +

Apply

An alarm trigger will monitor a provided alarm source and define the conditions for when specific alarm events occur, in other words, when the trigger becomes active (alarm situation) or inactive (normal operation).

Exactly which triggers are available depends on the device. The list you see in WeConfig is based on the list of supported trigger types the devices themselves provide.

These are all the triggers that WeConfig currently supports:

### Common parameters

All triggers have a set of common parameters:

| Parameter         | Description                                                                   |
|-------------------|-------------------------------------------------------------------------------|
| Enabled           | Enables or disables the trigger.                                              |
| Active Severity   | Specify the severity level of active alarm events detected by this trigger.   |
| Inactive Severity | Specify the severity level of inactive alarm events detected by this trigger. |
| Action            | The <u>action</u> to be invoked when this trigger detects an alarm event.     |

Severity levels are defined as follows:

| Severity Level | Description           |
|----------------|-----------------------|
| Emergency      | System is unusable    |
| Alert          | Action must be taken  |
| Critical       | Critical conditions   |
| Error          | Error conditions      |
| Warning        | Warning conditions    |
| Notice         | Significant condition |
| Info           | Informational message |
| Debug          | Debug-level message   |
| None           | No severity           |
| *              |                       |

#### Address Conflict



#### Note

Only one address conflict trigger per interface can be configured.

| Parameter | Description                                  |
|-----------|----------------------------------------------|
| Interface | A valid vlan interface                       |
| Interval  | Preferred sample interval in seconds (1-300) |

#### Ddm Bias Current

| Parameter    | Description                                                                                                                        |
|--------------|------------------------------------------------------------------------------------------------------------------------------------|
| Condition    | Define whether the HIGH or LOW trigger state should be considered the alarm state, while the other is considered the normal state. |
| Threshold    | Alarm events will be generated when reaching the rising threshold on the way up, and the falling threshold on the way down.        |
| <u>Ports</u> | The ddm port(s) to trigger alarm on                                                                                                |

#### Ddm Rx Power

| Parameter    | Description                                                                                                                        |
|--------------|------------------------------------------------------------------------------------------------------------------------------------|
| Condition    | Define whether the HIGH or LOW trigger state should be considered the alarm state, while the other is considered the normal state. |
| Threshold    | Alarm events will be generated when reaching the rising threshold on the way up, and the falling threshold on the way down.        |
| <u>Ports</u> | The ddm port(s) to trigger alarm on                                                                                                |

### Ddm Temperature

| Parameter    | Description                                                                                                                        |
|--------------|------------------------------------------------------------------------------------------------------------------------------------|
| Condition    | Define whether the HIGH or LOW trigger state should be considered the alarm state, while the other is considered the normal state. |
| Threshold    | Alarm events will be generated when reaching the rising threshold on the way up, and the falling threshold on the way down.        |
| <u>Ports</u> | The ddm port(s) to trigger alarm on                                                                                                |

### Ddm Tx Power

| Parameter    | Description                                                                                                                        |
|--------------|------------------------------------------------------------------------------------------------------------------------------------|
| Condition    | Define whether the HIGH or LOW trigger state should be considered the alarm state, while the other is considered the normal state. |
| Threshold    | Alarm events will be generated when reaching the rising threshold on the way up, and the falling threshold on the way down.        |
| <u>Ports</u> | The ddm port(s) to trigger alarm on                                                                                                |

### Ddm Voltage

| Parameter    | Description                                                                                                                        |
|--------------|------------------------------------------------------------------------------------------------------------------------------------|
| Condition    | Define whether the HIGH or LOW trigger state should be considered the alarm state, while the other is considered the normal state. |
| Threshold    | Alarm events will be generated when reaching the rising threshold on the way up, and the falling threshold on the way down.        |
| <u>Ports</u> | The ddm port(s) to trigger alarm on                                                                                                |

### DigIn

Triggers on the presence of input voltage/current on the Digital-In pins of the Digital I/O connector.

| Parameter | Description                                                                                                                            |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------|
| Condition | Define whether the HIGH or LOW trigger state should be considered the alarm state, while the other is considered the normal state.     |
| Sensors   | Which sensor to trigger alarm on. If the device only have one sensor, then that sensor will be selected and this option is not visible |

### Frnt

Triggers when an FRNT ring is broken or healed (intact).

#### Warning

As of WeOS 5.21: This is a deprecated trigger, use the Ring trigger instead!



#### Note

Only an FRNT focal point can determine the ring status with certainty.

| Parameter | Description                                                                                                                       |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------|
| Condition | Define whether the UP or DOWN trigger state should be considered the alarm state, while the other is considered the normal state. |
| Ring Id   | Which FRNT ring id to trigger alarm on                                                                                            |

#### Lff

| Parameter    | Description                                                                                                                       |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Condition    | Define whether the UP or DOWN trigger state should be considered the alarm state, while the other is considered the normal state. |
| <u>Ports</u> | The dsl port(s) to trigger alarm on                                                                                               |

#### Link Alarm

Triggers when the status of a link changes (goes up or down).

| Parameter    | Description                                                                                                                       |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Condition    | Define whether the UP or DOWN trigger state should be considered the alarm state, while the other is considered the normal state. |
| <u>Ports</u> | The port(s) to trigger alarm on                                                                                                   |

#### Media

Triggers if the external media device (USB or SD card) is available or unavailable.

| Parameter | Description                                                                                                                                     |
|-----------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Condition | Define whether the Available or Unavailable trigger state should be considered the alarm state, while the other is considered the normal state. |
| Interval  | The interval (seconds) between checks                                                                                                           |

#### Media Threshold

Triggers if the used space on the media device (USB or SD card) exceeds the configured threshold.

| Parameter | Description                                                                           |
|-----------|---------------------------------------------------------------------------------------|
| Interval  | The interval (seconds) between checks                                                 |
| Threshold | The threshold to trigger the alarm at. In Percent, Kilobytes, Megabytes, or Gigabytes |

#### MicroLok

| Parameter | Description                                                                                                                        |
|-----------|------------------------------------------------------------------------------------------------------------------------------------|
| Condition | Define whether the HIGH or LOW trigger state should be considered the alarm state, while the other is considered the normal state. |

## Mrp

| Parameter | Description                                                                                                                        |
|-----------|------------------------------------------------------------------------------------------------------------------------------------|
| Condition | Define whether the HIGH or LOW trigger state should be considered the alarm state, while the other is considered the normal state. |

## Ping

A connectivity checker, sends an ICMP ping in a configurable interval.

| Parameter     | Description                                                                                                                       |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Condition     | Define whether the UP or DOWN trigger state should be considered the alarm state, while the other is considered the normal state. |
| Peer          | The host to test the connectivity against.                                                                                        |
| Outbound      | Use to force ping to use a specific interface, IP Address (if supported), or Default Gateway                                      |
| Interval      | The interval (seconds) between ICMP Pings                                                                                         |
| Trigger level | The number of ICMP ping that should be lost (or received) to determine if a host is unreachable (or reachable).                   |
| Initial state | The initial alarm state of the trigger                                                                                            |

## PoE

Triggers when the total power usage raises above (or falls below) a configured threshold.

| Parameter             | Description                                                                                                                        |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------|
| Condition             | Define whether the HIGH or LOW trigger state should be considered the alarm state, while the other is considered the normal state. |
| Utilization Threshold | Alarm events will be generated when reaching the rising threshold on the way up, and the falling threshold on the way down.        |

## Power

Triggers when the temperature rises above (or falls below) some defined threshold.

| Parameter | Description                                                                                                                            |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------|
| Condition | Define whether the UP or DOWN trigger state should be considered the alarm state, while the other is considered the normal state.      |
| Sensors   | Which sensor to trigger alarm on. If the device only have one sensor, then that sensor will be selected and this option is not visible |

## Profinet

| Parameter | Description                                                                                                                        |
|-----------|------------------------------------------------------------------------------------------------------------------------------------|
| Condition | Define whether the HIGH or LOW trigger state should be considered the alarm state, while the other is considered the normal state. |

## RiCh

| Parameter | Description                                                                                                                        |
|-----------|------------------------------------------------------------------------------------------------------------------------------------|
| Condition | Define whether the HIGH or LOW trigger state should be considered the alarm state, while the other is considered the normal state. |

## RiCo Uplink

Triggers when the total power usage raises above (or falls below) a configured threshold.

| Parameter    | Description                                                                                                                       |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Condition    | Define whether the UP or DOWN trigger state should be considered the alarm state, while the other is considered the normal state. |
| <u>Ports</u> | The port(s) to trigger alarm on                                                                                                   |

## Ring

Triggers when an ring is open or closed (intact)

| Parameter | Description                                                                                                                       |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------|
| Condition | Define whether the UP or DOWN trigger state should be considered the alarm state, while the other is considered the normal state. |
| Protocol  | Which ring protocol to configure the trigger for (FRNT, MRP, HSR, PRP)                                                            |
| Ring Id   | Which ring id to trigger alarm on                                                                                                 |

## RioCgi

| Parameter     | Description                                                                                                                        |
|---------------|------------------------------------------------------------------------------------------------------------------------------------|
| Condition     | Define whether the HIGH or LOW trigger state should be considered the alarm state, while the other is considered the normal state. |
| Pattern       | The pattern to match                                                                                                               |
| Query         | The query for trigger                                                                                                              |
| Initial state | The initial alarm state of the trigger                                                                                             |

## Snr Margin

| Parameter     | Description                                                                                                                        |
|---------------|------------------------------------------------------------------------------------------------------------------------------------|
| Condition     | Define whether the HIGH or LOW trigger state should be considered the alarm state, while the other is considered the normal state. |
| Snr Threshold | Alarm events will be generated when reaching the rising threshold on the way up, and the falling threshold on the way down.        |
| <u>Ports</u>  | The dsl port(s) to trigger alarm on                                                                                                |

## Storm Detect

| Parameter | Description                                                                                                                 |
|-----------|-----------------------------------------------------------------------------------------------------------------------------|
| Threshold | Alarm events will be generated when reaching the rising threshold on the way up, and the falling threshold on the way down. |
| Persitent | Optional timeout (in seconds)                                                                                               |

| Parameter       | Description                          |
|-----------------|--------------------------------------|
| Traffic type(s) | Broadcast, Multicast, and/or Unicast |
| Ports           | The port(s) to trigger alarm on      |

#### Temperature

Triggers when the temperature rises above (or falls below) some defined threshold.

| Parameter             | Description                                                                                                                            |
|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Condition             | Define whether the HIGH or LOW trigger state should be considered the alarm state, while the other is considered the normal state.     |
| Temperature Threshold | Alarm events will be generated when reaching the rising threshold on the way up, and the falling threshold on the way down.            |
| Sensors               | Which sensor to trigger alarm on. If the device only have one sensor, then that sensor will be selected and this option is not visible |

#### Timer

Goes off at given time interval.

| Parameter | Description                                            |
|-----------|--------------------------------------------------------|
| Timeout   | At what time during the day should the trigger go off? |

#### 4.4.28. WeConnect

##### WeOS 5

WeConnect is a task that provisions a secure VPN tunnel between a Westermo device and the WeConnect cloud platform. The wizard guides you through precondition checks, credential entry, interface selection, and automated provisioning of SSL tunnels, firewall rules, and RIP routing.

##### Info

To use WeConnect, the target device must have an active internet connection and have a DNS server capable of identifying the WeConnect server.

##### Preconditions

 
Before provisioning can begin, WeConfig automatically verifies that the device meets the following requirements:

| Precondition               | Description                                                                     |
|----------------------------|---------------------------------------------------------------------------------|
| VLAN interfaces            | At least two VLAN interfaces must be configured on the device.                  |
| SSL tunnel 253             | SSL tunnel 253 must be available (not already in use by another configuration). |
| RIP routing                | RIP routing must not already be configured on the device.                       |
| Internet reachable         | The device must be able to reach the internet.                                  |
| WeConnect server reachable | The device must be able to reach the WeConnect server.                          |
| System clock               | The device system clock must be within 24 hours of the server time.             |

If any precondition is not met, the wizard will indicate the issue and provisioning cannot proceed until it is resolved.

## Interface Components

### WeConnect

10.0.2.4 Machine 11@Plant A Bench 11

 Info

WeConnect is already configured on this device (SSL tunnel 253 is in use).

☐ Overwrite

#### Credentials

Netcode + OTP

ZIP file

Secure Network Code:

One Time Password:

#### Preconditions

- ✗ The device must be able to reach the internet
- ✗ The device must be able to reach the WeConnect server
- ✗ The device time and the server time must differ by no more than 24 hours
- ✗ At least 2 VLAN interfaces must be configured
- ✗ SSL tunnel 253 must be available for configuration
- ✗ RIP routing must not be configured

#### Interface Selection

☒ vlan2 (VLAN 2)

☒ NAT

Install

## Credentials

WeConnect supports two credential modes for authenticating with the WeConnect service:

| Mode          | Description                                                                                 |
|---------------|---------------------------------------------------------------------------------------------|
| Netcode + OTP | Enter a Secure Network Code and a One Time Password provided by Westermo.                   |
| ZIP file      | Select a ZIP file containing the configuration bundle downloaded from the WeConnect portal. |

Choose the appropriate mode and provide the required credentials to proceed.

## Interface Selection

Select which VLAN interfaces on the device should be routed through the WeConnect tunnel. You may also configure NAT (Network Address Translation) for WeConnect traffic in this stage.

## Provisioning

Once credentials and interfaces are confirmed, WeConfig automatically provisions the device.

The following steps are performed:

1. Connectivity check – Verifies the device can reach the WeConnect server.
2. SSL tunnel configuration – Creates and configures SSL tunnel 253 with the provided credentials.
3. RIP routing – Configures RIP routing for the selected interfaces.
4. Firewall rules – Adds the necessary firewall rules to allow WeConnect traffic.

Progress is displayed in real time. Do not disconnect or power off the device during provisioning.

### Warning

Provisioning modifies the device's SSL tunnel, firewall, and RIP routing configuration. It is recommended that you have a backup of the device configuration before proceeding.

## Managing Existing Configurations

If a device already has a WeConnect configuration, the wizard offers the following actions:

| Action    | Description                                                                                                             |
|-----------|-------------------------------------------------------------------------------------------------------------------------|
| Reinstall | Re-provisions the device with a fresh WeConnect configuration, replacing the existing one.                              |
| Uninstall | Removes the WeConnect configuration from the device, including the SSL tunnel, firewall rules, and RIP routing entries. |

## Troubleshooting

The following errors may occur during WeConnect provisioning:

| Error                             | Possible Cause                                                            | Resolution                                                                 |
|-----------------------------------|---------------------------------------------------------------------------|----------------------------------------------------------------------------|
| Device not supported              | WeConfig does not support WeConnect configuration on the selected device. | -                                                                          |
| TLS certificate validation failed | The device could not validate the WeConnect server's TLS certificate.     | Check the device system clock and ensure root certificates are up to date. |
| System clock too far off          | The device clock differs from the server by more than 24 hours.           | Synchronize the device clock via NTP or manual configuration.              |
| Configuration bundle corrupt      | The provided ZIP file is damaged or incomplete.                           | Re-download the configuration bundle from the WeConnect portal.            |

| Error                                | Possible Cause                                                               | Resolution                                                          |
|--------------------------------------|------------------------------------------------------------------------------|---------------------------------------------------------------------|
| Credentials rejected                 | The Secure Network Code or One Time Password was not accepted by the server. | Verify the credentials and ensure the OTP has not expired.          |
| Network connectivity issue           | The device cannot reach the internet or the WeConnect server.                | Check the device's network configuration and upstream connectivity. |
| SSL tunnel import failed             | The SSL tunnel configuration could not be applied to the device.             | Ensure tunnel 253 is available and the device supports SSL tunnels. |
| RIP or firewall configuration failed | The RIP routing or firewall rules could not be applied.                      | Check for conflicting RIP or firewall configurations on the device. |

## 4.4.29. Aggregates

WeOS 4

WeOS 5

Aggregates is a task that allows for configuration of static and LACP based port aggregates.

Interface components

### Aggregate configuration

198.18.1.2 Plant A Router@Plant A



**A0**  
☒ Enabled  
Name   
Type   
Mode   
Timeout   

|                          |                          |                                     |                                     |                          |                          |                          |                          |                          |
|--------------------------|--------------------------|-------------------------------------|-------------------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| ETH 1/1                  | ETH 1/2                  | ETH 1/3                             | ETH 2/1                             | ETH 2/2                  | ETH 2/3                  | ETH 2/4                  | ETH 2/5                  | ETH 2/6                  |
| <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| ETH 2/7                  | ETH 2/8                  | ETH 3/1                             | ETH 3/2                             | ETH 3/3                  | ETH 3/4                  | ETH 3/5                  | ETH 3/6                  | ETH 3/7                  |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| ETH 3/8                  |                          |                                     |                                     |                          |                          |                          |                          |                          |
| <input type="checkbox"/> |                          |                                     |                                     |                          |                          |                          |                          |                          |

Remove

**A1**  
☒ Enabled  
Name   
Type   

|                                     |                                     |                          |                          |                          |                          |                          |                          |                          |
|-------------------------------------|-------------------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| ETH 1/1                             | ETH 1/2                             | ETH 1/3                  | ETH 2/1                  | ETH 2/2                  | ETH 2/3                  | ETH 2/4                  | ETH 2/5                  | ETH 2/6                  |
| <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| ETH 2/7                             | ETH 2/8                             | ETH 3/1                  | ETH 3/2                  | ETH 3/3                  | ETH 3/4                  | ETH 3/5                  | ETH 3/6                  | ETH 3/7                  |
| <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| ETH 3/8                             |                                     |                          |                          |                          |                          |                          |                          |                          |
| <input type="checkbox"/>            |                                     |                          |                          |                          |                          |                          |                          |                          |

Remove

+ Add

▶ Apply

As depicted above, the aggregate configuration interface consists of a list of devices, in this example a singular one, with a list of zero-or-more configured aggregates within. Each aggregate can be configured with a name, whether or not it's enabled, which type of aggregate it is and the ports that are included within it.

As can be seen above, when configuring LACP-type aggregates, options for configuring mode and timeout are also present.

Finally, aggregates that are no longer desired can be removed with the "Remove" button, and new aggregates can be created with the "Add" button beneath the list of each device.

#### 4.4.30. Access Point

##### Merlin

Access Point is a task that allows for configuration of Mobile Access Points, allowing wireless clients to connect to the network through it. Currently, only Merlin devices support this configuration feature.

Interface components

WeOS 5

**Access Point Name (APN)**

10.0.3.11 Merlin Router 1@Plant B

Access Point Name (APN)

| SIM Card | APN  | Username      | Password | Public Land Mobile Network |
|----------|------|---------------|----------|----------------------------|
| 1        | apn  | username      | .....    |                            |
| 2        | apn2 | otherUserName | .....    | 12345                      |

+ Add

Apply

The interface displays each selected device with its IP address and hostname. Within each device view, access point entries are presented in a grouped table where each row represents a single mobile access point configuration. If there exists the possibility of configuring more Access points on the device, the “Add” button will be enabled and clickable, otherwise, it will not be.

##### SIM Card

A dropdown selector that specifies which SIM card slot the access point entry is associated with. Available options correspond to the physical SIM slots on the device.

##### APN

The Access Point Name used to identify the packet data network the device should connect to.

##### Username

The username credential required for authenticating with the mobile network, if applicable.

##### Password

The password credential for network authentication. The field is masked by default, with a visibility toggle button to reveal the value.

Public Land Mobile Network

An optional numeric identifier for the specific mobile network to connect to.

## Per-Device Views


### 4.4.31. Route Table

WeOS 4

WeOS 5

Merlin
 
#### Route Table

10.0.2.4 Machine 11@Plant A Bench 11

Last updated 20 August 2026 12:03:42

Routing Table:

| Type      | Subnet Address | Interface | Gateway Address | Distance |
|-----------|----------------|-----------|-----------------|----------|
| Connected | 127.0.0.0/8    | lo        | 0.0.0.0         | 0        |
| Connected | 198.18.1.0/24  | vlan1     | 0.0.0.0         | 0        |
| Static    | 192.168.1.0/24 | vlan1     | 198.18.1.192    | 1        |
| Ospf      | 10.10.0.0/16   | vlan2     | 198.18.1.10     | 101      |

Auto Refresh Off ▼Refresh

This panel shows the routing table of the selected device at the time of the last refresh. It also contains a Refresh for quick access to updating its relevant information.

Once the routing table has been fetched from the device, the user interface will show the routing table and the time when the information was received by WeConfig. The information is persisted in memory; the information is retained between device selections, and will be stored as part of the project file.

4.4.32. Properties

WeOS 4

WeOS 5


Ibex

XRD

Merlin

other

# Properties

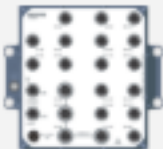


10.0.2.4 Machine 11@Plant A Bench 11

|                    |                                  |
|--------------------|----------------------------------|
| Status             |                                  |
| Hostname           | Machine 11                       |
| Location           | Plant A Bench 11                 |
| IP Address         | 10.0.2.4                         |
| Netmask            | 255.255.255.0                    |
| Default Gateway    |                                  |
| MAC                | 00:07:7C:23:C1:C0                |
| Manufacturer       | Westermo Network Technologies AB |
| Means of discovery | mDNS                             |
| Family             | Viper                            |
| Model              | Viper-120A-T4G                   |
| Firmware           | 5.22.0                           |
| Bootloader:        | 2024.03.0-1                      |
| Serial Number      | 1750                             |
| Host Key           | Unknown                          |
| Thumbprint         | thumbnail@10.0.2.4               |
| Available Memory   | 81610 KB                         |
| FRNT               | Member                           |
| Temperature        | 25 °C                            |
| Alarm              | No                               |
| Power 1            | High                             |
| Power 2            | High                             |
| Art.No.            | 3641-4100                        |

This panel contains a number of properties that WeConfig knows about the device. It is updated dynamically whenever WeConfig's knowledge of the specified properties changes. The following properties are available:

| Property           | Description                                                                                                                                                                                                                                                                                            |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Status             | Last reported status by WeConfig regarding this device                                                                                                                                                                                                                                                 |
| Hostname           | System hostname of the device                                                                                                                                                                                                                                                                          |
| Location           | System location of the device                                                                                                                                                                                                                                                                          |
| IP Address         | Primary management IP address associated with the device                                                                                                                                                                                                                                               |
| Netmask            | The netmask associated with the primary management IP address                                                                                                                                                                                                                                          |
| Default Gateway    | Default gateway configured to the device, if any                                                                                                                                                                                                                                                       |
| MAC                | MAC address associated with the device, or responding NIC, if no MAC address for the device itself is known                                                                                                                                                                                            |
| Manufacturer       | Organization identified by the MAC address of the device / NIC                                                                                                                                                                                                                                         |
| Means of Discovery | A note on how WeConfig discovered the device, typically listed either as a address plus protocol, i.e 169.254.145.82 [IPConfig], or just protocol, i.e as in the picture mDNS which, in the former case, indicates that it was discovered using the IPConfig protocol from the address 169.254.145.82. |
| Family             | Identified device product family, if any                                                                                                                                                                                                                                                               |
| Model              | Identified specific device model, if any                                                                                                                                                                                                                                                               |
| Firmware           | The identified primary firmware version running on the device                                                                                                                                                                                                                                          |
| Revision           | The identified Hardware Revision, if any, primarily relevant for xRD devices                                                                                                                                                                                                                           |
| Backup firmware    | The identified secondary firmware version on the device, if any                                                                                                                                                                                                                                        |
| Bootloader         | The identified bootloader version running on the device, if any                                                                                                                                                                                                                                        |
| Serial Number      | The serial number reported by the device                                                                                                                                                                                                                                                               |
| Host Key           | SSH host key associated with trying to access the device, used to help detect MITM-attacks, and as a possible source of device identity                                                                                                                                                                |
| Thumbprint         | TCP-connection certificate thumbprint identified, if any, used as a possible source of device identity                                                                                                                                                                                                 |
| Available Memory   | Last reported available memory on the device                                                                                                                                                                                                                                                           |
| Load Average       | Average CPU load over the last minute, five minutes and fifteen minutes respectively                                                                                                                                                                                                                   |
| FRNT               | FRNT ring status of the device, either nothing, member or focal point                                                                                                                                                                                                                                  |
| Temperature        | Last reported device Temperature                                                                                                                                                                                                                                                                       |
| Uptime             | Last reported device uptime.                                                                                                                                                                                                                                                                           |
| Alarm              | If the device has any outgoing alarms that WeConfig can detect                                                                                                                                                                                                                                         |
| Power1             | Last qualitative reporting on Power into slot 1 from the device                                                                                                                                                                                                                                        |
| Power2             | Last qualitative reporting on Power into slot 2 from the device                                                                                                                                                                                                                                        |
| Art. No.           | Reported Article number of the device                                                                                                                                                                                                                                                                  |

#### 4.4.33. Attachments

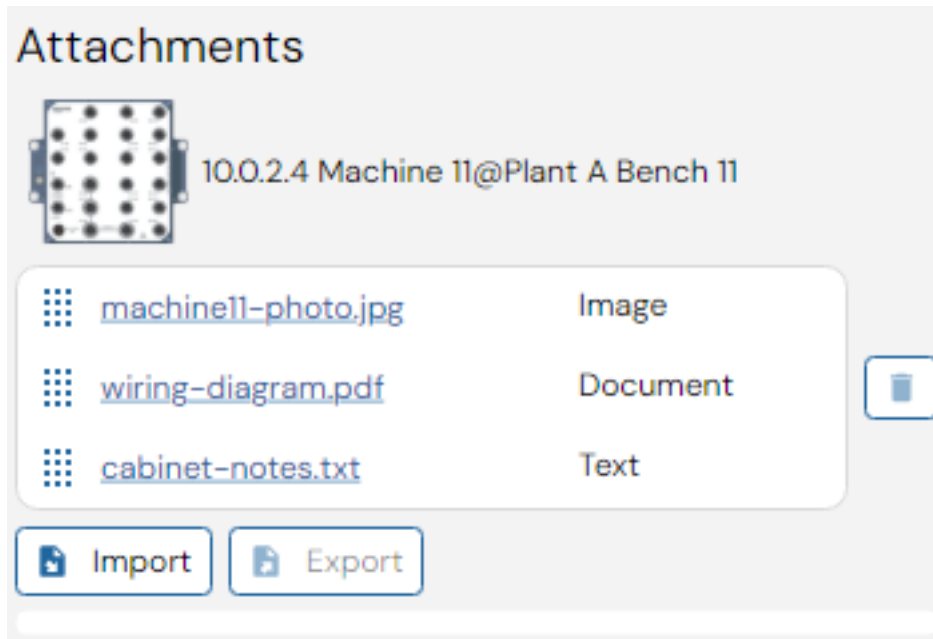

This panel displays the file attachments associated with the currently last selected device as a list of links and format explanations.

Additional attachments may be added to the device here by clicking the “Import” button, and may be exported unto the regular file system using the “Export” button with a specific attachment selected. Attachments can also be deleted by selecting them and pressing the Trashcan button to the right side of the interface.

Clicking on any of the links for any of the attachments will open the corresponding file using the running operating systems preferred method. When the process the operating system decided to open is closed, such as when the user completes editing a file, the attachment will be updated and packed back into the project.

#### 4.4.34. Configuration Files

WeOS 4


WeOS 5

Ibex

XRD

Merlin

This panel displays the configuration files associated with the currently last selected device.

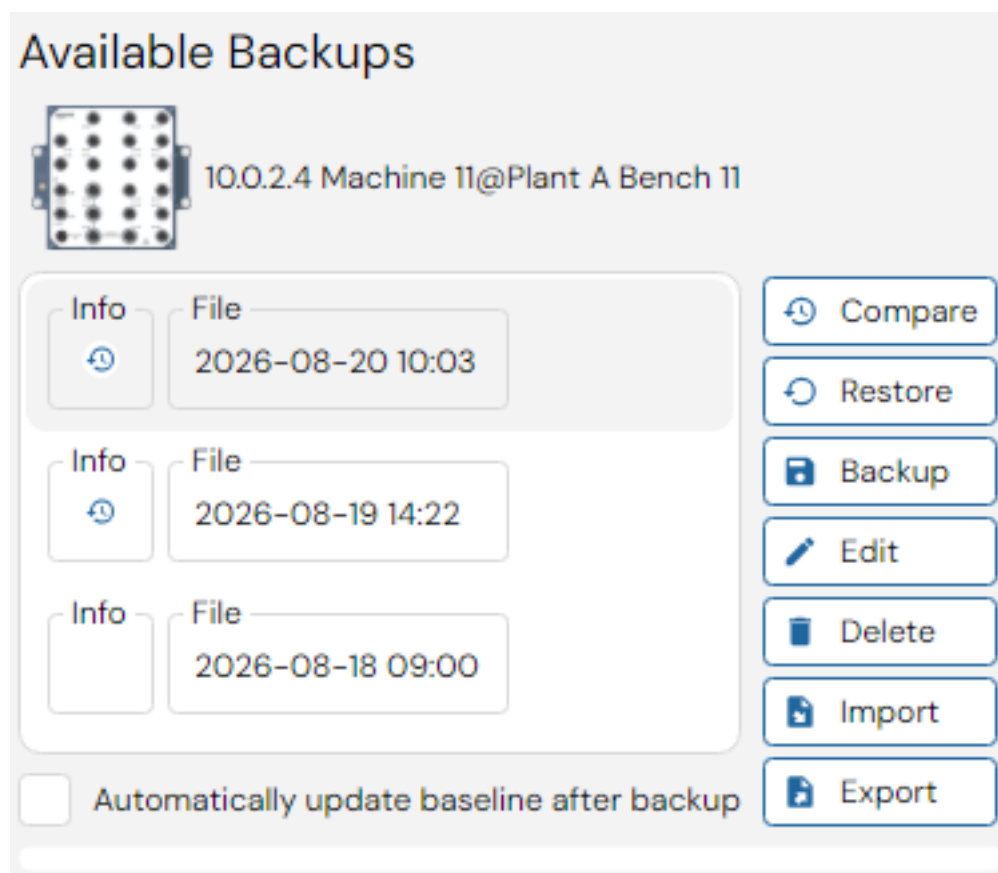

Select a device and currently available configuration file backups are listed (in local time order) in this panel. Configuration can be backed up, restored, edited, imported, exported, or deleted.

When selecting Automatically update baseline after backup the following backup will be used as new baseline.

When a listed configuration backup file differs from previous entry in the list, an icon is shown to the left of the entry. Click the icon to show actual file differences in a separate window.

WeConfig uses an internal viewer that shows differences. This viewer can be changed to any other viewer via the [settings](#).

#### 4.4.35. Communication Summary

WeOS 4

WeOS 5

XRD

Ibex

### Communication Summary



10.0.2.4 Machine 11@Plant A Bench 11

| IP Address | Port Description | Link | State      | Speed    | Duplex | SNR |
|------------|------------------|------|------------|----------|--------|-----|
| 10.0.2.4   | 1                | Up   | Forwarding | 10 Mbps  | Full   | n/a |
| 10.0.2.4   | 2                | Down | Disabled   | n/a      | Full   | n/a |
| 10.0.2.4   | 3                | Up   | Forwarding | 10 Mbps  | Full   | n/a |
| 10.0.2.4   | 4                | Up   | Forwarding | 40 Mbps  | Full   | n/a |
| 10.0.2.4   | 5                | Up   | Forwarding | 90 Mbps  | Full   | n/a |
| 10.0.2.4   | 6                | Up   | Forwarding | 160 Mbps | Full   | n/a |
| 10.0.2.4   | 7                | Up   | Forwarding | 250 Mbps | Full   | n/a |
| 10.0.2.4   | 8                | Up   | Forwarding | 360 Mbps | Full   | n/a |
| 10.0.2.4   | 9                | Up   | Forwarding | 490 Mbps | Full   | n/a |

#### Port 1

Id 00:07:7C:23:C1:C2  
Link Status Down

#### Traffic Counters

|                   | Inbound | Outbound |
|-------------------|---------|----------|
| Total Bytes       | 0       | 0        |
|                   | 0       | 0        |
| Broadcast Packets |         |          |
| Multicast Packets |         |          |
| Unicast Packets   | 0       | 0        |
| Dropped Packets   |         |          |

Auto Refresh Off

Refreshing...

Export

Refresh

This panel lists a summary of communication information for ports on selected device.

Select a port in the list and detailed information will be available in the Communication Details section found to the right-hand side of the panel.

The communication information can be automatically updated every 5, 10, 30 or 60 seconds. Select an option in the drop-down found below the communication summary list. Click the Export button and the list is exported to a CSV file.

#### Communication Details

This part of the panel contains more details information regarding communication on a specific, selected port. Such as the port MAC Id, its link status and various transmission history properties and statistics.

#### 4.4.36. Cellular

Ibex

XRD

Merlin

## Cellular



10.0.3.11 Merlin Router 1@Plant B

### Service information

|                      |          |
|----------------------|----------|
| Self test            | ok       |
| Service ID           | WEMO     |
| Service name         | Westermo |
| Primary SIM          | SIM1     |
| SIM status           | ok       |
| Modem status         | online   |
| ICCID                | ICCDOM   |
| Roaming              | No       |
| Cellular signal type | 5G       |

### Network

|                  |           |
|------------------|-----------|
| Registration     | Singular  |
| Provider         | WEMOPRO   |
| Cell location ID | Onboard   |
| Cell ID          | Docuphone |

### Packet network

|                      |           |
|----------------------|-----------|
| Connection state     | connected |
| Current session time | 123       |
| Total session time   | 234       |

### Wireless CSD network

|                      |           |
|----------------------|-----------|
| Connection state     | connected |
| Sessions             | 3         |
| Current session time | 345       |
| Total session time   | 567       |

### Signal information

|      |         |  |
|------|---------|--|
| Type | 5G NR   |  |
| RSRQ | -3.3 db |  |
| RSRP | -44 dbm |  |
| RSSI | -51 dbm |  |
| SINR | 29.3 db |  |

### Network information

|            |                 |
|------------|-----------------|
| wlan0      |                 |
| IP Address | 169.254.0.0/16  |
| APN        | APNO            |
| DNS 1      | 0.0.0.0         |
| DNS 2      | 255.255.255.255 |
| Gateway    | 127.0.0.1       |

### LTE Information

|                         |                |
|-------------------------|----------------|
| Supported Bands         | 1, 2, 4, 8, 16 |
| Active Band             | 2              |
| Cell ID                 | 123            |
| Physical Cell ID        | 234            |
| EPS Registration Status | 53412          |

This panel displays information regarding the cellular status of the device, if applicable. The information held within primarily concerns xRD, Ibex, and Merlin devices. Depicted above is an example of a disconnected MRD-405, where it can be observed that, for example, its cellular self-test succeeded, it's operating in packet mode, but it has no network registration, and more.

## Maintenance

### 4.4.37. Backup

WeOS 4 WeOS 5 Ibex XRD Merlin

Backup is a task that allows the user to perform multi-device backups in batches. Any backups generated with this functionality are saved with UTC time stamp.

## Interface components

### Backup Configuration

☐ Automatically update baseline after backup

198.18.2.5 TheWolverine@"direct"



Netmask

255.255.255.0

MAC

00:07:7C:03:D3:40

198.18.2.87 redfox-6e-34-60@



Netmask

255.255.255.0

MAC

00:07:7C:6E:34:60

198.18.2.88 lynx-1c-d2-a0@



Netmask

255.255.255.0

MAC

00:07:7C:1C:D2:A0

198.18.2.7 TheWolverine3@direct



Netmask

255.255.255.0

MAC

00:07:7C:04:77:00

 Apply

Depicted above is an example of how the user interface may appear for a set of selected devices. Each device is simply listed as an indicator for which devices will receive a backup command on task execution.

When selecting Automatically update baseline after backup at the top, then the following backup will be used as new baseline for the devices.

169/240

#### 4.4.38. Firmware Upgrade

WeOS 4

WeOS 5

Ibex

XRD

Merlin

Firmware upgrade is a staged task that allows for upgrading or downgrading the running, backup and bootloader firmware on supported devices.

##### Info

To be able to use this feature, you must be connected to the internet, or have downloaded desired firmware ahead of time. If you have downloaded the firmware ahead of time, ensure it is placed in the firmware folder

#### Interface Components

The firmware upgrade interface is divided into five stages, Family, Version, Devices, Algorithm and Overview, where each is explained below:

## Family

| Family                                                             | Version | Devices               | Algorithm | Overview |
|--------------------------------------------------------------------|---------|-----------------------|-----------|----------|
| <div><div></div><div></div><div></div><div></div><div></div></div> |         |                       |           |          |
| WeOS 5                                                             |         |                       |           |          |
| Latest Version 5.29.0                                              |         | Available Versions 37 |           |          |
| WeOS 4                                                             |         |                       |           |          |
| Latest Version 4.35.0                                              |         | Available Versions 65 |           |          |
| Ibex                                                               |         |                       |           |          |
| Latest Version 6.12.1-0                                            |         | Available Versions 13 |           |          |
| MRD-x05                                                            |         |                       |           |          |
| Latest Version 1.9.5.0 HW 2                                        |         | Available Versions 2  |           |          |
| BRD-355                                                            |         |                       |           |          |
| Latest Version 1.9.5.0 HW 1-2                                      |         | Available Versions 2  |           |          |
| Merlin                                                             |         |                       |           |          |
| Latest Version                                                     |         | Available Versions 0  |           |          |
| <div><div></div>Apply</div>                                        |         |                       |           |          |

The first stage in firmware upgrade presents you with a choice of firmware families detected in the network. Where each family is listed as box with the title being the firmware family name, and the contents showcasing the latest version available within said family, as well as the total number of firmware versions present.

Click on the desired firmware family to proceed to the next stage.



### Note

If only one firmware family currently exists in the network, this stage is skipped.

## Version

Family

Version

Devices

Algorithm

Overview

✓ WeOS 5

☒ Backup

☒ Only required steps

☐ Install Latest Bootloader

☐ Skip secondary

☐ Stop on first fail

☒ Set new defaults

☐ Show only downloaded

Apply

The second stage in firmware upgrade presents a list of firmwares based on the selected family in the prior stage. These may either be marked as Validated, via a green checkmark, or as Unvalidated, via a yellow triangle with an exclamation point. A firmware version is considered Unvalidated when it originates from the users local disk, instead of being downloaded by WeConfig.

WeConfig makes no guarantees about the functionality or safety of Unvalidated firmware.

Additionally, this view will also indicate the download status of each firmware in the list. If the firmware is not already downloaded, as indicated in the picture above by the “Not downloaded” text

Click on the desired firmware version to proceed to the next stage.



#### Note

If only one firmware version exists in the selected family, this stage is skipped.

#### Devices

Family

Version

Devices

Algorithm

Overview

✓

WeOS 5

✓

5.29.0

☒ Backup ☒ Only required steps ☐ Install Latest Bootloader ☐ Skip secondary ☐ Stop on first fail ☒ Set new defaults

Search - Regular Expression

Select Visible

Select All

Deselect All

RFI-AE

198.18.1.1

5.10.0

lynx-4d-77-40

198.18.1.15

5.25.0

redfox-53-df-60

198.18.1.10

5.22.2

lynx-4d-7c-e0

198.18.1.12

5.26.1

viper-60-a4-a0

198.18.1.13

5.26.1

✓ Confirm

▶ Apply

The third stage in firmware upgrade presents a list of devices compatible with the selected firmware version, where any matching devices already selected in the topology are

preselected. The list will also display any possible issues or warnings related to firmware upgrade. At the top of the interface a search box is provided to filter the list of devices, this box accepts regular expressions for advanced filtering, and matches against the following properties:

- IP Address
- Hostname
- Location
- Firmware Version
- Model Name

Select the desired devices (either manually or using select all) and click “Confirm” to proceed to the next stage.

### Algorithm

The fourth stage in firmware upgrade presents three options for the order-of-execution of the firmware upgrade sequence, the options are as follows:

| Option               | Description                                                                     |
|----------------------|---------------------------------------------------------------------------------|
| Optimized            | Parallelizes firmware upgrade when possible according to <u>network order</u> . |
| Upgrade sequentially | Do not parallelize firmware upgrade, run them in displayed top-down order.      |
| Upgrade in parallel  | Attempt to do all firmware upgrades in parallel                                 |

Click on the chosen algorithm option to proceed.



#### Note

Unless a specific use-case demands otherwise, it is suggested to use the Optimized algorithm when you have a fully detailed connection map of the topology.

## Overview

Family Version Devices Algorithm Overview

WeOS 5 5.29.0 2 Devices Optimized

☒ Backup ☒ Only required steps ☐ Install Latest Bootloader ☒ Skip secondary ☐ Stop on first fail ☒ Set new defaults

RFI-AE@198.18.1.1

1 Primary Primary All All

5.12.1 5.21.1 5.22.2 5.29.0

lynx-4d-77-40@198.18.1.15

2 Primary

5.29.0

Apply

The fifth and final stage in firmware upgrade presents you with a list of planned actions for WeConfig to undertake. As can be observed in the example above, to take 198.18.1.1 to 5.29.0, WeConfig needs to upgrade it through the required versions of 5.12.1, 5.21.1, and 5.22.2 before finally upgrading to 5.29.0.

Additionally, any remaining potential issues are also displayed on the devices here.

The number to the left of the device is its Upgrade Order. This is based on the algorithm you chose in the previous step. Devices with the same number will be upgraded in parallel.

### Global options

Atop the interface in stage 2-5 several checkboxes may appear, which slightly change the firmware upgrade procedure when checked, they are as follows:


| Option                    | Description                                                                                                                                                                                      |
|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Backup                    | When checked, WeConfig will take a backup of the current configuration file before performing an upgrade, checked by default                                                                     |
| Only required steps       | When unchecked, WeConfig will move through every intermediary version between the source and target version, when checked, WeConfig will only move through the versions considered necessary     |
| Install latest bootloader | When checked, WeConfig will always attempt to upgrade the bootloader if a newer one exists in the provided firmware package, otherwise, WeConfig will only upgrade the bootloader when necessary |
| Skip Secondary            | When checked, WeConfig will not upgrade the backup firmware on any of the devices, otherwise, it will upgrade the backup firmware as well.                                                       |

| Option             | Description                                                                                                                                                                            |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Stop on first fail | When checked, WeConfig will not attempt further upgrades after the first failure occurs.                                                                                               |
| Set new defaults   | When checked, WeConfig applies factory default parameters to each device after the firmware upgrade completes. This resets device configuration to the new firmware version's defaults |

#### **i** Info

For firmware versions composed of multiple files (such as WeOS 5.26+), WeConfig handles the multi-file firmware package automatically. No additional user action is required – select the firmware package as usual, and WeConfig manages the individual files transparently during the upgrade process.

#### 4.4.39. Attachments

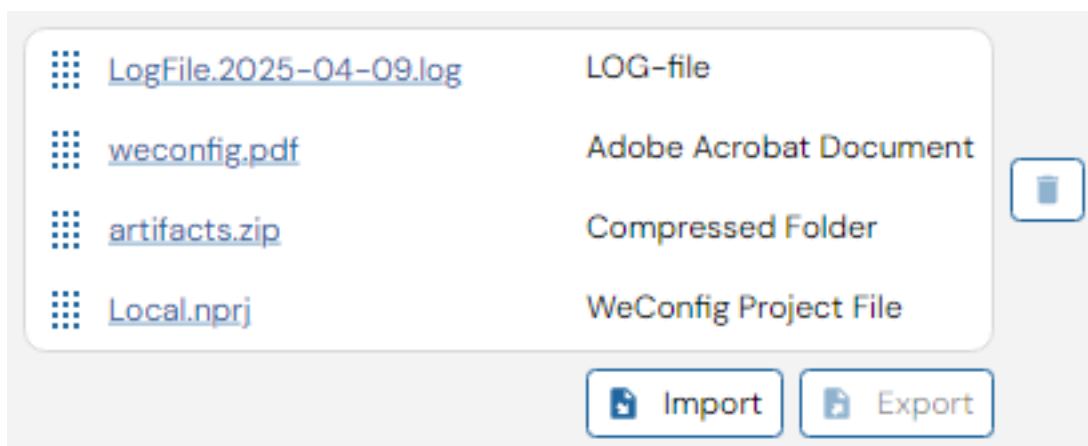

This panel displays the file attachments associated with the current project as a list of links and format explanations.

Additional attachments may be added to the device here by clicking the “Import” button, and may be exported unto the regular file system using the “Export” button with a specific attachment selected. Attachments can also be deleted by selecting them and pressing the Trashcan button to the right side of the interface.

Clicking on any of the links for any of the attachments will open the corresponding file using the running operating systems preferred method. When the process the operating system decided to open is closed, such as when the user completes editing a file, the attachment will be updated and packed back into the project.

#### 4.4.40. Device Access Settings

WeOS 4

WeOS 5

Ibex

XRD

Merlin

other

Device access settings is a panel dedicated to controlling how WeConfig authenticates and communicates with the devices in the network.

##### Interface components

The user interface of this panel is split into three tabs, Access, SNMP and Web, where each tab will contain a list of selected devices as well as an autofill section for quickly replicating settings across multiple devices. Below the three tabs two buttons are located, as follows:

- **Test Connection:** Check whether or not authentication/access succeeds given the current parameters in the panel. Success or failure will be indicated with either a green circle with a checkmark for success or a red circle with an exclamation point for failure attached to each relevant parameter.
- **Apply:** Sets the current parameters in the panel as the used authentication / access setting that WeConfig will associate with selected devices, then runs a Refresh on the selected devices.

##### Access Tab

The screenshot shows the 'Access' tab of the Device Access Settings panel. At the top, there are three tabs: 'Access' (selected), 'SNMP', and 'Web'. Below the tabs is an 'Auto Fill' dropdown menu. The main area contains four device configuration entries, each with a device icon, IP address, and various settings fields:

- 198.18.1.5 lynx@:** IP Address: 198.18.1.5 (vlan1), Username: admin, Password: [masked], Public Key: [checkbox] Use, SSH Port: 22, Retries: 1, Backoff: 10, Timeout: 3000. A green checkmark is visible on the right.
- 198.18.1.6 wolverine@:** IP Address: 198.18.1.6 (Unknown), Username: admin, Password: [masked], Public Key: [checkbox] Use.
- 198.18.1.32 BRD-355-e2-33-cf@:** IP Address: 198.18.1.32 (vlan1), Username: admin, Password: [masked]. A green checkmark is visible on the right.
- 198.18.1.20 test2@test1:** IP Address: 198.18.1.20, Username: admin, Password: [masked].

At the bottom right, there are two buttons: 'Test connection' and 'Apply'.

The first of the three tabs, labeled Access, corresponds to device specific settings for how to access the primary means of device communication / configuration, which varies from firmware category to firmware category.

For WeOS devices, this primarily refers to the account used for SSH communication, but is also used for HTTP(s) communication in certain specific scenarios such as firmware upgrade. In contrast, for Ibex devices, this primarily refers to the account used to talk to the REST API on the device, and so on.

The exact parameters presented per device varies in accordance with what it represents. On WeOS 4/5, you will be presented with the following options:

- IP Address: The management IP address used to reach the device, it is a dropdown list containing all known network interfaces / addresses that WeConfig has associated with the device.
- Username: The account username that WeConfig will try and authenticate with over SSH / Web.
- Password: The account password that WeConfig will try and authenticate with over SSH / Web, if any.
- Public Key: A checkbox indicating whether or not WeConfig should try to authenticate using the PC's public key store.
- SSH Port: Which port WeConfig should try and access the device on to reach an SSH session.


Similarly, it can be observed that for xRD's like the BRD - 355 depicted in the example above, only the password box will be editable, as that is the only form of authentication parameter that can be handled by that firmware at the time of writing.

Additionally, as depicted in the example above, when "Test Connection" has been run, the success of the configured parameters is indicated by checkmarks or exclamation points to the righthand side of each device parameter set.

#### Info

The contents of the Access tab may be automatically updated when configuring accounts.

### SNMP Tab

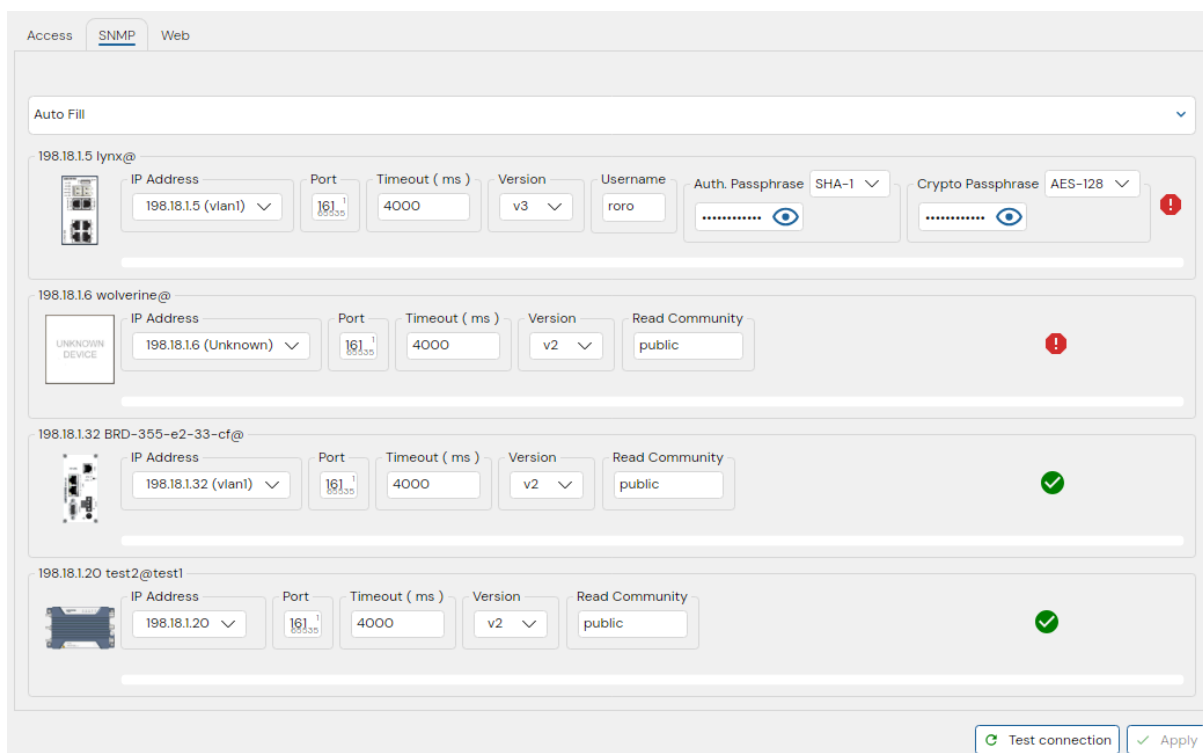

The screenshot displays the 'SNMP' tab in the WeConfig interface, with 'Access' and 'Web' tabs also visible. The interface is organized into a list of device configurations, each with a header bar containing the device name and IP address. Below each header is a form with various fields and a status indicator on the right.

| Device Name                   | IP Address           | Port | Timeout (ms) | Version | Read Community | Status                                              |
|-------------------------------|----------------------|------|--------------|---------|----------------|-----------------------------------------------------|
| 198.18.1.5 lynx@              | 198.18.1.5 (v1an1)   | 161  | 4000         | v3      | roro           | Auth. Passphrase: SHA-1, Crypto Passphrase: AES-128 |
| 198.18.1.6 wolverine@         | 198.18.1.6 (Unknown) | 161  | 4000         | v2      | public         | !                                                   |
| 198.18.1.32 BRD-355-e2-33-cf@ | 198.18.1.32 (v1an1)  | 161  | 4000         | v2      | public         | ✓                                                   |
| 198.18.1.20 test2@test1       | 198.18.1.20          | 161  | 4000         | v2      | public         | ✓                                                   |

At the bottom right of the interface, there are two buttons: 'Test connection' and 'Apply'.

The second of the three tabs, label SNMP, corresponds to device specific settings for how WeConfig communicates with devices using the SNMP protocol. It, similarly to the access tab,

has a dropdown box for selecting the target management IP address amongst the devices known IP addresses.

Secondly, each device contains a selector between SNMP v2 and SNMP v3, with the corresponding settable parameters adjusted based on your selection. For SNMP v2, only the read community needs to be set here. For SNMP v3, as can be seen, you must set a username, and may optionally set an authentication digest and password, as well as a privacy crypto and password.

Similarly to the Access tab, the success of using these parameters to communicate with the device is indicating to the righthand side as either a checkmark or an exclamation point.

**i** Info

The contents of the SNMP tab may be automatically updated when configuring SNMP

## Web Tab

Access

SNMP

Web

Auto Fill

198.18.1.5 lynx@



IP Address

198.18.1.5 (vlan1)

HTTP Port

80

65535

Use Standard

✓

HTTPS Port

443

65535

Use Standard

✓

198.18.1.6 wolverine@



IP Address

198.18.1.6 (Unknown)

HTTP Port

80

65535

Use Standard

!

HTTPS Port

443

65535

Use Standard

!

198.18.1.32 BRD-355-e2-33-cf@



IP Address

198.18.1.32 (vlan1)

HTTP Port

80

65535

Use Standard

✓

HTTPS Port

443

65535

Use Standard

✓

198.18.1.20 test2@test1



IP Address

198.18.1.20

HTTP Port

80

65535

Use Standard

✓

HTTPS Port

443

65535

Use Standard

✓

Test connection

Apply

The third and final tab in this panel, labeled Web, corresponds to device specific settings for overriding the default HTTP and HTTPS ports. This interface is fairly straightforward, and does not differ between device firmware families.

Similar to prior tabs, “Test connection” will also indicate whether the corresponding HTTP / HTTPS protocol is successfully reachable on the indicated port.

#### 4.4.41. Clone or Replace Device

WeOS 4

WeOS 5

Ibex

XRD

Merlin

Clone or Replace device is a staged task for, as the name indicates, either copying WeConfig's configuration information from one device to another one, or to replace a device in the topology with a new one.

##### Interface components

The screenshot shows the 'Clone or Replace Device' interface. At the top, there are two circular progress indicators labeled 'Devices' and 'Work'. Below them, the interface is split into two main panels: 'Source' and 'Target'. The 'Source' panel shows a device 'Wolverine DDW-142' with IP 'TheWolverine@198.18.2.5'. It has a 'Pick selected' button and a 'Configuration source' dropdown with options 'Use current running configuration' and 'Use last backup'. An info box states 'Source device is not responding, cannot use running configuration.' The 'Target' panel shows a device 'Wolverine DDW-142' with IP 'TheWolverine4e@198.18.2.6'. It has a 'Pick selected' button and a 'Copy variant' dropdown with options 'Clone source device into target' and 'Replace source device with target'. An info box states 'Device is not responding.' Below these panels is an 'Options' group with a 'New target address' field (198.18.2.10) and a 'Move Attachments' checkbox (checked). An 'Apply' button is at the bottom.

The initial interface you will be met with when opening this panel is seen above. Here you may pick two devices using selection in either the Topology or Device list.

Secondly, for the “Source” device, you may select to either actively pull the current running configuration of that device, or use the last known backup (If WeConfig has one) for the copy operation.

Thirdly, for the “Target” device, select whether you are intending to Clone the device or in other words create another device with almost the same configuration in the current network, or Replace the device, meaning that WeConfig will remove the original “Source” device from it's knowledge of the network once the operation has completed.


If you have selected the devices in the wrong order, and wish to swap the source and target of the operation, the button between the two selections allows you to do so trivially.

Finally, fill out relevant options in the “Options” group below the two selected devices. The exact content of this box may vary depending on the selected devices and operation type. But the following options may appear:

| Option                 | Description                                                                                                                                                                                                                                                        |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Select network adapter | When the target device requires knowledge of the PC's connected network adapter to successfully receive a new IP address, such as for older versions of WeOS 4, this option will appear and prompt the user to select the adapter that the device is connected to. |

| Option             | Description                                                                                                                                                                                                                               |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| New target address | When the “Copy variant” selection is set to “Clone source device into target”, then this option will be present, allowing you to select the new IP address for the target device, to be assigned after configuration has been copied over |
| Move attachments   | Always present, when checked, any <u>Device attachments</u> belonging to the source device will be moved to the target device at the end of the copy operation.                                                                           |

When you are content with your selection, press “Apply” to begin the copy operation. This will transition the interface into a view similar to the one seen below:

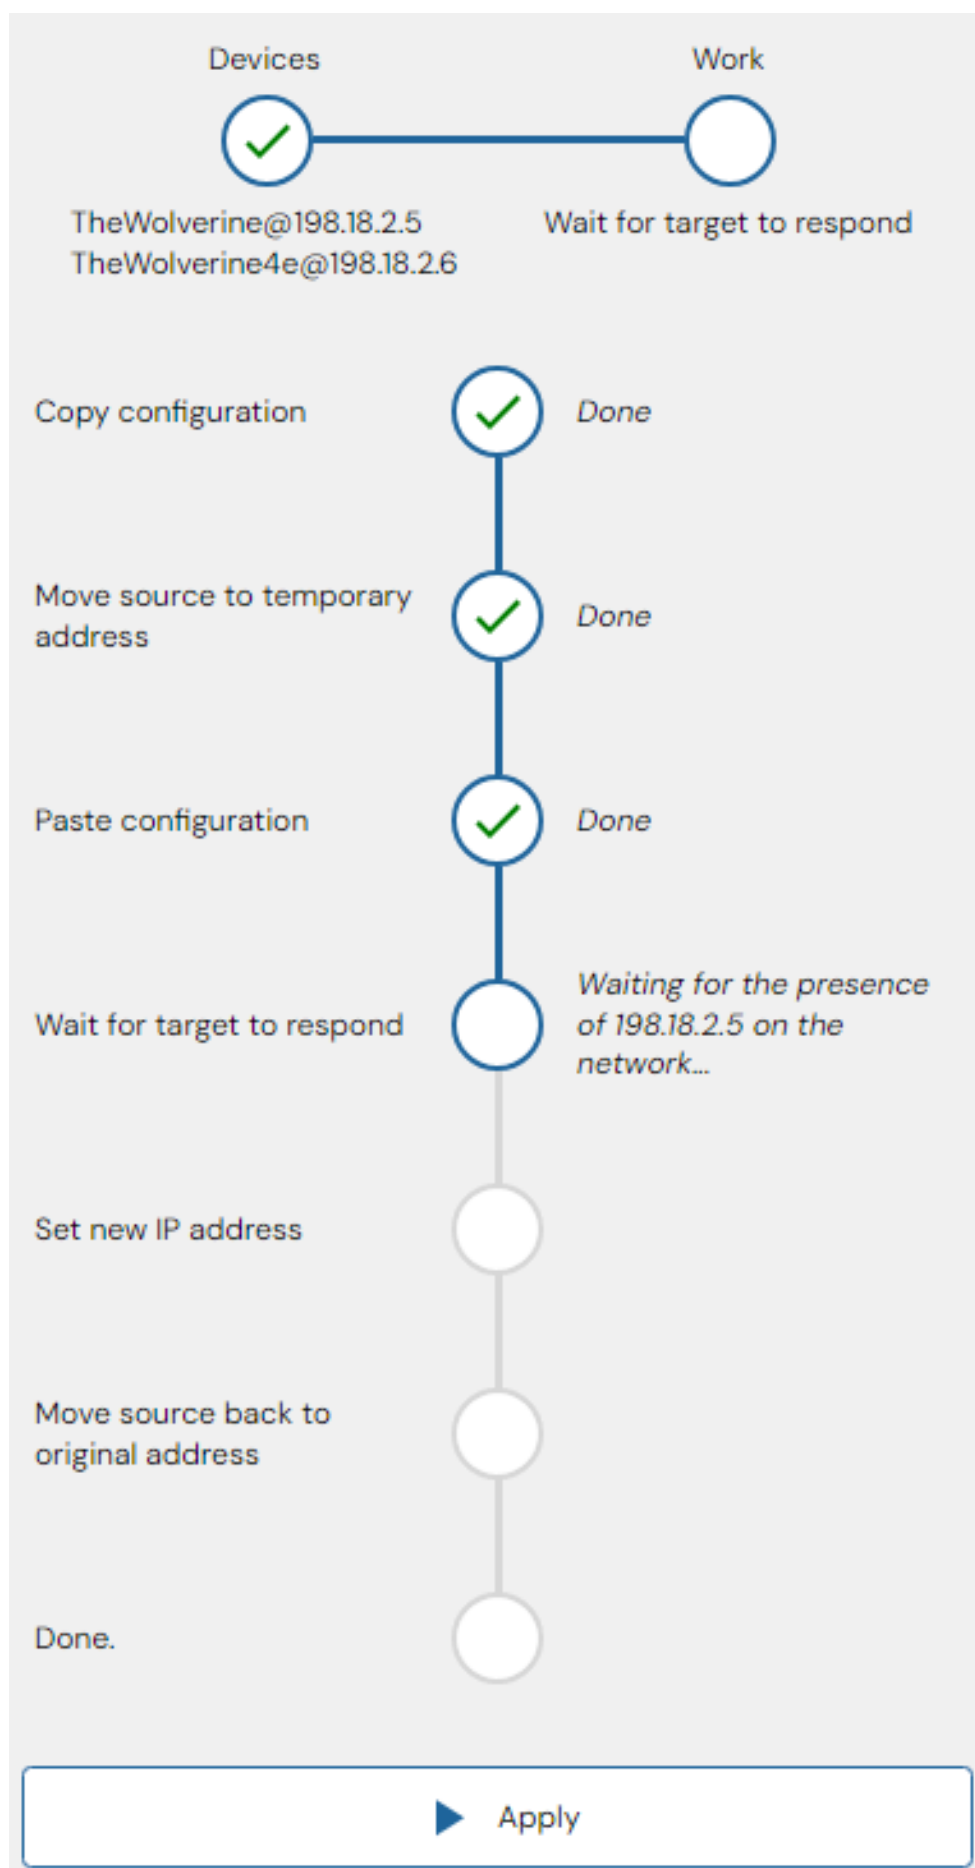

As can be seen, the copy operation is comprised of several stages, which may vary slightly depending on the exact configuration chosen in the previous view. Some of these stages may require user interaction, and will in such case prompt the user for such.

## 4.4.42. CLI Scripts

WeOS 4

WeOS 5

CLI Scripts is a task that allows for the execution of custom scripts on multiple devices simultaneously.

### Interface Components

### CLI Scripts

Script to Execute

show iface

Loaded Script: <unnamed script>

198.18.1.2 redfox@



```
> show iface
< Interface Name      Oper    Address/Length      MTU    MAC/PtP Address
< -----
< lo                  UP      127.0.0.1/8         167436 N/A
< vlan1              UP      198.18.1.2/24       1500   00:07:7c:23:a1:c2
< -----
```

198.18.1.3 viper@



```
> show iface
< Interface Name      Oper    Address/Length      MTU    MAC/PtP Address
< -----
< lo                  UP      127.0.0.1/8         167436 N/A
< vlan1              UP      198.18.1.3/24       1500   00:07:7c:25:06:21
< -----
```

☒ Run in network order ☐ Refresh after execution

Apply

### Script box

This box labeled “Script to execute” is editable and contains the current script to execute on the selected devices. The script is a sequence of newline-separated CLI commands that will be executed in order on all the selected devices.

### Open button

The top of the three buttons to the right of the script box, this button will open up a file browser allowing the user to load a file to the script box.

### Save buttons

The middle and bottom of the three buttons to the right of the script box, this button will save the current contents of the script box to the project or a user specified location, respectively.

#### Device list

Beneath the script box is a list of devices, where the contents of each list element is populated with the input and output of the last script executed, denoted by > and < respectively.

#### Save buttons

To the right of the device list is a button, this will save the input/output of the scripts per device to a user specified location.

#### Run in network order

This checkbox, when checked, will cause the script to run in network topology order, rather than in complete parallel.

#### Refresh after execution

This checkbox, when checked, will cause WeConfig to run a Refresh after all the devices have executed the provided script.

## Diagnostics

### 4.4.43. Diagnostics


WeOS 4

WeOS 5

Ibex

XRD

Merlin

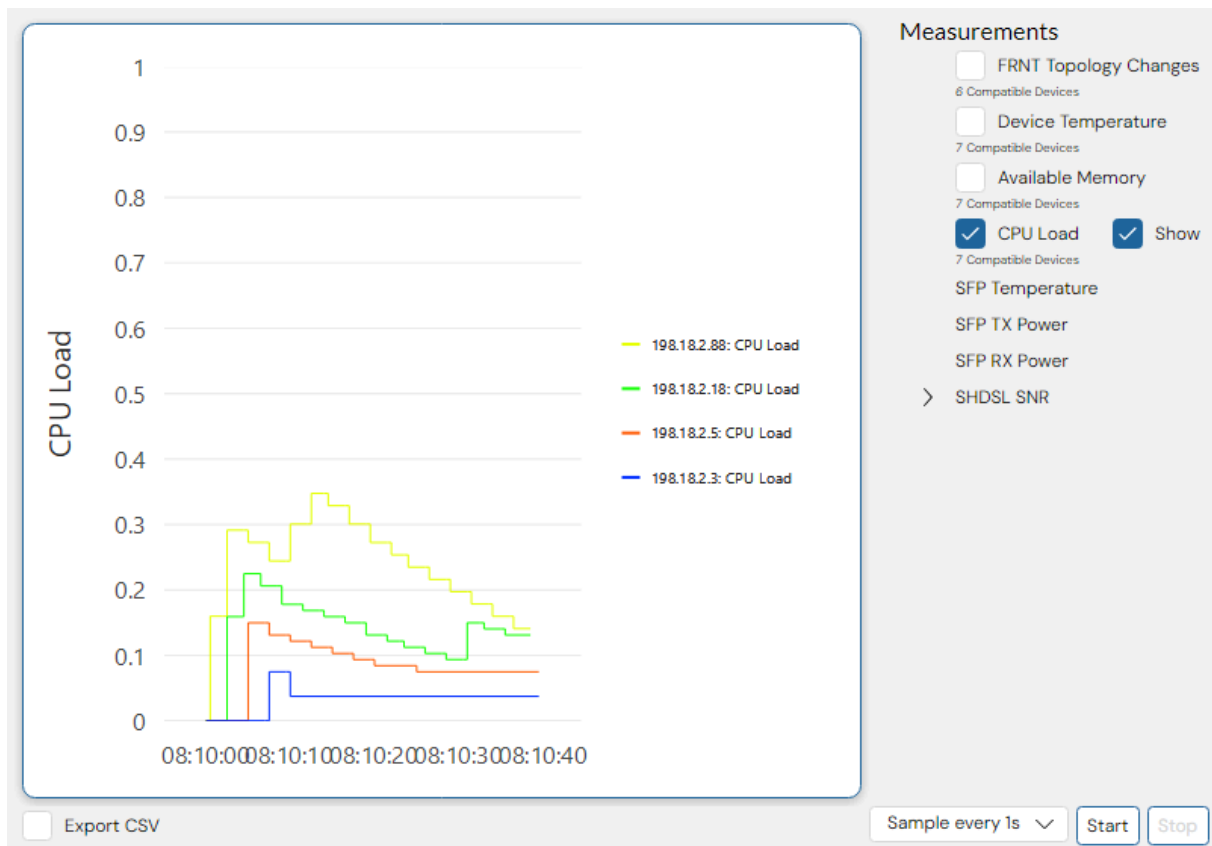

In this Panel, a number of datapoint about the network can be observed and charted, such as:

- Available memory
- CPU load
- Device temperature
- FRNT change count
- PoE Power
- RSSI
- SFP Rx/Tx Power
- SFP Port temperature
- SHDSL SNR margin

The exact data sources present will vary depending on the devices selected in the topology.

To monitor the data sources, select them in the list to the righthand side of the interface, select a sampling rate from the dropdown menu at the bottom of the interface, and press start.

If you need to log the observed data for later analysis, make sure to check the “Export CSV” toggle in the bottom right corner just below the graph, and select a path to the target file.

It is possible to show and hide individual graphs at the sampling. Click the “Show” button in the list of monitored devices on the right side.

Additionally, you may hover any individual graph line to show a panel with the exact value at that point on the graph for all measured devices.



#### Note

When a monitor session is restarted, the graph is cleared. Data saved to CSV will not be lost. A new monitor session will add data to the CSV file, not replace it.



#### Warning

When you are exporting a measurement to CSV, do not open the CSV file in Excel or any other application at sample, as such a action may lock the file, preventing data from being written to it by WeConfig.

#### 4.4.44. Syslog

WeOS 4

WeOS 5

Ibex


XRD

Merlin

other

When enabled in [application settings](#), this panel contains a view of received syslog data.

##### Interface components

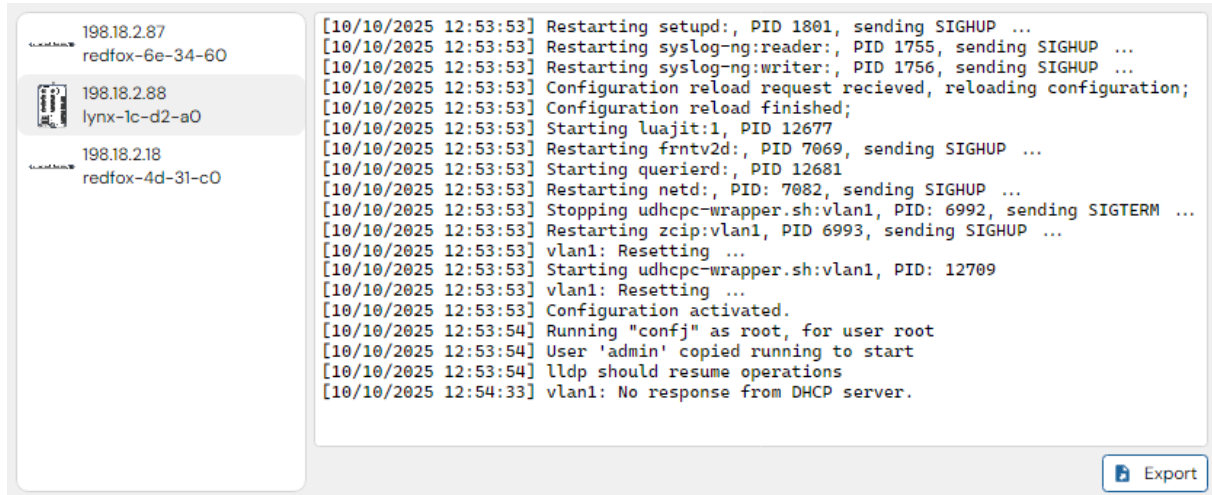

Any device that is configured to use WeConfig as Syslog server will display its Syslog messages in this tab, as can be seen in the example above. Click the corresponding device to switch view to that device's syslog messages.

The button to the lower right of the interface "Export" allows you to export the selected device's logged syslog messages to a file.

##### Info

In order to receive Syslog messages, the running machine's firewall must be configured to allow said syslog messages, which arrive on Port 514, see [usage](#) for more information.

#### 4.4.45. Traps

WeOS 4

WeOS 5

Ibex

XRD

Merlin

other

This panel contains a tabular view of received SNMP traps.

##### Info

In order to receive traps, the machine running WeConfig must have been configured as a trap host on the origin device.

#### Interface components

| Timestamp           | IP Address  | MAC Address    | Hostname        | Location | Label |
|---------------------|-------------|----------------|-----------------|----------|-------|
| 10/10/2025 13:45:26 | 198.18.2.88 | 0007:3C9C:D2A0 | lymv-1c-d2-a0   |          | LLDP  |
| 10/10/2025 13:45:40 | 198.18.2.88 | 0007:3C9C:D2A0 | lymv-1c-d2-a0   |          | LLDP  |
| 10/10/2025 13:46:31 | 198.18.2.87 | 0007:3C9C:3460 | redfox-6e-34-60 |          | LLDP  |
| 10/10/2025 13:46:33 | 198.18.2.88 | 0007:3C9C:D2A0 | lymv-1c-d2-a0   |          | LLDP  |
| 10/10/2025 13:46:34 | 198.18.2.18 | 0007:3C4D:31C0 | redfox-4d-31-c0 |          | LLDP  |
| 10/10/2025 13:46:36 | 198.18.2.88 | 0007:3C9C:D2A0 | lymv-1c-d2-a0   |          | LLDP  |
| 10/10/2025 13:46:36 | 198.18.2.18 | 0007:3C4D:31C0 | redfox-4d-31-c0 |          | LLDP  |
| 10/10/2025 13:46:37 | 198.18.2.18 | 0007:3C4D:31C0 | redfox-4d-31-c0 |          | LLDP  |
| 10/10/2025 13:46:39 | 198.18.2.87 | 0007:3C9C:3460 | redfox-6e-34-60 |          | LLDP  |
| 10/10/2025 13:46:39 | 198.18.2.88 | 0007:3C9C:D2A0 | lymv-1c-d2-a0   |          | LLDP  |
| 10/10/2025 13:46:39 | 198.18.2.18 | 0007:3C4D:31C0 | redfox-4d-31-c0 |          | LLDP  |
| 10/10/2025 13:46:40 | 198.18.2.88 | 0007:3C9C:D2A0 | lymv-1c-d2-a0   |          | LLDP  |
| 10/10/2025 13:46:40 | 198.18.2.87 | 0007:3C9C:3460 | redfox-6e-34-60 |          | LLDP  |

OID

Value

10.8802.11.2.12.214

10.8802.11.2.12.39

10.8802.11.2.12.40

10.8802.11.2.12.50

Auto scroll

Auto pan

Show Details

Export

Clear

As depicted in the example above, arriving SNMP traps will be listed in this panel, and can be sorted or filtered within. Severe traps may be color-coded based on its severity level, making it easier to identify critical events at a glance.

Additionally, the raw SNMP content of the trap can be viewed for a selected trap while the “Show Details” toggle is checked, as depicted above.

If the “Auto scroll” toggle is checked, the list will automatically scroll to the bottom of the interface whenever a new trap arrives.

If the “Auto pan” toggle is checked, selecting a trap in the list will attempt to make the topology zoom to the corresponding device.

Click the Export button to export the list to a CSV file.

Click the Clear button to clear the list.

##### Info

On Windows, WeConfig uses Windows trap host when enabled.

For full functionality, the Windows trap host must be disabled, as that will permit WeConfigs internal trap host to function.

##### Info

On Linux, WeConfig will not be able to receive traps unless ran in elevated permissions (e.g., using `sudo -E`).

## Support

### 4.4.46. General Log

| General log | Log                                                                                                                                                    |          |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|----------|
|             | INF EVENT: Discovery.IPConfig                                                                                                                          | 10:20:26 |
|             | INF Event properties:                                                                                                                                  | 10:20:26 |
|             | Interface.0.Address: 169.254.250.100/24                                                                                                                |          |
|             | Interface.1.Address: 198.18.2.100/24                                                                                                                   |          |
|             | INF EVENT: Discovery.Mdns                                                                                                                              | 10:20:26 |
|             | INF Event properties:                                                                                                                                  | 10:20:26 |
|             | Interface.0.Address: 169.254.250.100/24                                                                                                                |          |
|             | Interface.1.Address: 198.18.2.100/24                                                                                                                   |          |
|             | DBG Starting command: GenericCommand<IDeviceNode[]>{() =>                                                                                              | 10:20:26 |
|             | WeConfig.Gui.Discovery.InterfaceBasedDiscovery.ViewModel.Execute()                                                                                     |          |
|             | DBG Failed to get certificate information from 198.18.2.3: The operation was canceled                                                                  | 10:20:27 |
|             | at System.Threading.CancellationToken.ThrowOperationCanceledException()                                                                                |          |
|             | at System.Net.Sockets.Socket.AwaitableSocketAsyncEventArgs.ThrowException(SocketError error, CancellationToken cancellationToken)                      |          |
|             | at System.Net.Sockets.Socket.AwaitableSocketAsyncEventArgs.System.Threading.Tasks.Sources.IValueTaskSource<System.Int32>.GetResult(System.Int16 token) |          |
|             | at System.Net.Security.SslStream.EnsureFullTlsFrameAsync[TIOAdapter]                                                                                   |          |

This panel provides a running view of the WeConfig log file. Its primary purpose is for developers and power-users, but it is generally available when configured in application settings for those that desire to see it. Depicted above is an example of how the log may appear when set to capture everything up to debug messages, which are marked with [DBG] and somewhat greyed out in the example above.

#### Info

This view also provides a reasonable view into what telemetry is being collected by WeConfig, when it is allowed to do so.

## 4.4.47. Issues

| Severity                                                                          | Title                      | Description                                                                                                                                                     | Source                       | Category   | Times  |
|-----------------------------------------------------------------------------------|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------|------------|--------|
|  | Device Access setup needed | WeConfig has detected that Device Access has not been configured.<br>To ensure that WeConfig can communicate with the device(s), Device Access must be updated. | Device: 198.18.131 (MRD-425) | Accessibil | 10/10/ |
|  | Device Access setup needed | WeConfig has detected that Device Access has not been configured.<br>To ensure that WeConfig can communicate with the device(s), Device Access must be updated. | Device: 198.18.132 (BRD-355) | Accessibil | 10/10/ |

This panel contains a summary of any diagnostic issues WeConfig has encountered, either with devices in the network or with the application environment itself. Each issue has the following attributes:

| Attribute   | Description                                                                        |
|-------------|------------------------------------------------------------------------------------|
| Severity    | How severe the issue is considered, may be either Informational, Warning or Error, |
| Title       | A title of the diagnostic                                                          |
| Description | A more detailed explanation of what the issue entails                              |
| Source      | Wherefrom the issue arose, if it is associated with a specific device or not       |
| Category    | The kind of issue being presented                                                  |
| Timestamp   | The date at which the issue was generated.                                         |

Each of these issues has a context menu that, if there is an offered way to remediate the issue, contains a “Remediate” option that will cause WeConfig to do what it can to resolve the underlying problem causing the issue.

Any issue that is not a concern to the user can also be hidden with the “Hide” context menu option.

### Info

Informational indicates issues that may improve the network from non-functional aspects, such as security

### Warning

Warning indicates an issue that reduces functionality, such as depicted above, where certain devices report that they do not have correct authentication.

### Danger

Error indicates an issue that prevents proper functionality, such as a blocking firewall.

#### 4.4.48. Reports

WeOS 4

WeOS 5

Ibex

XRD

Merlin

This licensed panel allows for the generation of PDF reports about the state of the current project. The image below depicts the typical user interface for this panel.

The screenshot displays the 'Reports' panel in a software interface. On the left, a sidebar contains a list of report categories and sub-items, each with a checkbox. The 'Front page' category is expanded, showing 'Topology' and 'Creator' (with input fields for 'Creator' and 'Project revision'). The 'Devices' category is also expanded, showing 'Information' (checked), 'CPU Load', 'Communication Summary' (with a slider set to 5), 'Config Baseline' (checked), 'Configuration Hash', 'Device Temperature' (with 'Critical' and 'Warning' temperature inputs set to 70 °C and 50 °C respectively), 'FRNT', 'Issues' (checked), 'Multicast Database Entries', 'Power supply input', 'Routing Table', 'SNMP', 'Security Baseline' (checked), 'USB Connected', 'VLAN', and 'Ports'. Under 'Ports', there are checkboxes for 'Egress Limit/Ingress Limit', 'Enabled', 'Rx Str. / SNR', and 'SFP Info'. At the bottom of the sidebar, there are checkboxes for 'Connections', 'Notes' (with an 'Edit' button), and 'DDM Values' (with 'Critical' and 'Warning' dBm inputs set to -15 dBm and -10 dBm respectively). On the right, a form for the 'Security Baseline' report is visible, with fields for 'Name' (set to 'Security Baseline'), 'Margin' (40), 'Spacing' (8), and 'Font size' (12). Below these fields is a list of report types: 'Security Baseline', 'Network Baseline Report', and 'Deployment', each with a trash icon. At the bottom right, there are 'Save', 'Import', and 'Export' buttons. A 'Log' section is visible at the bottom left, and a 'Run' button is at the bottom center.

Front page

- ☒ Topology
- ☒ Creator

Devices

- ☒ Information
- ☐ CPU Load
- ☐ Communication Summary
- ☒ Config Baseline
- ☐ Configuration Hash
- ☐ Device Temperature  °C  °C
- ☐ FRNT
- ☒ Issues
- ☐ Multicast Database Entries
- ☐ Power supply input
- ☐ Routing Table
- ☐ SNMP
- ☒ Security Baseline
- ☐ USB Connected
- ☐ VLAN

Ports

- ☐ Egress Limit/Ingress Limit
- ☐ Enabled
- ☐ Rx Str. / SNR
- ☐ SFP Info

Connections

Notes

DDM Values  dBm  dBm

Name

Margin  Spacing

Font size

Security Baseline

Network Baseline Report

Deployment

Save Import Export

Log

Run

## Interface components

### Content Tree

On the left side of the interface, you will find a tree listing the contents that will be included in the report. This tree allows you to select and deselect specific items to be included in the report. Some of these components, such as `Creator` and `Notes`, allow you to provide specific information to be included in the report.

### Options

In the top right of the interface, you will find a number of options that affect the behavior and appearance of the generated report. These options include:

| Option  | Description                                         |
|---------|-----------------------------------------------------|
| Name    | The name of the report.                             |
| Margin  | The page margins.                                   |
| Spacing | The default spacing between elements in the report. |

### Report Templates

Beneath the options section, you will find a list of available report templates. These templates are predefined sets of tree structures that you may select by clicking on them, which will update the content tree to reflect the selected template. You may also create your own report templates for later use, which can be done by adjusting the content tree and clicking the `Save` button, this will create a template with the name specified in the `Name` option above.

### Log

During report generation, a log will be populated by the current progress. Once report generation has finished, the resulting PDF will be opened in your default PDF viewer, and the file will additionally be stored in the current project file.

#### Warning

In order to successfully generate any report, WeConfig must have a network connection to the devices involved.

#### 4.4.49. Security

##### 4.4.49.1. Management Hardening

WeOS 4

WeOS 5

Management hardening is a task that allows for detection of some security issues related to device management.

## Management

Auto Fill ▼

Hardening will be applied on all VLANs

 
10.0.1.1 Management Router@Main Office

☒ Set a non-default password  
.....   
Strength: Strong

Disable checked protocol

☒ HTTP  
☒ IPConfig  
☒ Telnet  
☒ SNMPv2 Write Community


10.0.2.1 Plant A Router@Plant A

☒ Set a non-default password  
.....   
Strength: Weak

Disable checked protocol

☒ HTTP  
☒ IPConfig  
☒ Telnet  
☒ SNMPv2 Write Community

10.0.2.3 Machine 10@Plant A Bench 10

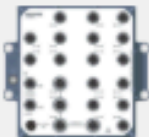☒ Set a non-default password  
...   
Strength: Very weak

Disable checked protocol

☒ HTTP  
☒ Telnet  
☒ SNMPv2 Write Community

 Apply

Use this panel to scan all or the selected devices in the project for known management hardening issues. These include the use of:

- HTTP for the web service
- SNMPv2 write community

- The default admin password
- IPConfig
- Telnet

When Scan is clicked, each device in the project will be interrogated for any of these issues. When the scan is finished, WeConfig will list all devices and their found issues.

WeConfig will by default suggest removing all issues. If the default admin password has been used on any device, it will not be possible to apply the fixes until the password has been changed.

If any of the known issues are ignored, it is necessary to be explicit and uncheck the issue. This can be done easily from the Autofill section.

#### 4.4.49.2. Port Protection

WeOS 4

WeOS 5

Port protection is a task for reviewing MAC filter / 802.1X port protection status and enabling/disabling ports as well as configuring link-up alarm triggers.

Interface components

### Port Protection

Filter and Fill

10.0.1.1 Management Router@Main Office

| Ports            | Protected | MAC | 802.1X | Enabled | Unused | Link Up Alarm            |
|------------------|-----------|-----|--------|---------|--------|--------------------------|
| 1/1 <Trunk port> |           | No  | No     |         | Yes    | <input type="checkbox"/> |
| 1/2 <Trunk port> |           | No  | No     |         | No     | <input type="checkbox"/> |
| 1/3 <Trunk port> |           | No  | No     |         | No     | <input type="checkbox"/> |
| 2/1              |           | No  | No     |         | No     | <input type="checkbox"/> |
| 2/2              |           | No  | No     |         | Yes    | <input type="checkbox"/> |
| 2/3              |           | No  | No     |         | Yes    | <input type="checkbox"/> |
| 2/4              |           | No  | No     |         | Yes    | <input type="checkbox"/> |
| 2/5              |           | No  | No     |         | Yes    | <input type="checkbox"/> |
| 2/6              |           | No  | No     |         | Yes    | <input type="checkbox"/> |
| 2/7              |           | No  | No     |         | Yes    | <input type="checkbox"/> |
| 2/8              |           | No  | No     |         | Yes    | <input type="checkbox"/> |
| 3/1              |           | No  | No     |         | Yes    | <input type="checkbox"/> |
| 3/2              |           | No  | No     |         | Yes    | <input type="checkbox"/> |
| 3/3              |           | No  | No     |         | Yes    | <input type="checkbox"/> |
| 3/4              |           | No  | No     |         | Yes    | <input type="checkbox"/> |
| 3/5              |           | No  | No     |         | Yes    | <input type="checkbox"/> |
| 3/6              |           | No  | No     |         | Yes    | <input type="checkbox"/> |
| 3/7              |           | No  | No     |         | Yes    | <input type="checkbox"/> |
| 3/8              |           | No  | No     |         | Yes    | <input type="checkbox"/> |

Apply

As can be seen in the interface depicted above, this panel will present a list of selected devices, where each device contains a matrix of ports with 7 columns, as follows:

| Column    | Description                                                         |
|-----------|---------------------------------------------------------------------|
| Ports     | The Port name, as well as an indicator if it is a trunk port or not |
| Protected | Whether or not this port is considered protected                    |

| Column        | Description                                                         |
|---------------|---------------------------------------------------------------------|
| MAC           | Whether this port has any MAC filter configured                     |
| 802.1X        | Whether any 802.1X port protection has been configured on this port |
| Enabled       | Whether or not this port is enabled                                 |
| Unused        | Whether or not this port is currently in use                        |
| Link Up Alarm | If a Link Up alarm is configured on this port                       |

#### 4.4.49.3. Routing Hardening

WeOS 4

WeOS 5

Routing hardening is a task that allows for detection of some security issues related to routing.

Interface components

## Routing

Auto Fill

10.0.1.1 Management Router@Main Office



VLAN1

|      | Key Id | Key                 |
|------|--------|---------------------|
| OSPF | 1      | (No authentication) |

10.0.2.1 Plant A Router@Plant A



Info

No hardening issues found.

10.0.2.3 Machine 10@Plant A Bench 10



Info

Unsupported

▶ Apply

With this panel it is possible to scan all or the selected devices in the project that are configured to be routers. It detects OSPF or RIP router settings that do not use MD5- HMAC to sign routing traffic.

When Scan is clicked, each device in the project will be interrogated to see whether there are router configurations that do not use MD5-HMAC signatures.

A presentation of each device with an issue, all VLANs and all routing protocols that do not use MD5- HMAC.

Then it is possible to enter the key ID and key for each device/VLAN/protocol combination. The Autofill section can be used to great effect for this, if there are many devices.

## Tools

### 4.4.50. Traceroute

WeOS 4

WeOS 5

Merlin

Traceroute  from

| Distance | Address  | Time   | Status  |
|----------|----------|--------|---------|
| 1        | 10.0.1.1 | 4.9 ms | Hop     |
| 2        | 10.0.2.1 | 9.8 ms | Success |

This panel allows the user to either trace the route between devices. In order to run a traceroute, fill in the target IP address or url in the leftmost box and select the source from the dropdown box to it's right, which may either by the system running WeConfig, or any WeOS device in the network. To trace the route between two devices, the originating device must be a WeOS device.

#### 4.4.51. Subnet Calculator

☒ Number of Hosts/Net  
☐ IP Address Range  
☐ Netmask

Base IP Address

Number of Hosts/Net

**Calculated Result**

Netmask

Broadcast Address

Subnet Address

Min IP Address

Max IP Address

Number of Hosts/Net

This panel is a tool to help the user calculate a subnet based on one of the following:


- IP address and Number of wanted hosts/net
- IP range
- IP address and a given netmask.

In order to utilize this panel, select the calculation variant you desire to use from the radiobutton list at the top of the panel, fill in the necessary data in the boxes below, and then press the “Calculate” button.

You will then be presented with the following data:

- Netmask / Bit count (255.255.255.224 and 27 respectively in the example above)
- Broadcast Address (1.2.3.31 in the example above)
- Subnet address (1.2.3.0/27 in the example above)
- Minimum IP address (1.2.3.1 in the example above)
- Maximum IP address (1.2.3.30 in the example above)
- Number of hosts/nets (30 in the example above)

#### 4.4.52. SHDSL Reach Calculator

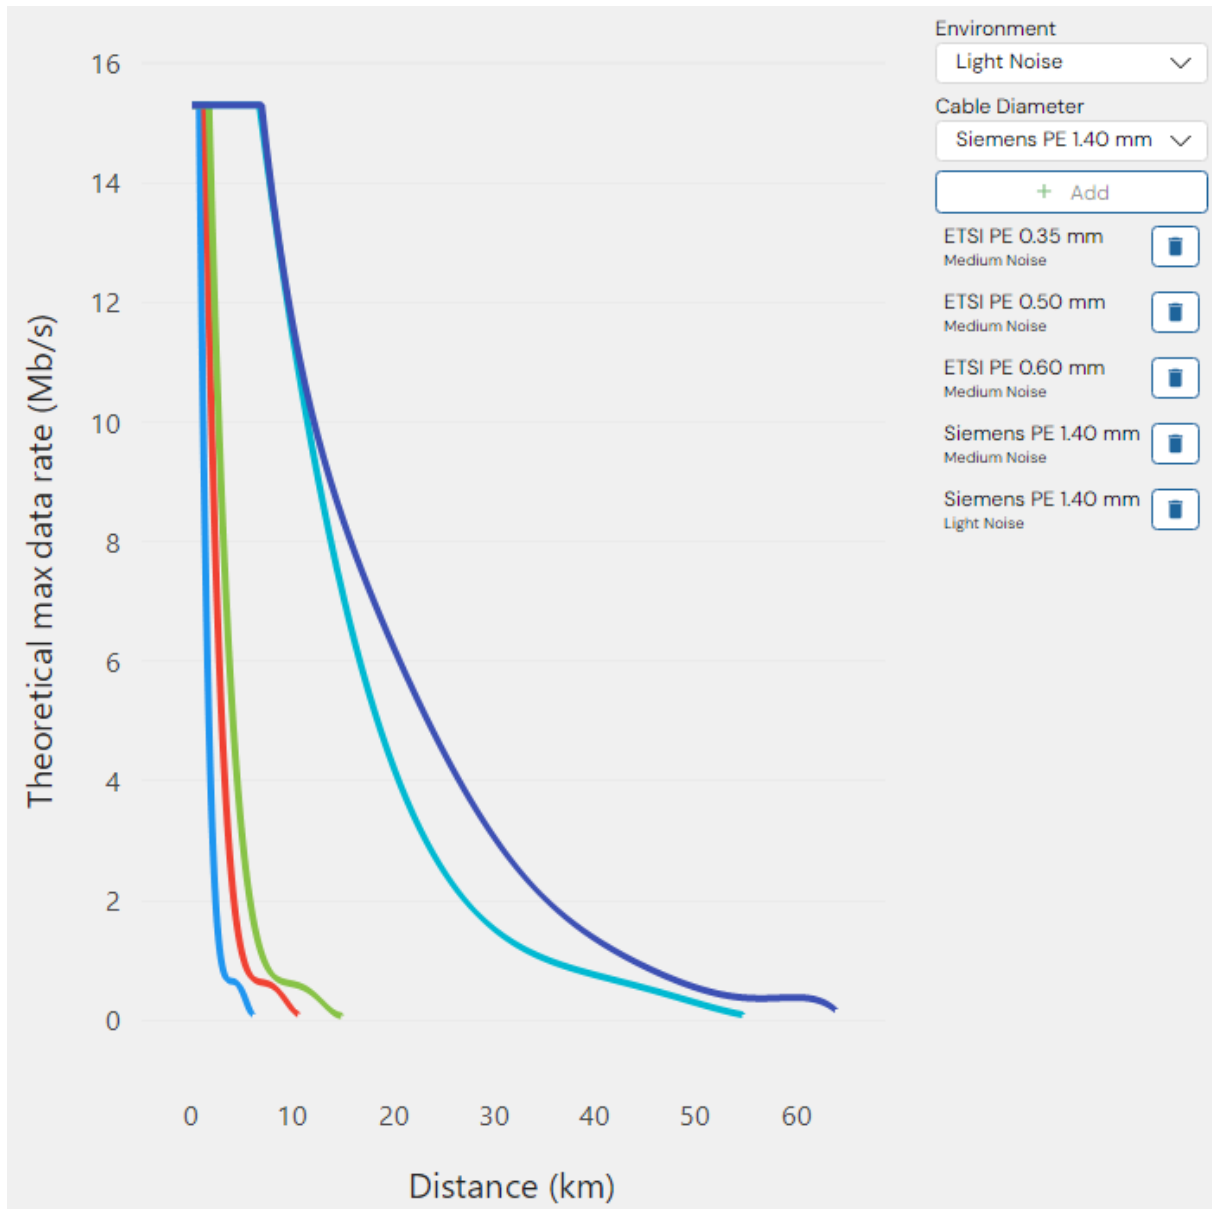


This panel allows you to explore indicative signal attenuation and data rates for the two parameters, environment and cable.

Select a combination of environment and cable parameters in the dropdown menu to the right and click Add. The combination will then be charted in the main graph of the panel.

The Y axis represents a theoretical maximum data rate in Mb/s, and the X axis represents distance in kilometres. To remove a graph line, click the associated Delete (Trashcan) button below the dropdown menus and add button.

#### 4.4.53. SHA256 Hash Calculator

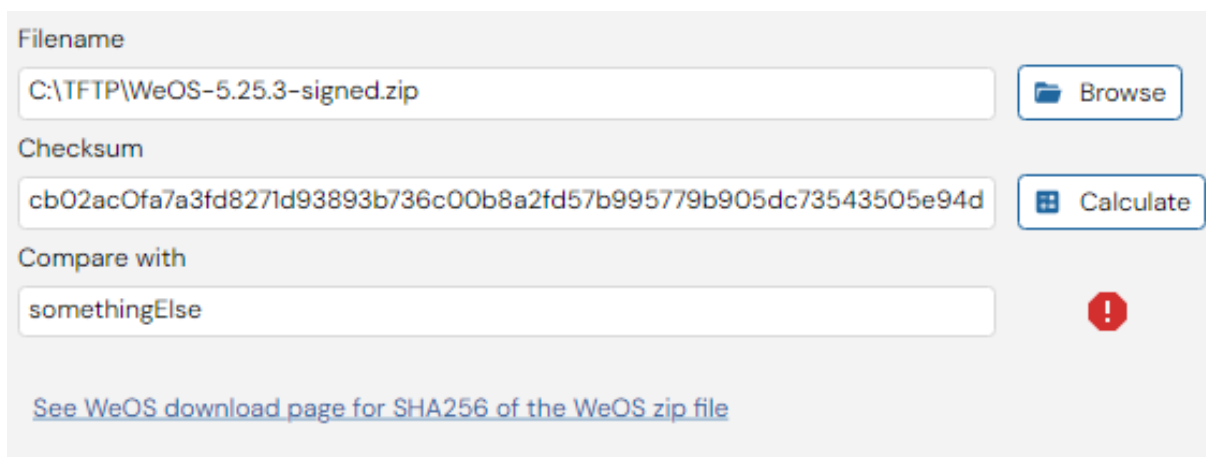

The screenshot shows a web-based SHA256 Hash Calculator interface. It features three main input sections: 'Filename' with a text box containing 'C:\TFTP\WeOS-5.25.3-signed.zip' and a 'Browse' button; 'Checksum' with a text box displaying the calculated hash 'cb02acOfa7a3fd8271d93893b736c00b8a2fd57b995779b905dc73543505e94d' and a 'Calculate' button; and 'Compare with' with a text box containing 'somethingElse'. To the right of the 'Compare with' box is a red circle with a white exclamation mark, indicating a failed comparison. At the bottom, there is a blue hyperlink that reads 'See WeOS download page for SHA256 of the WeOS zip file'.

This panel is a tool to calculate SHA256 hash for a selected file, usually WeOS firmware. In order to calculate the SHA256 hash of a given file, use the browse button to select the desired file, or enter the path manually, and then press “Calculate”. The SHA256 hash will then be displayed in the box labeled “Checksum”. As seen in the above example, calculating the checksum of the file at `C:\TFTP\WeOS-5.25.3-signed.zip` yields a hash starting with `cd02ac...`

Additionally, a known SHA256 hash may be entered into the “Compare with” textbox to quickly check equality between it and the calculated SHA256 hash. As seen in the example above, a failed equality check between the calculated hash and the string `somethingElse` is indicated by a red circle containing an exclamation point.

The panel also contains a convenient link to a list of SHA256 hashes for various WeOS versions.

#### 4.4.54. Ping

WeOS 4

WeOS 5

Merlin

Ping

10.0.2.1

from

My PC

20

times

Go

| Ordinal | Time   | Status  |
|---------|--------|---------|
| 20      | 1.0 ms | Success |
| 19      | 1.0 ms | Success |
| 18      | 1.0 ms | Success |
| 17      | 1.0 ms | Success |
| 16      | 1.0 ms | Success |
| 15      | 1.0 ms | Success |
| 14      | 1.0 ms | Success |
| 13      | 1.0 ms | Success |
| 12      | 1.0 ms | Success |
| 11      | 1.0 ms | Success |
| 10      | 1.0 ms | Success |
| 9       | 1.0 ms | Success |
| 8       | 1.0 ms | Success |
| 7       | 1.0 ms | Success |
| 6       | 1.0 ms | Success |
| 5       | 1.0 ms | Success |
| 4       | 1.0 ms | Success |
| 3       | 1.0 ms | Success |
| 2       | 1.0 ms | Success |
| 1       | 1.0 ms | Success |

Count

20

Min. (ms)

1.0

Avg. (ms)

1.0

Max. (ms)

1.0

The Ping panel allows the user to ping a device from another device. In order to execute a ping, fill in the target address or url in the topmost leftmost box, and then selected the source from the dropdown list to its right, the source may be either the system running WeConfig or any known WeOS device in the network that is not of the Falcon model family. Finally, enter the number of times to ping the target and press “Go”.

The results will then be displayed in a table, as depicted in the example above, contain the ordinal, roundtrip time and status for each ping in the sequence.

The data is also summarized at the bottom of the panel by count, minimum, average and maximum roundtrip time.

#### 4.4.55. Maximum MTU Discovery

A screenshot of a web interface for Maximum MTU Discovery. It features a light gray background. At the top, the text "Discover MTU for" is followed by a text input field containing "10.0.2.1". To the right of the input field is a button with a magnifying glass icon and the text "Go". Below this, the text "Maximum MTU: 1500" is displayed.

Discover MTU for

Maximum MTU: 1500

This panel allows the user to find the maximum MTU size between the WeConfig PC and a target device. In order to discovery the maximum MTU size, enter the target device address or url into the indicated box and press “Go”.

The maximum MTU size will then be displayed below, as seen in the example above.

## 4.4.56. Project Template

### 4.4.56.1. Import Devices from CSV File

WeOS 4

WeOS 5

Ibex

XRD

Merlin

other

Import Devices from CSV File allows for importing a project from a Comma Separated Value (CSV) file.

To import devices into the project from a CSV file browse for the CSV file and specify encoding, delimiter, and whether the file has headers or not.

The defaults are often good enough. Use the combo boxes to specify which column in the CSV file should map to which device attribute. Click Import to start.



#### Tip

If the CSV file has headers, WeConfig will attempt to map columns based on the header names. If no headers are present, the columns must be mapped manually.

| IP Address | Family | Model  | Hostname | Location   | MAC Address       | Serial Number | Firmware Version |               |
|------------|--------|--------|----------|------------|-------------------|---------------|------------------|---------------|
| 1.2.3.4    | Router | ModelX | myRouter | myLocation | AA:BB:CC:DD:EE:FF | 1234567890    | 1.0              | SomethingElse |

The CSV file must have the following columns:

- IP Address (In the format of IPv4, e.g 1.2.3.4)
- Family
- Model

Other following columns are optional:

- Hostname
- Location
- Mac Address (in the format of XX:XX:XX:XX:XX:XX or XX-XX-XX-XX-XX-XX or XXXXXXXXXXXX)
- Serial Number
- Version

Additional columns are ignored.

WeConfig will attempt to map columns based on header names if the CSV file has headers. If no headers are present, the columns must be mapped manually.

Below are found a few examples of valid CSV files.

IP Address,Family,Model,Hostname,Location,Mac Address,Serial  
Number,Version,SomethingElse

1.2.3.4,Router,ModelX,myRouter,myLocation,AA:BB:CC:DD:EE:FF,1234567890,1.0,SomeOtherTime

1.2.3.4,Router,ModelX,myRouter,myLocation,AA:BB:CC:DD:EE:FF,1234567890,1.0

```

1.2.3.4,Router,ModelX,,
1.2.54.25,Routeral,ModelY,,Name
12.2.3.4,Routerei,ModelZ,Home,
13.2.3.4;Router;ModelX;;
14.2.3.4;Routeral;ModelY;;Name
1.25.3.4;Routerei;ModelZ;Home;
111.2.3.4;Router;ModelX;;
1.222.3.4;Routeral;ModelY;;Name
1.2.32.4;Routerei;ModelZ;Home;

1.22.3.4 Router ModelX      <empty>
1.2.33.4 Routeral ModelY    <empty> Name
1.2.3.45 Routerei ModelZ    Home

```

#### 4.4.56.2. Export from Current Project

WeOS 4

WeOS 5

Export from Current Project allows for exporting the current project to a Gold File.

##### Path Selection

The screenshot shows a three-step progress bar at the top with labels 'Path Selection', 'Work', and 'Result'. The 'Path Selection' step is active, indicated by a blue circle. Below the progress bar, the 'Export to File' section contains a text input field with the value 'docs/my\_proj.tprj' and a folder icon button to its right. A checkbox labeled 'Password protect file' is checked. Below this, there are two password input fields: 'Password' and 'Verify Password', both containing masked characters (dots) and an eye icon to toggle visibility. At the bottom, there is an unchecked checkbox labeled 'Use Existing Backups' and a large 'Next' button with a right-pointing arrow.

In the Path Selection step, you select the path where the project will be saved.

You also have the option to set a password to encrypt the project file.

Press “Next” to start the export process.



##### Note

To make a template of the current project, the following criteria must be met:


- WeConfig’s connection in the topology is known
- All devices must support the gold file functionality



##### Info

Currently, only WeOS devices are supported.

## Result

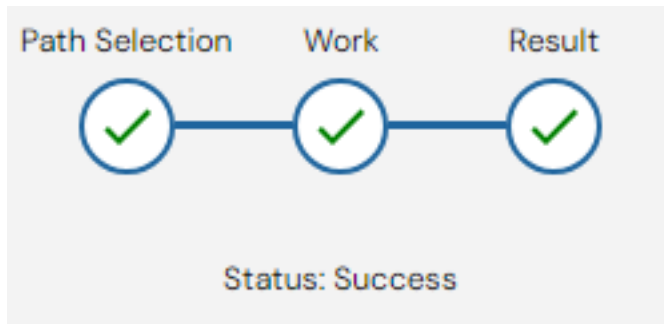

In the Result step, you can see the progress of the export process.

If the export is successful, you will see a message indicating that the project has been exported successfully.

If the export fails, you will see an error message indicating the reason for the failure.



### Note

The export process may take some time, depending on the size of the project and the number of devices in the topology.

### 4.4.56.3. Build Network from Template

WeOS 4

WeOS 5

Build Network from Template allows for importing network configuration from a Gold File.

#### Info

A known limitation of the import process is that it requires there to be some unused IP Addresses.

These temporary IP Addresses are used to avoid IP Address conflicts during the import process.

The number of temporary IP Addresses required can vary depending on how many conflicts there are in the network. From zero to one for each device.

#### Interface Components

Path Selection

Initial Operator Instruction


Work

Final Operator Instruction

Result

Template Project

docs/template.tprj

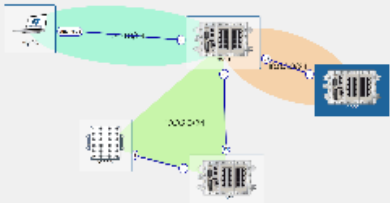

Network Interface Connected to Device

10.0.1254/24 Ethernet 5 Realtek USB GbE Family Controller #4

☒ Verify Version


Next

The build-network-process is wizard-based. It will guide and inform what to do to complete the operation.

## Path Selection

Path Selection    Initial Operator Instruction    Work    Final Operator Instruction    Result

Template Project  
docs/template.tprj 

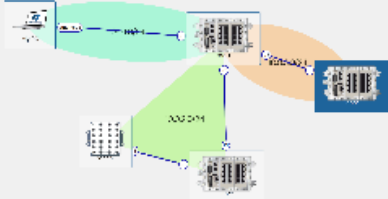

Network Interface Connected to Device  
10.0.1.254/24    Ethernet 5  
Realtek USB GbE Family Controller #4 

☒ Verify Version

 Next

Browse and select the gold file template which will then be applied on the network.

Select the Network Interface that is connected to the device.

If the project template file is password protected, you will be asked to provide the password.

## Initial Operator Instructions


Path Selection

Initial Operator Instruction

Work

Final Operator Instruction

Result

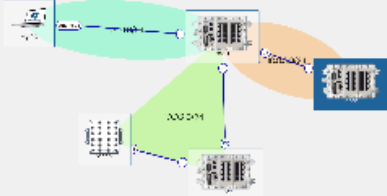

Connect PC to Management Router@Main Office, port 1/1 before continuing.

SNMP Read Community


☒ Use default

This step will provide instructions you must follow before the import can start. Such as connecting the PC to the correct device on the correct port, and providing an SNMP Read Community.

### Note

If there aren't any instructions, the step will be skipped.

## Work

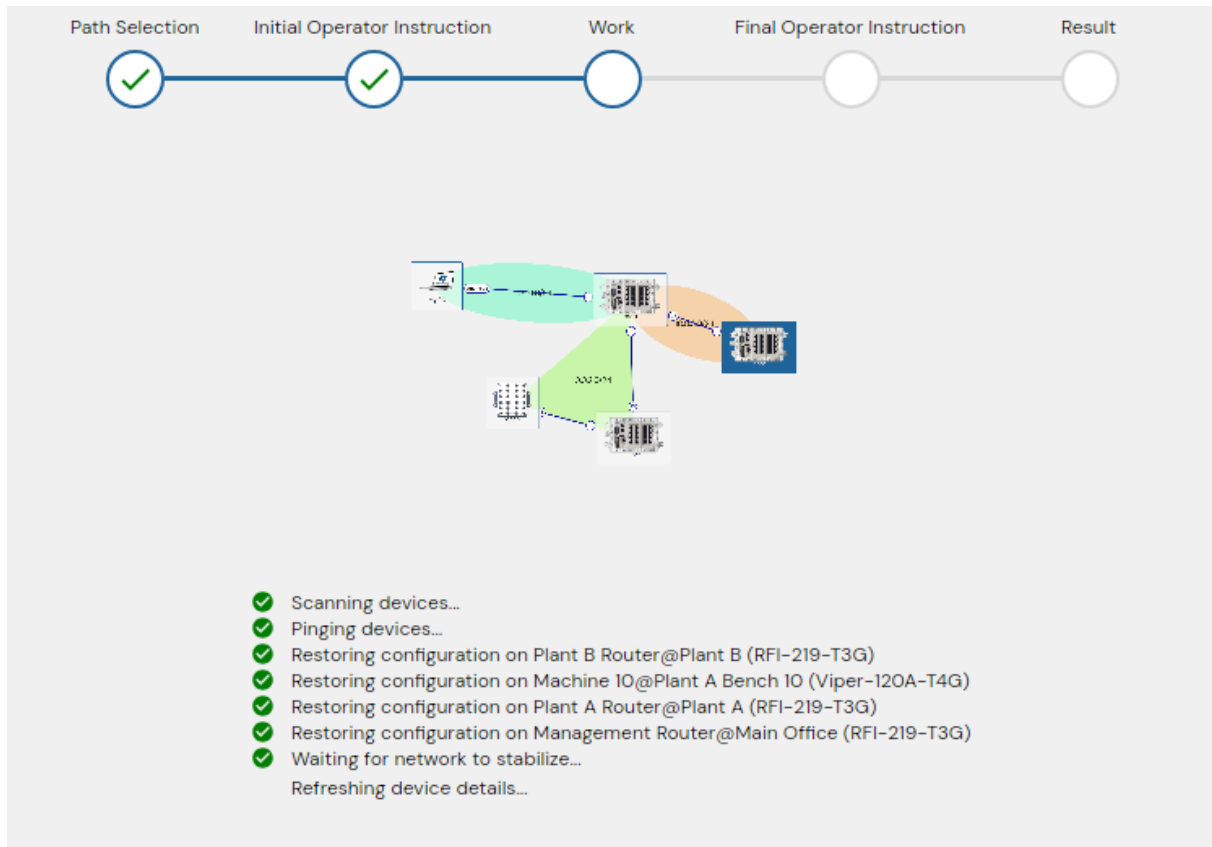

The work step will show the progress of the import process.


### Final Operator Instructions

This step will provide instructions you must follow after the import is complete. Such as adding cables between devices.

#### Note

If there aren't any instructions, the step will be skipped.

## Result

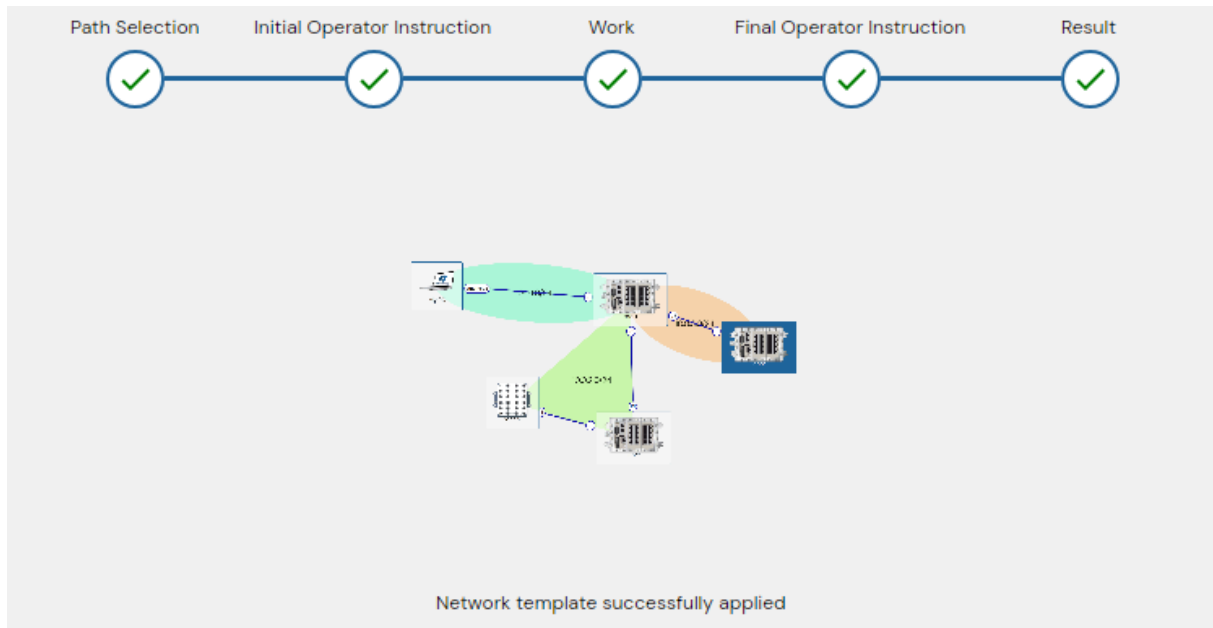

This step will show the result of the import process.

If the import is successful, you will see a message indicating that the project has been imported successfully.

If the import fails, you will see an error message indicating the reason for the failure.

#### 4.4.57. Refresh

The third button at the top of the navigation menu runs what is called a Refresh operation on the entire network. A refresh operation entails that all affected devices are rescanned to update WeConfigs knowledge of their current state.

A refresh operation can also be triggered on individual devices via the Context Menu and through various other means through the software.

## 4.5. File Menu

The file menu contains a variety of commands, settings and options for WeConfig. It is divided into three submenus, File, Edit and Help:

### File

The File menu contains commands related to project management, application settings, and exiting the application. It has the following commands:

| Command         | Hotkey       | Explanation                                                                    |
|-----------------|--------------|--------------------------------------------------------------------------------|
| New             | Ctrl-N       | Creates a new, empty <u>project</u>                                            |
| Open            | Ctrl-O       | Opens an existing <u>project</u> from the file system                          |
| Recent Projects |              | Shows a list of recently opened <u>projects</u> , clicking a project opens it  |
| Save            | Ctrl-S       | Saves the currently open <u>project</u> , requesting a save location if needed |
| Save As         | Ctrl-Shift-S | Saves the currently open <u>project</u> , always requests a save location      |
| About           |              | Navigates to the <u>about</u> menu.                                            |
| Exit            | Alt-F4       | Exits WeConfig                                                                 |

### Edit

The Edit menu contains commands related to editing the current project or its contents. It has the following commands:

| Command                      | Hotkey | Explanation                                         |
|------------------------------|--------|-----------------------------------------------------|
| Create portable installation |        | Generate a <u>portable installation</u> of WeConfig |
| Settings                     |        | Navigates to the <u>application settings</u> menu.  |

### Help

The Help menu contains commands related to obtaining help and information about WeConfig. It has the following commands:

| Command      | Hotkey | Explanation                                                                                |
|--------------|--------|--------------------------------------------------------------------------------------------|
| User's Guide |        | Opens this user guide                                                                      |
| Support file |        | Creates a <u>support file</u> to help developers identify the source of encountered issues |
| Reset Layout |        | Restores the <u>document panel</u> to a default, empty state.                              |

#### 4.5.1. About

This dialog contains additional information about WeConfig, it is divided into five sections, the about page, the licensing information, the EULA, the synchronized data status, and firmware information.

##### About page

This section indicates the running version of WeConfig.

##### Licensing

This section contains a document that lists the applicable licensing and copyright terms for all Free/Libre Open Source Software, FLOSS, included WeConfig.

##### EULA

This section contains a document detailing the End user license agreement (EULA) that applies to WeConfigs usage.

##### Synchronized data status

This section contains information regarding the current synchronization status with cloud resources such as device icons or OUI databases.

##### Firmware

This section contains information regarding the availability of device firmware versions.

## 4.5.2. Application Settings

**Auto Refresh**

☐ Auto discover units

☐ SNMP Auto Refresh  minutes

**Auto-commit**

Never Touched Always

**Display Language:**

English ▾

**External Editor**

☐ Use External Diffviewer

**Firmware**

Automatic firmware download

Never download ▾

**Firmware Folder**

✓ Apply Restore Default

This menu contains a number of settings that affect the WeConfig application globally, regardless of the current working project. These settings are grouped for convenience into relevant sets where applicable. Any group that has a pending change is highlighted in the interface (as seen with “Syslog Server” in the image above), and changes are applied when the user clicks the Apply button at the bottom right of the interface.

### Auto-refresh

This group deals with options that allow WeConfig to execute certain network tasks in the background, automatically, and contains two options, Auto discover units and SNMP Auto Refresh.

| Option              | Description                                                                                                     |
|---------------------|-----------------------------------------------------------------------------------------------------------------|
| Auto discover units | When checked, WeConfig will automatically attempt to discover devices that let themselves be detected via LLDP. |

| Option            | Description                                                                                                                                                                       |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SNMP Auto Refresh | When checked, WeConfig will automatically, periodically according to the configured value, run SNMP-based scanning on existing devices, and update their information accordingly. |

#### Automatic update policy

This setting group controls how, if at all, Weconfig will update itself after installation. If enabled, when a new version is ready to run, a notification is shown in the user interface, prompting the user to restart with the new version.

The following options are available:

| Option      | Description                                                                                                        |
|-------------|--------------------------------------------------------------------------------------------------------------------|
| Automatic   | Continually check for new versions, download, and automatically update the installation at first opportunity.      |
| On Approval | Continually check for new versions, but let the user decide whether the update should be downloaded and installed. |
| Never       | Never check for any new versions                                                                                   |

#### Info

Automatic and On Approval will require internet connectivity to function properly.

#### Auto-commit

This setting controls the behavior of “Auto-commit”, which controls when/if WeConfig automatically commits changes to the startup configuration on applicable devices without requiring manual intervention. The toggle has the following settings:

| Setting | Description                                                                                                                                                                                                                                                                                                                                                  |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Never   | Auto-commit is never performed, and changes must always be manually committed.                                                                                                                                                                                                                                                                               |
| Touched | Auto-commit is performed after WeConfig has made a configuration change to the device. I.e when the user has performed “Basic Setup” or “VLAN” configuration, the changes are automatically committed.                                                                                                                                                       |
| Always  | Auto-commit is performed as soon as WeConfig detects a change between running and startup configuration on applicable devices. This includes any changes made through “Basic Setup” or “VLAN” configuration, as well as any other configuration changes detected by WeConfig, such as detecting a difference between running and startup at first discovery. |

The default setting is “Touched”.

#### Display Language

This setting allows the user to change the user interface language. Supported languages:

- English (default)
- German

- French
- Chinese
- Spanish

#### External Editor

This setting group contains options related to external software that WeConfig may call. It has two options:

| Option              | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| External editor     | When WeConfig needs to open a text file, it will use the editor specified here. By default, <code>notepad.exe</code> is used.                                                                                                                                                                                                                                                                                                                                                                        |
| External Diffviewer | When the user requests to see a difference between two configuration files, this option, when checked, allows the user to bypass the built in diff viewer functionality, and use custom one instead. Enter the path to the diff viewer application in External Diffviewer. WeConfig will call the application with two command line arguments. The first argument will be a path to the previous revision of the configuration file, and the second argument will be a path to the current revision. |

#### Firmware

This group contains settings related to how WeConfig download and store device firmwares automatically on the user's local hard drive as they become available. By default this is turned off, but may be configured in the following way:

- No downloads at all (for any device type)
- All, as soon as possible (for all device types)
- Customized per device type
  - No downloads at all
  - All
  - Latest (WeOS only - downloads the latest patch version for each minor version)
  - Any firmware newer/published after than a specific date
  - Any firmware with a version higher than a specific version

#### Firmware Folder

This setting group contains options related to how WeConfig picks up user-specific firmware. It contains two options, the first is a path where user specified firmware can be found use during firmware upgrade. It can be anywhere, as long as the directory is accessible by the current user. The second is the Firmware folder depth

#### Firmware Folder Depth

By default, WeConfig will only find the files found in the specified firmware folder. If you sort your firmwares in a directory structure, then increase the folder depth to let WeConfig find files in subfolders. A level of 1 is the firmware folder only, a level of 2 is the firmware folder, and all direct subfolders. A maximum of 10 levels is supported.

#### Firmware Upgrade

This setting group contains options related to how WeConfig executes firmware upgrade. WeOS firmware packages are typically delivered as one unit, and contains both firmware and bootloader software. WeConfig will upgrade the bootloader as necessary, during the firmware

upgrade process. Some advanced scenarios require bootloader upgrades only without upgrading the firmware. By enabling this option, it is possible to perform bootloader upgrades only in the firmware upgrade process.

### General Log

This setting group contains options related to the general log panel, which may be enabled by the checkbox at the top of the group. This panel is mainly for use by developers and power users, but is generally not available. The second option herein is a specifier for the length of the general log that will be kept and displayed.

### Log

WeConfig logs its activity to log files on the harddrive (can be found in %USERPROFILE%\AppData\Local\Westermo\WeConfig\Logs on Windows and ~/.local/share/Westermo/WeConfig/Logs on Linux) and as application telemetry, if enabled via the checkbox in this group. The amount of information being logged there is determined by this slider.

The following options are available:

- Nothing
- Errors
- Errors and Warnings
- Errors, Warnings and Information (Default)
- Errors, Warnings, Information and Debug.

It is suggested to not change this setting from it's default value unless directed to do so by Westermo support.

### Network concurrency limit

This setting allows the user to specify how many concurrent network operations WeConfig may execute at any given time. Increasing this value may speed up network tasks, but may also lead to network congestion and packet loss on slower networks. Decreasing this value may improve stability on slower networks, but will also slow down network tasks. The default value is 32 concurrent operations.

### Ping settings

This setting group contains options related to how WeConfig performs ICMP ping operations. It contains the following options:

| Option                       | Description                                                                                                                                | Default |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|---------|
| Timeout                      | The amount of time, in milliseconds, to wait for a ping reply before considering the ping failed.                                          | 200 ms  |
| Period                       | The amount of time, in seconds, WeConfig will wait between each background ping attempt.                                                   | 30 s    |
| Period (After status change) | The amount of time, in seconds, WeConfig will wait between each background ping attempt after a device's ping response status has changed. | 5 s     |

### Play sounds

When enabled, WeConfig will play sounds to grab the user's attention.

## Scheduled backup

These configuration options allows you to set up an automatic, periodic backup of all supported devices. You can configure the start time where the initial backup may be taken, as well as the number of days between backups.



### Note

WeConfig must be running for the backups to occur.

## SNMP Read Community

This freeform textbox contains the fallback SNMP read community that will be used towards devices where no specific SNMP settings have been configured in [device access](#).

## SSH Client and Parameters

When the user wants to access a device using an SSH client, WeConfig will use the client specified here. By default, WeConfig will use the SSH client built into the OS. To use another, select Custom, and enter the path to the executable.

When using the custom option, WeConfig must know how to specify connection options to the custom application. This is done in the SSH Parameters entry. Suppose a custom client is used like this to connect to a device: `my-ssh.exe user@ip-address`, then WeConfig must know how to replace user and ip-address. This is done by using variables. Variables are replaced by WeConfig with the actual values. The supported variables in WeConfig are:

| Variable | Description                  |
|----------|------------------------------|
| %a       | The IP Address of the device |
| %u       | The user name                |

In order to support the example client above (`my-ssh.exe user@ip-address`), the field SSH Parameters entry should read `%u@%a`.

## Syslog Server

This setting group contains options related to WeConfigs interactions with the Syslog protocol. When enabled, WeConfig will act as a syslog server that can receive syslog encoded messages from the devices. WeConfig will keep a number of syslog messages up to the number of configured lines per device.

## Topology Display Settings

This setting group contains options related to how the [topology](#) panel displays information. It contains four different options:

### Auto Layout Algorithm

When the [topology view](#) is requested to auto layout devices and connections in the topology view, it will use the algorithm selected here. Supported algorithms:

| Algorithm                 | Description                                                                                                      |
|---------------------------|------------------------------------------------------------------------------------------------------------------|
| Adaptive Layout (default) | A stress-majorization layout solver that takes topology information such as ping distance and rings into account |

| Algorithm | Description      |
|-----------|------------------|
| ISOM      | Isometric layout |
| Tree      | Tree layout      |



#### Note

Using Auto layout functionality with the adaptive layout algorithm on very large networks (> 1000 devices) may take significant time.

#### Show Status In Topology

When enabled, the topology view will display current operation status in the device icons in the topology view.

#### 4.5.3. Portable Installations

Located under the Edit menu, this command causes WeConfig to generate a portable replica of itself to the targeted file system, such as the local computer, or a USB drive. Once the portable replica has been generated in this way, it can be started as normal, or copied to a different destination (such as a different computer, in the case of a USB drive) and started there.

The primary use case of this functionality is to create WeConfig installations suitable for air-gapped systems.

Portable installations do not offer short cut icons in the start menu - one must either start the application by double clicking the executable WeConfig.Application.exe or create shortcuts manually.

#### Limitations

Certain functionalities of WeConfig are limited in portable mode due to its air-gapped nature, of particular note are the following:

- Automatic or Manual firmware downloads should not be expected to work
- Cloud firmware lists will not be up-to-date.
- Device definitions and icons will not be up-to-date.
- Licenses will not be automatically renewed.

## 4.6. Components

### 4.6.1. CIDR Address box



The CIDR box is used in certain places around WeConfig, and is an input field specifically designed to make it quick to enter CIDR addresses. It will also indicate two colors, the lower is the color of the /32 IP address (from the IPv4 Address Box) and the upper is the color of the subnet specified by the CIDR notation.

This is a composite component that combines an IPv4 Address box with a subnet mask selector.

#### 4.6.2. IPv4 Address box



The IPv4 box is used in certain places around WeConfig, and is an input field specifically designed to make it quick to enter IPv4 addresses. It will also indicate a color, which corresponds to the color the corresponding /32 subnet would be rendered with in the topology and diagnostics.

It has a certain numbers of behaviors that are interesting to note:

- It will automatically jump forwards and backwards if it detects that the user has completed or erased the current value in a given segment. For example, typing 192 into the first box would automatically shift focus to the second box, but writing 19 would not, since another character would still be valid in the first box. As such, typing the following keys 12343541 would be sufficient to enter the value 123.43.54.1
- Pressing . , or Enter will move focus to the next box.
- Pressing backspace on an empty box will move you to the previous box.
- Pressing Ctrl+C to copy will copy the entire box value in IPv4 format.
- Pressing Ctrl+V with a string in IPv4 format will populate the box.
- Leading zeros are allowed but will be removed. So 198.018.001.000 becomes 198.18.1.0

### 4.6.3. Log box

Log

 Copy

 Clear

11:14:20: Using ping sweep...  
11:14:20: Scanning started...  
11:14:20: Sending ping request to 198.18.1.12..198.18.1.12  
11:14:20: Ping response from 198.18.1.12 in 2,5 ms  
11:14:20: Starting SNMP-scanning of 198.18.1.12...  
11:14:20: Completed SNMP-scanning of Device: 198.18.1.12 (Lynx-3510-E-F2G-P8G-LV).  
11:14:20: Starting model-specific scanning of Device: 198.18.1.12 (Lynx-3510-E-F2G-P8G-LV)...  
11:14:21: Completed model-specific scanning of Device: 198.18.1.12 (Lynx-3510-E-F2G-P8G-LV).  
11:14:21: Device: 198.18.1.12 (Lynx-3510-E-F2G-P8G-LV): Gathering device connection information...  
11:14:21: Gathering device connection information...  
11:14:21: Device: 198.18.1.31 (MRD-405): Gathering device connection information...  
11:14:21: Device: 198.18.1.13 (Viper-208-T8G): Gathering device connection information...  
11:14:21: Device: 198.18.1.15 (Lynx-3510-E-F2G-P8G-LV): Gathering device connection information...  
11:14:21: Device: 198.18.1.3 (Viper-212-T3G): Gathering device connection information...  
11:14:21: Device: 198.18.1.12 (Lynx-3510-E-F2G-P8G-LV): Gathering device connection information...  
11:14:21: Device: 198.18.1.10 (RedFox-5728-E-F4G-T24G-HV): Gathering device connection information...  
11:14:21: Device: 198.18.1.1 (RedFox-5528-T28G-LV): Gathering device connection information...  
11:14:21: Device: 198.18.1.11 (RFI-211-T3G): Gathering device connection information...  
11:14:21: Device: 198.18.1.2 (RFI-219-T3G): Gathering device connection information...  
11:14:21: Device: 198.18.1.20 (RT-320): Gathering device connection information...  
11:14:25: Device: 198.18.1.14 (Lynx-5512-E-F4G-T8G-LV): Gathering device connection information...  
11:14:25: Device: 198.18.1.5 (L208-F2G-S2): Gathering device connection information...  
11:14:25: Device: 198.18.1.6 (DDW-142): Gathering device connection information...  
11:14:25: Device: 198.18.1.16 (Viper-208-TBN): Gathering device connection information...  
11:14:25: Device: 198.18.1.32 (BRD-355): Gathering device connection information...  
11:14:25: Some devices reported back with an address from a subnet which the selected network card is not a member of.  
  
Please review the issue list for more information.  
11:14:25: Scanning complete.


The log box is a component used in WeConfig to display logs and messages. It is designed to show real-time updates and historical logs, making it easier for users to monitor network operations that WeConfig undertakes.

Each log box also comes with two buttons, visible when hovering the box:

- Copy logs: You may copy the contents of the log box to the clipboard by using the leftmost of the buttons in the top right.
- Clear logs: You may clear the log box via the 'eraser' icon in the top right of the log box.

## 4.7. Notifications


WeConfig has a notification system to alert to user of items that requires the users attention such as software updates. All current notifications are available in the notifications flyout. Every notification can be deleted and most have actions specific to that notification available.

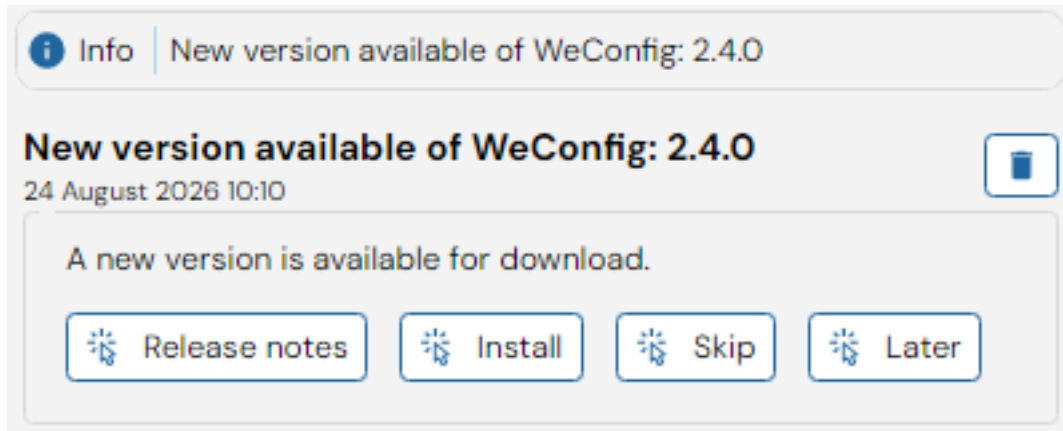

This menu can be accessed through the “Show/hide notifications” quick action in the title bar. The quick action button also indicates the current notification count and highest severity.

|                                                                                     | Severity        | Color  |
|-------------------------------------------------------------------------------------|-----------------|--------|
|   | No notification | None   |
|  | Information     | Blue   |
|  | Warning         | Yellow |
|  | Error           | Red    |

To notify the user that a new notification is available a toast appears in the bottom right corner. Simply clicking on this toast dismisses the toast. The notification itself will still be available through the notifications quick action.

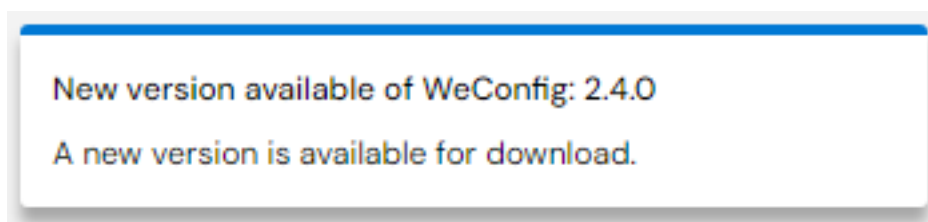

## 5. Algorithms

### 5.1. Recursive Discovery

Recursive discovery is an algorithm for discovery used by WeConfig that is fundamentally relatively simple. Its general workings are described as follows:

- Given an initial set of devices  $D$
- For each device  $d$  in  $D$ 
  - Attempt to acquire the LLDP, ARP and Route table from  $d$  and collect all addresses present into a list  $N$
  - For each address  $n$  in  $N$ 
    - If the address does not belong to a known device, attempt to scan that address to produce a new device  $m$ . If  $m$  was successfully created, add  $m$  to  $D$  and continue iterating.

This algorithm, though simple, will allow WeConfig to reach out across different subnets and recursively discover the network topology for as long as it can comprehend the devices it encounters, and has permission to access them.

Example:

Consider an Discovery sequence with recursive discovery enabled run on `192.168.1.1/32` which so happens to be a WeOS device in this example.

Upon successfully scanning `192.168.1.1`, WeConfig's current picture of the network might look like this:

Step 1



192.168.1.1

WeConfig will then inspect its LLDP table (which, for this example, will yield the address `192.168.1.2` as connected on the port `Eth 2`), its ARP table (which will produce `192.168.1.2` and `192.168.1.3`) and its route table (which will indicate it has routes going via the gateway `192.168.1.4`).


These addresses will then be collected into a distinct list:

- `192.168.1.2`
- `192.168.1.3`
- `192.168.1.4`

With the duplicate entry of `192.168.1.2` being removed.

WeConfig will then move to each of these devices and scan them, finding all of them to be another WeOS device, updating the network to:

## Step 2

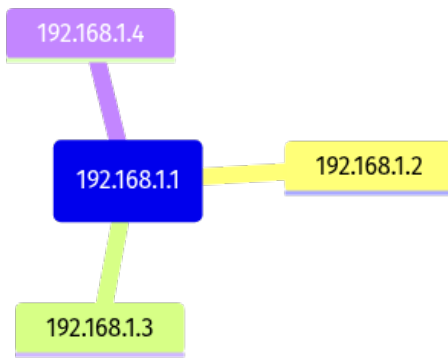


Where the rounded boxes indicate devices whose tables have been inspected.

A similar inspection of each of the new devices various tables yields the following addresses:

- 192.168.1.1
- 192.168.1.3
- 192.168.1.4
- 192.168.1.5 (From 192.168.1.2)
- 192.168.1.6 (From 192.168.1.2)
- 192.168.1.7 (From 192.168.1.3)
- 192.168.1.8 (From 192.168.1.4)


Since the three first addresses have already been found elsewhere, they will be ignored, the new ones will be scanned, and their tables checked, resulting in the network:

## Step 3

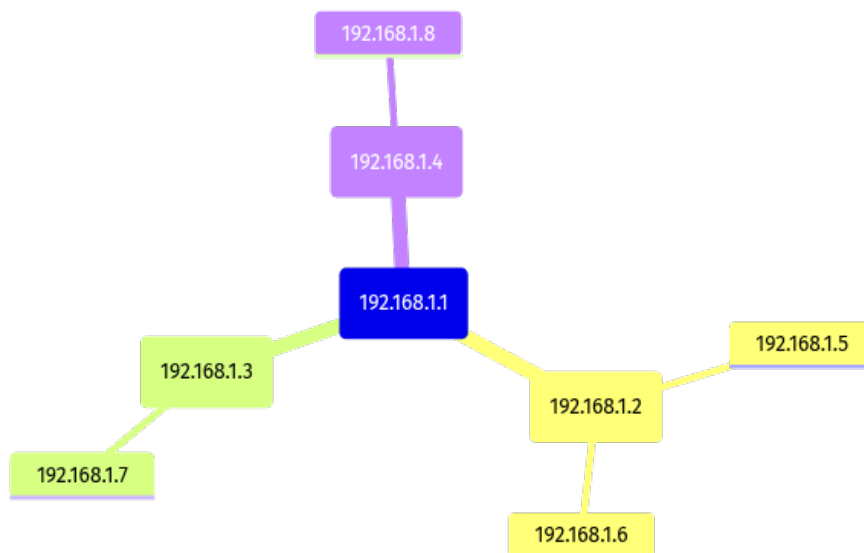


This procedure will then repeat until no new devices are found, with the operation hypothetically looking something like this.

## Step 4

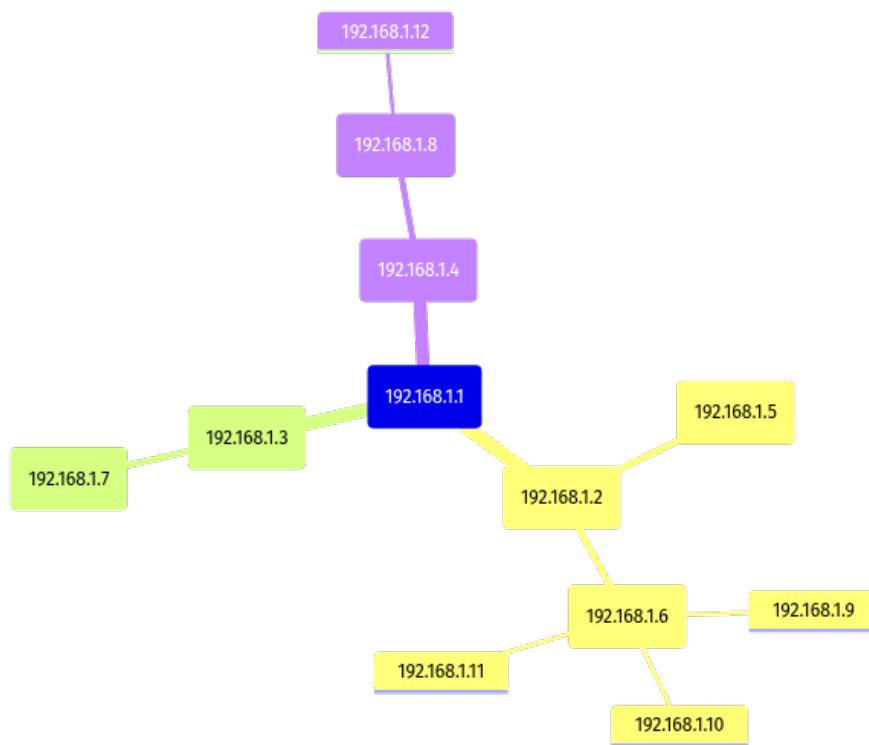


Step 5

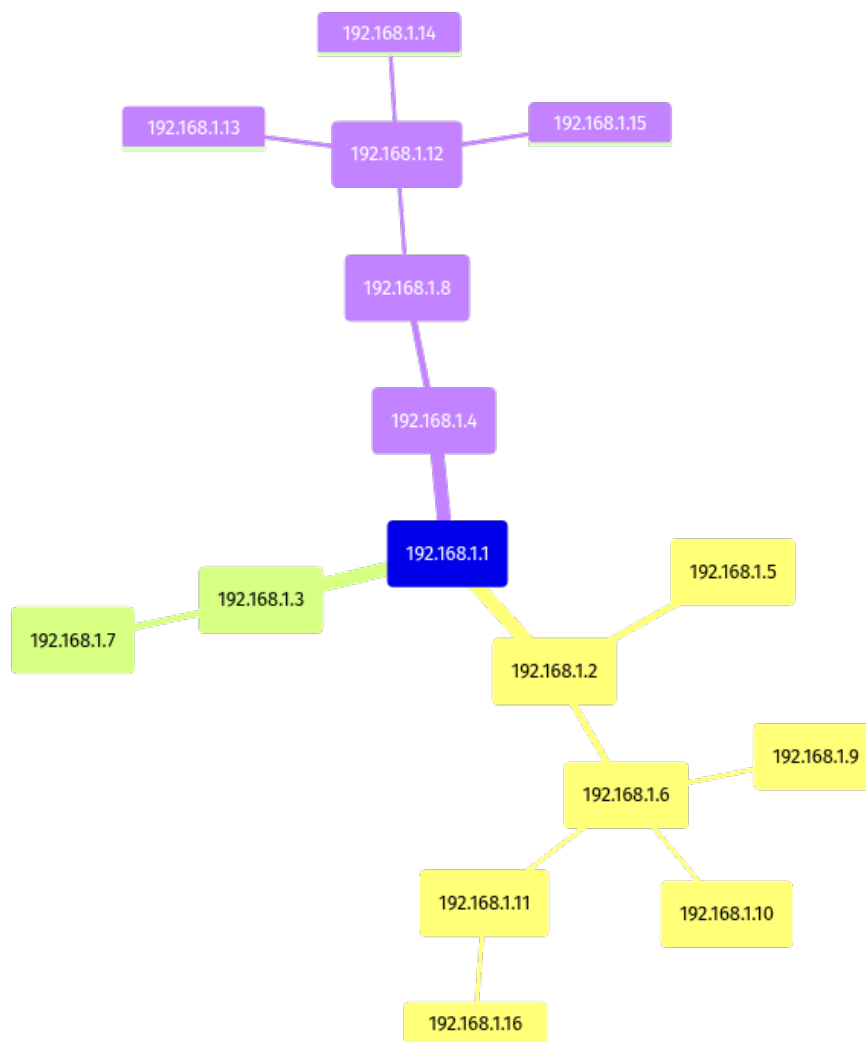

And so on.

## 5.2. Network Order

Network order is a general term for an order-of-command-execution schema which aims to safely parallelize commands across a network in order to optimize execution time without risking execution failure. It works by traversing the network graph from the outside in, given a known position of the operating PC in the network. Consider the following network:

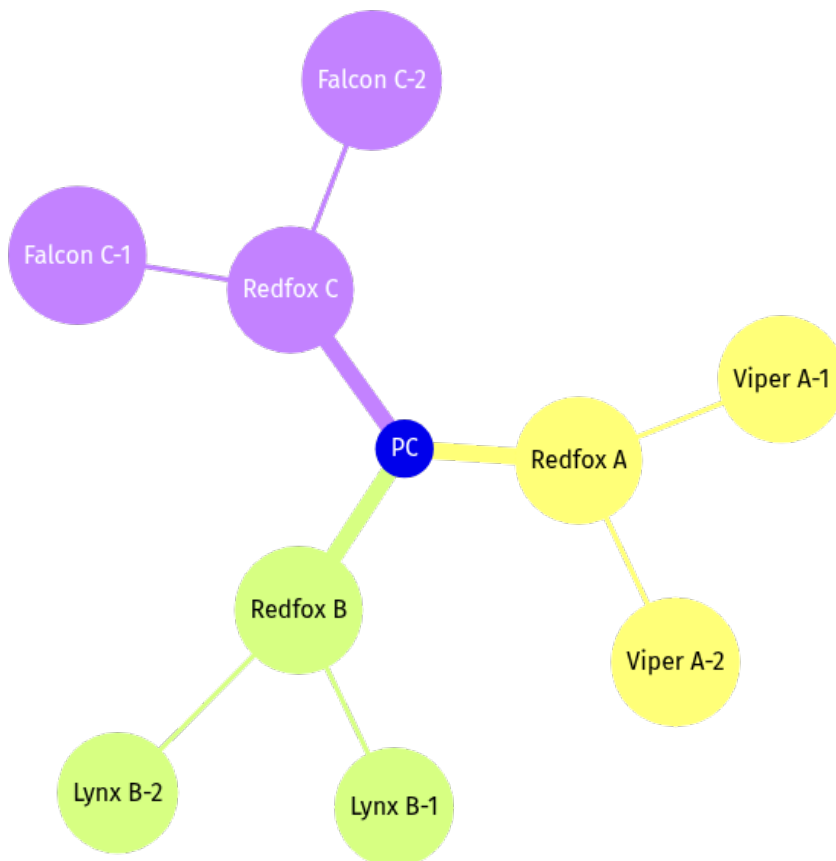

An operation executing in network order would be able to execute all command in two parallel batches, the first batch being the set:


- Viper A-1
- Viper A-2
- Lynx B-1
- Lynx B-2
- Falcon C-1
- Falcon C-2

As they are all link-wise equidistant from the PC, the second batch being the set:

- Redfox A
- Redfox B
- Redfox C

Which then completes the network. This allows a safe parallelization across 9 devices in the time it'd take for (in an ideal world where all devices execute at the same time) 2 devices to execute the command.

Of course, in less parallel networks, such as the one below:

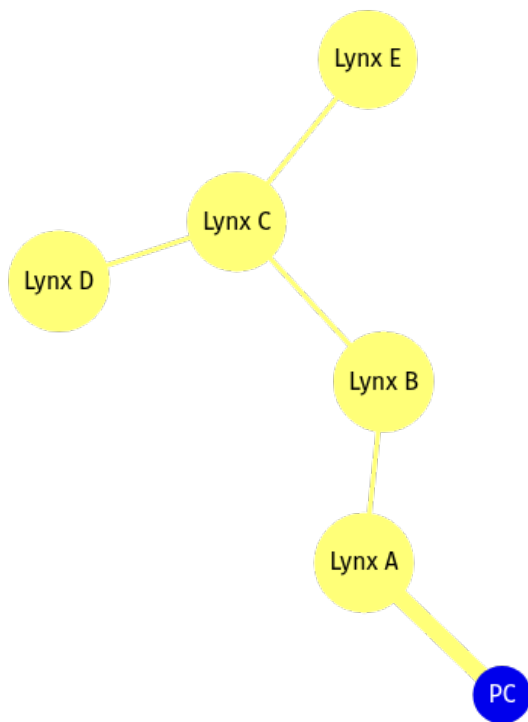

The benefit would be significantly reduced, since only Lynx E and Lynx D could be executed in parallel. But it is regardless never a performance loss over just executing the commands one-by-one in outside-in order.

